



Instruction Manual

TIME DELTA-C ULTRASONIC FLOWMETER FLOW TRANSMITTER

TYPE: FSV-3

Introduction

We thank you very much for purchasing Fuji Electric's ultrasonic flow meter.
The instruction manual concerns the installation, operation, checkup and maintenance of the Flow transmitter (FSV) of ultrasonic flow meter. Read it carefully before operation.

First read this instruction manual carefully until an adequate understanding is acquired, and then proceed to installation, operation and maintenance of the flow meter. Improper handling may result in an accident or a failure.

The specifications of this flow meter are subject to change without prior notice for improvement of the product.

Do not attempt to modify the flow meter without permission. Fuji will not bear any responsibility for a trouble caused by such a modification. If it becomes necessary to modify the flow meter, contact our office in advance.

This instruction manual should always be kept on hand by the operator.

After reading the manual, be sure to store it at a place easier to access.

This instruction manual should be delivered to the end user.

If the instruction manual has been lost, request another one (printed one with charge) to our local business office.

Manufacturer : Fuji Electric Co., Ltd.
Type : Described in the nameplate put on the main body
Date of manufacture : Described in the nameplate put on the main body
Product nationality : Japan

Note

Reproduction of any part or the whole of this manual without permission is strictly prohibited by laws.
Contents of the manual are subject to change without prior notice.

©Fuji Electric Co., Ltd. 2024

Issued in October, 2024

Before Using the Product

1. Scope of product application

This product must be used under the following conditions: (1) Ensure that the use of the product creates no risk of a serious accident even if a product failure or malfunction occurs, and (2) in case of product failure or malfunction, ensure that external safety measures are in place, such as using a redundant design, malfunction preventive design, fail safe design, and foolproof design.

Also, be sure to use the product under the conditions and environment described in this Instruction Manual. Contact our company before using the product for the following applications.

Radiation-related facilities, systems related to billing and settlement, or other usages which may have large impact on lives, bodies, property, or other rights and interests.

2. Operating and environmental conditions

For information on operating and environmental conditions, refer to “CAUTION ON INSTALLATION LOCATION” on page viii and “3. INSTALLATION” on page 6.

3. Precautions and prohibitions

For information on precautions and prohibitions, refer to “SAFETY PRECAUTION” on pages vi to vii.

4. Period and scope of warranty

4-1. Period of warranty

- (1) The warranty period of this product including accessories is one year.
- (2) The warranty period for the parts repaired by our service providers is six months after the completion of repair.

4-2. Scope of warranty

- (1) If any failure attributable to our company occurs in the period of warranty, we will provide the product after repairing or replacing the faulty part for free of charge at the place of purchase or delivery. The warranty does not apply in the following cases.
 - (a) When the failure occurred as a result of usage that impacts the life of the product as described in the product catalog, instruction manual, user manual etc. This includes usage under improper conditions, environment, handling, and excessive use.
 - (b) When the failure is attributable to devices or products not manufactured by our company.
 - (c) When the product is improperly used or is modified or repaired by someone other than our company.
 - (d) When the failure occurred due to improper maintenance or replacement of the consumable parts listed in the instruction manual, catalog, etc.
 - (e) When damages were incurred during transport or due to dropping after purchase.
 - (f) When the failure occurred due to external factors beyond the control of our company such as natural disasters, fires, and abnormal voltage caused by earthquakes, lightning, flooding, etc.
- (2) Regardless of the time period of the occurrence, our company will not be liable for damage caused by factors we are not responsible for, opportunity loss of the purchaser caused by failure of our product, passive damages, damage caused due to special situations regardless of whether it was foreseeable or not, and secondary damage, accident compensation, damage to products that were not manufactured by us, and compensation toward other business operations.

5. Failure diagnosis

Regardless of the time period of the warranty, if any failure occurs, the purchaser shall perform a primary failure diagnosis, as a general rule.

However, at the purchaser's request, our company or one of our service providers can provide a diagnosis service for a fee. In such a case, the purchaser shall be charged for the service.


6. Product service life (life expectancy)

The service life of this product excluding limited-life parts and consumable parts is 10 years under general operating conditions (annual average ambient temperature of 30°C).

The service life may be shortened depending on operating conditions and the system environment. To ensure the service life, it is important to perform planned maintenance of the product including limited-life parts and consumable parts.

7. Maintenance plans

Maintenance can be divided into "preventive maintenance" and "corrective maintenance." Preventive maintenance can further be classified into "daily inspection" and "periodic inspection." Preventive maintenance is achieved through systematic implementation of "daily inspection" and "periodic inspection."

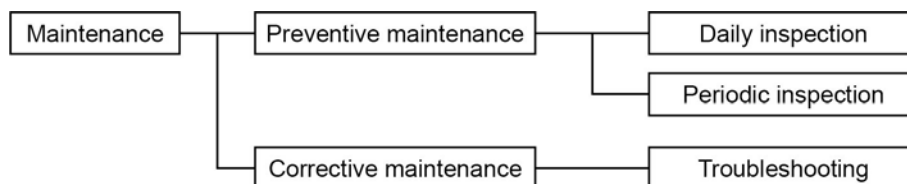

(1) Daily inspection

Be sure to perform daily inspection prior to operation to check for any problem in daily operation. For information on daily inspections, refer to "6. MAINTENANCE AND CHECKUP."

(2) Periodic inspection

Periodic inspection is the replacing of limited-life parts before their service lives are over in order to prevent failure. Be sure to perform the inspection once every 6 months to 12 months. If you are using the product in a harsh environment, we recommend that you shorten the inspection interval. For information on periodic inspections, refer to "6. MAINTENANCE AND CHECKUP."

(3) Corrective maintenance

Corrective maintenance is a measure to be taken after trouble has occurred. Refer to "6.5 ERROR AND REMEDY." If the measures mentioned in the Instruction Manual do not solve the problem, please contact one of our sales offices or service centers.

8. Limited-life parts and consumable parts

This product contains the following limited-life parts and consumable parts which may affect the service life (life expectancy) of the product itself.

(1) Aluminum electrolytic capacitor

- Design life: 10 years under general operating conditions (at an average annual ambient temperature of 30°C).
- Impact of aging: Deterioration of power quality. It can result in failures.
- Factors that impact life expectancy: Temperature. The life expectancy is shortened by half when the temperature rises by 10°C. (Arrhenius' law)
- Replacement: Estimate the life expectancy according to your operating environment, and have the capacitor replaced or overhauled as necessary, at least once every 10 years.

Do not use the capacitor beyond its life expectancy. Otherwise, electrolyte leakage or depletion could cause odor, smoke, or fire. Please contact one of our sales offices or service centers when an overhaul is required.

(2) LCD

- Design life: Approximately five years when used continuously.
- Impact of aging: The LCD may develop some kind of problem, or the backlight may fail to work correctly.
- Factors that impact life expectancy: Temperature. The life expectancy is shortened by half when the temperature rises by 10°C. (Arrhenius' law)
- Replacement: Estimate the life expectancy according to your operating environment, and replace it as necessary.

9. Spare parts and accessories

For information on spare parts and accessories, refer to "1.1. Checking delivered items" and the data sheet.

10. Period for repair and provision of spare parts after product discontinuation (maintenance period)

With regard to discontinued models (products), repair will be offered for a period of five years from the date of discontinuation. Also, most spare parts used for repair will be provided for five years from the date of discontinuation. However, since the life cycle of electronic components is short, it is expected that there may be difficulty in procurement and production. Therefore, there may be cases in which it is difficult to carry out repairs and supply spare parts during the period.

For more information, please contact one of our sales offices or service centers.

11. RoHS compliance of the product when repaired or calibrated

We cannot assure the RoHS compliance of the product if it is returned for repair or calibration and delivered again. This is because we cannot check whether or not the product returned has been contaminated by hazardous substances restricted by the RoHS directive. If you want the product to be repaired in the RoHS compliant area in our factory, provide us with the certificate of RoHS compliance shown on the next page. If you return the product from an EU member state to us for repair, provide us with a document that indicates that the purpose of export is repair.

Date:

To: Fuji Electric Co., Ltd.

Company name

Department

Name

Seal

Certificate of Conformance with RoHS Directive

This certificate certifies that flowmeters returned to your company for the purpose of repair or calibration shall not be contaminated with substances of environmental concern applicable to RoHS regulations (EU Directive 2011/65/EU + (EU)2015/863) listed in (1) below which exceed standard values, and pledges that these flowmeters shall not adversely affect your company's repair equipment or instrumental error calibration equipment.



(1) Applicable substances of environmental concern


Substance name	Max. tolerance
Cadmium	100 ppm
Lead	1000 ppm
Mercury	1000 ppm
Hexavalent chromium	1000 ppm
Polybrominated biphenyl (PBB)	1000 ppm
Polybrominated diphenyl ethers (PBDE)	1000 ppm
Di-2-ethylhexyl phthalate (DEHP)	1000 ppm
Butyl benzyl phthalate (BBP)	1000 ppm
Dibutyl phthalate (DBP)	1000 ppm
Diisobutyl phthalate (DIBP)	1000 ppm



SAFETY PRECAUTIONS

Before using this product, read the following safety precautions and use the product correctly.

- The following items are important for safe operation and must be fully observed. These safety precautions are ranked in 2 levels; "DANGER" and "CAUTION".

Warning/Symbol	Meaning
 DANGER	Incorrect handling of the device may result in death or serious injury.
 CAUTION	Incorrect handling may lead to a risk of medium or light injury, or to a risk of physical damage.

- The items noted under "  **CAUTION** " may also result in serious trouble depending on circumstances. All the items must be fully observed.

Caution on mounting and piping	
 DANGER	<ul style="list-style-type: none"> ● This unit is not explosion-proof type. Do not use it in a place with explosive gases. Otherwise, it may result in serious accidents such as explosion, fire, etc. ● The unit should be used in accordance with requirements of "Instruction Manual". Otherwise, it may cause damage of the protective performance of the device, electric shocks, fire of the unit.
 CAUTION	<ul style="list-style-type: none"> ● The unit should be installed in a place conforming to the installation requirements noted in this instruction manual. Otherwise, it may cause damage of the protective performance of the device, electric shocks, fire or malfunction of the unit. ● Install the flow meter according to the following steps to prevent it from damage, and to avoid error or malfunction. ● During installation, make sure that the inside of the unit is free from cable chips and other foreign objects. Otherwise, it may cause fire, failure or malfunction. ● The items under "Caution on Installation" noted in the manual must be fully observed. Careless installation may result in trouble or malfunction of the unit.

Cautions in wiring



CAUTION

- When performing wiring termination to prevent output trouble caused by moisture, dew condensation or water leak, follow “Section 3.3. Flow transmitter wiring” described in this manual.
- Before performing the wiring work, be sure to turn OFF the main power. Otherwise, it may cause electric shock.
- Do not perform wiring work outdoors in rainy days to prevent insulation deterioration and dew condensation. Otherwise, it may result in trouble, malfunction, etc.
- Be sure to connect a power source of correct rating. Use of power source out of rating may cause fire.
- The unit must be grounded as specified. Otherwise, it may cause electric shocks, malfunction, etc.
- The signal cable and output signal cable should be wired as far away as possible from high-voltage lines to prevent entry of noise signals as it will cause malfunction of the unit.
- To prevent malfunction of the unit, the output signal cable and power cable should be wired using separate conduits.
- Be careful not to touch electronic components other than the terminal block and the fuse holder.
Electronic components get hot during/after operation and cause skin burns.

Caution on maintenance and inspection



CAUTION

- The unit should be inspected every day to always obtain good results of measurements.
- When measuring the insulation resistance between the power/output terminal and the case, follow “Section 6.2.3. How to measure the insulation resistance” described in this manual.
- If the fuse is blown, detect and eliminate the cause, and then replace the fuse with a spare. If there are no spares, replace the fuse with the one specified in this manual “Section 6.3. How to replace the fuse ” (that must be aquired separately). Use of a fuse other than specified or its short-circuit may cause an electric shock or fire. The fuse should be replaced according to “Section 6.3. How to replace the fuse” described in this manual.

CAUTION ON INSTALLATION LOCATION



CAUTION

- (1) A place where ambient temperature and humidity are -20 to +55°C and 95% RH or less for flow transmitter (FSV).
- (2) Indoor specifications (An indoor place not exposed to direct sunlight or water), outdoor specifications (An outdoor place not exposed to the weather)
- (3) A place that provides enough space for periodic inspection and wiring work.
- (4) A place not subjected to radiated heat from a heating furnace, etc.
- (5) A place not subjected to corrosive atmosphere.
- (6) A place not to be submersed.
- (7) A place isolated from excessive vibration, dust, dirt and moisture.
- (8) A place away from electrical devices such as motor and transformer, etc. which generate electromagnetic induction noise, electrostatic noise, etc.
- (9) A place not subjected to excessive fluid pulsation such as pump discharge side.
- (10) A place that provides enough place for the length of the straight pipe.
- (11) Altitude: up to 2000m
- (12) Installation category: II
- (13) Pollution degree: 2, (Pollution degree: 3 only for outdoor use type.)

Contents

Introduction	i	4.6.2. Piping parameter setting method	26
Before Using the Product	ii	4.7. Zero Adjustment	29
SAFETY PRECAUTIONS	vi	4.8. Setting of unit	30
CAUTION ON INSTALLATION LOCATION	viii	4.8.1. How to set the unit system	30
1. PRODUCT OUTLINE	1	4.8.2. How to set the flow rate unit	31
1.1. Checking delivered items	1	4.8.3. How to set the total unit	32
1.2. Check on type and specifications	2	4.9. Output Setting	33
1.3. NAME AND FUNCTION OF EACH PART	3	4.9.1. Setting of flow rate range	33
1.3.1. Flow transmitter : FSV...S (IP66)	3	4.9.1.1. Setting of flow rate range (single range)	33
1.3.2. Flow transmitter : FSV...H (IP67)	4	4.9.1.2. Setting of analog output at error (Burnout)	35
2. INSTALLATION AND BEFORE START OF OPERATION OF THE FLOW TRANSMITTER	5	4.9.1.3. Output limit	36
2.1. Outline of installation procedure	5	4.9.2. Setting the total(actual)	37
3. INSTALLATION	6	4.9.2.1. Setting the total pulse (total rate, pulse width)	37
3.1. Installation location of flow transmitter	6	4.9.2.2. Setting the preset value	39
3.2. Installation of flow transmitter	7	4.9.2.3. TOTAL mode (total reset, start, stop)	40
3.2.1. Wall mounting (Flow transmitter : FSV...S (IP66))	7	4.9.2.4. Determining how to dispose of total at error (BURNOUT)	41
3.2.2. 2 inch pipe stand mounting (Flow transmitter : FSV...S (IP66))	7	4.9.3. Setting the DO output	42
3.2.3. Wall mounting (Flow transmitter : FSV...H (IP67))	8	4.9.3.1. How to validate the total pulse output	42
3.2.4. 2 inch pipe stand mounting (Flow transmitter : FSV...H (IP67))	8	4.9.4. Setting the LCD indication	44
3.3. Flow transmitter wiring	9	4.9.5. Setting the damping	45
3.3.1. Cautions in wiring	9	4.9.6. Setting the low flow rate cutting	46
3.3.2. Applicable wires	9	4.10. Application operation of parameter	47
3.3.3. Treatment of wiring port	9	4.10.1. Setting automatic 2 ranges	47
3.3.4. Wiring to each terminal	10	4.10.2. Setting the Bi-directional range	49
3.3.4.1. Flow transmitter : FSV...S (IP66)	10	4.10.3. Setting the Bi-directional auto 2 range	51
3.3.4.2. Flow transmitter : FSV...H (IP67)	11	4.10.4. Rate limit	53
3.3.5. How to connect to terminal block.	12	4.10.5. Setting the DO output	55
3.3.5.1. Cable treatment	12	4.10.5.1. How to validate outputting the FULL SCALE 2	55
3.3.5.2. How to connect to power supply/terminal block for signal.	12	4.10.5.2. How to validate the alarm output	56
3.3.5.3. How to connect to communication terminal block.	13	4.10.5.3. Setting the flow switch	57
4. Parameter	14	4.10.5.4. How to validate the total switch	59
4.1. Description of display/setting unit	14	4.10.5.5. How to validate the range over output and pulse range over output	60
4.1.1. Flow transmitter : FSV...S (IP66) display/setting unit	14	4.10.5.6. How to validate the output at the minus direction action	61
4.1.2. Flow transmitter : FSV...H (IP67) display/setting unit	14	4.10.6. How to compensate the measurement value	62
4.1.3. Description of display/setting unit	15	4.10.7. Setting of the operation mode	63
4.2. Composition of key operation	16	4.11. MAINTENANCE MODE	64
4.3. Parameter initial value list	21	4.11.1. How to calibrate the analog output	64
4.4. Parameter protection	23	4.11.2. How to set the constant current output	65
4.4.1. Protection ON/OFF	23	4.11.3. How to check the action of total pulses	66
4.5. Display language	24	4.11.4. How to check the status output	67
4.5.1. How to select the language	24	4.11.5. How to validate the test mode (simulated flow rate output)	68
4.6. Checking and Setting of Piping Specifications/Detector	25	4.11.6. How to validate a serial transmission (RS- 485)	70
4.6.1. Checking piping parameter	25	4.11.7. How to set the ID No.	72
		4.11.8. How to confirm the software version	72
		4.11.9. Initializing setting parameters	73
		4.11.10. LCD backlight setting	74


4.11.11. How to set the detailed setting	75
5. Mounting of detector.....	77
5.1. Detector mounting procedure.....	77
5.1.1. Mounting of detector.....	78
5.1.2. Image figure of mounting dimension	78
5.2. Selection of mounting method.....	79
5.3. Mounting method on the pipe.....	79
6. MAINTENANCE AND CHECKUP.....	80
6.1. Daily Check	80
6.2. Periodic Inspection	80
6.2.1. Checking zero point	80
6.2.2. Reapplying grease	80
6.2.3. How to measure the insulation resistance	81
6.2.3.1. Flow transmitter : FSV...S (IP66).....	81
6.2.3.2. Flow transmitter : FSV...H (IP67).....	82
6.3. How to replace the fuse	83
6.3.1. Flow transmitter : FSV...S (IP66)	83
6.3.2. Flow transmitter : FSV...H (IP67)	84
6.4. How to replace the LCD.....	85
6.4.1. Flow transmitter : FSV...S (IP66)	85
6.4.2. Flow transmitter : FSV...H (IP67)	86
6.5. ERROR AND REMEDY	87
6.5.1. Display error	87
6.5.1.1. Checking the LCD/LED	87
6.5.1.2. Checking the LED lit in red	88
6.5.1.3. Checking the RAS information	89
6.5.2. Displaying the data in maintenance mode	90
6.5.3. Keying is abnormal	91
6.5.4. Error in measured value	92
6.5.5. Error in analog output	94
6.5.6. Checking received waveforms	95
6.5.6.1. How to connect the oscilloscope.....	95
6.5.6.2. Checking sending/receiving	96
6.5.6.3. Safety Checks after repairment	98
6.5.7. Remedying a hardware fault	98
7. Appendix.....	99
7.1. Specifications	99
7.2. OUTLINE DIAGRAM.....	102
7.3. ORDERING INFORMATION.....	103
7.4. Piping data	104

1. PRODUCT OUTLINE


This flowmeter is a clamp-on ultrasonic flowmeter based on propagation time difference method as the measurement principle. It is designed to be compact, lightweight and easy to use, and is suitable for embedding in mechanical devices. It is a cost-effective flowmeter that is capable to be applied to piping diameters from 13 mm to 6000 mm depending on the use of different sensors.

Configuration

(1) Single reflection (V method)

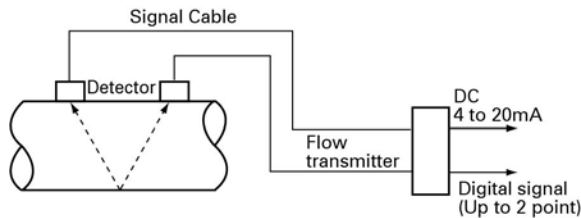

(2) Single reflection (Z method)

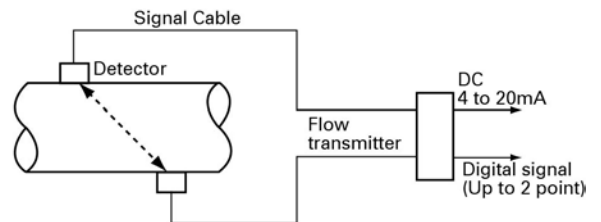


1.1. Checking delivered items

After opening the package, check if all following parts are present.
Note that the delivered parts vary according to the model type.

Flow transmitter (FSV)

- Flow transmitter main unit1 set
- Waterproof gland (Built into the main unit)1 set
- Wall mount frame (Built into the main unit).....1 set
- Pipe mounting bracket (option)1 set
- (U bolt, support fixture, butterfly nut 2 pieces, spring washer 2 pieces, plain washer 2 pieces)
- FSV-3 instruction manual (This manual)1 book

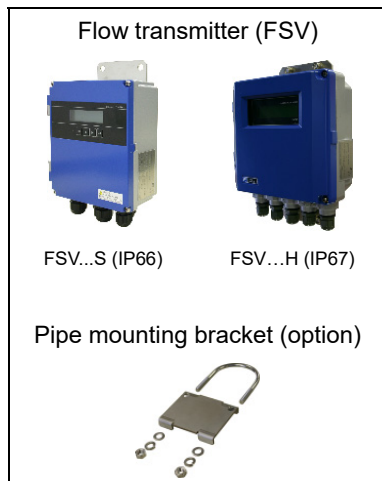

Required items for measurement

- Detector (FSS)
- Signal cable (FLY)
- Instruction Manual (communication) are available from our website
- Loader software are available from our website

Out of delivery

- Power cable
- Output signal cable
- RS-485 communication cable

1.2. Check on type and specifications


The type and specifications of product are indicated on the specifications plate mounted on the flow transmitter and detector frame.

Check that they represent the type you ordered, referring to the following code symbols.


<Flow transmitter (FSV)>

1	2	3	4	5	6	7	8	9	10	11	12	13	Description
F	S	V											(Default language setting/instruction manual) (4th digit)
			S										S: Japanese/Japanese
			E										E: English/English
			C										C: English/Chinese
				Y									(Communication) (5th digit)
				D									None
													RS485
					Y								(Use) (6th digit)
													Single measuring path
						1							(Power supply) (7th digit)
						4							AC100 to 240V 50/60Hz
							3						DC20 to 30V
													Revision No. (8th digit)
								S					(Case structure) (9th digit)
								H					IP66
									Y				(Wire connection port) (10th digit)
									A				Weatherproof gland provided [G1/2 and G3/8 (internal threads)]
													Union (for pilica) with gland [G1/2 female screw] (when "H" is specified 9th digit)
										Y			(Moisture-proof treatment) (11th digit)
										A			Y: None
													A: Provided
											Y		(Parameter setting) (12th digit)
											A		None
											B		Setting provided
											C		Setting provided + tag
													Tag
												A	(Mounting method) (13th digit)
												B	Pipe mount (if the 9th digit is S)
												C	Wall mount
													Pipe mount (if the 9th digit is H)

Flow transmitter : FSV...S (IP66)

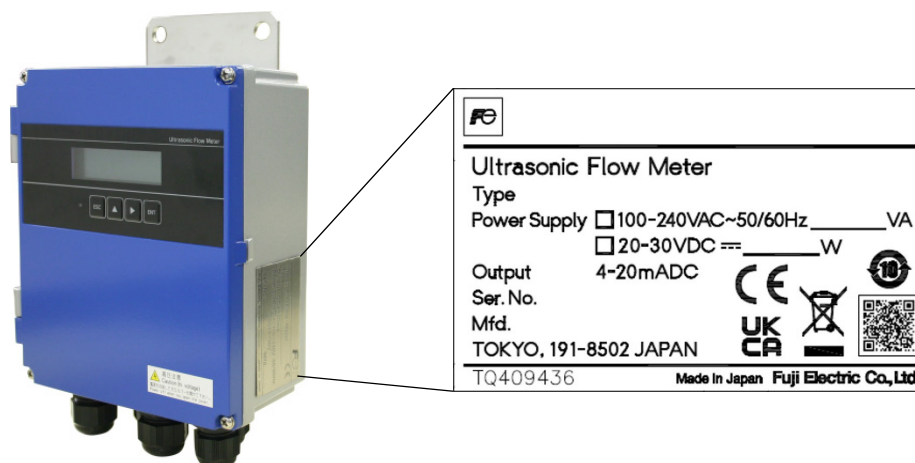


Flow transmitter : FSV...H (IP67)

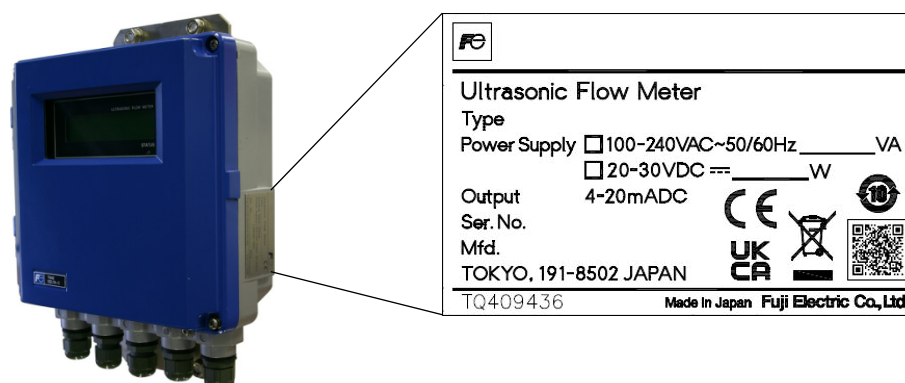


1.3. NAME AND FUNCTION OF EACH PART

1.3.1. Flow transmitter : FSV...S (IP66)

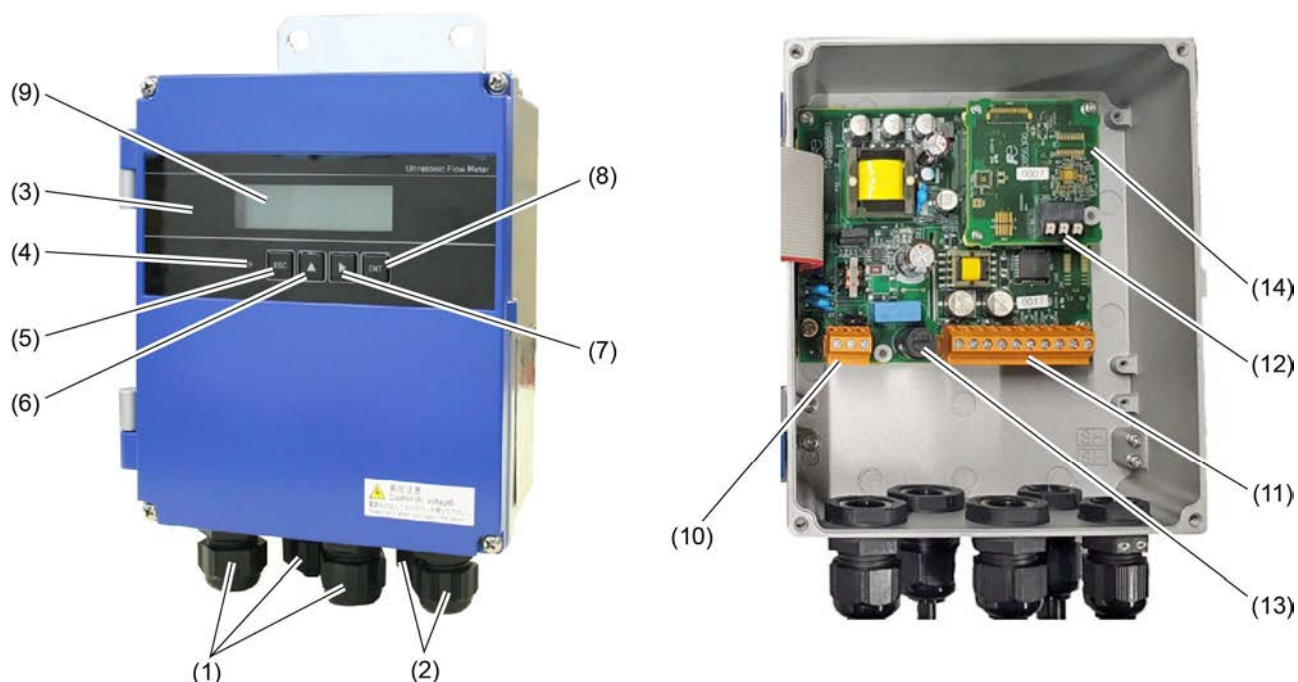

No.	Name	Key	Description
(1)	Wiring connection port, large		Wiring connection port for power cable and output cable.
(2)	Wiring connection port, small		Wiring connection port for signal cable only.
(3)	Indication and setting unit		Indicates and sets the flow rate, etc.
(4)	Received wave diagnostic indication (LED)		Indicates whether received wave is normal (green) or abnormal (red).
(5)	Escape key	ESC	Returns to the next-higher menu level or cancels the set status.
(6)	UP key	△	Selects items, numeric values and symbols.
(7)	Shift key	▷	Moves the cursor and selects decimal place.
(8)	Entry key	ENT	Enters a selection or registers a setting.
(9)	LCD display		Indicates the flow rate or setting.
(10)	Power terminal		Connects the power cable.
(11)	Input/output terminal		Connects signal cable, analog output or DO output cable.
(12)	Communication board terminal		Connects communication cable. (A communication board is optional)
(13)	Fuse holder		Fuse holder
(14)	Communication board		Mounted if communication is optionally designated.

1.3.2. Flow transmitter : FSV...H (IP67)

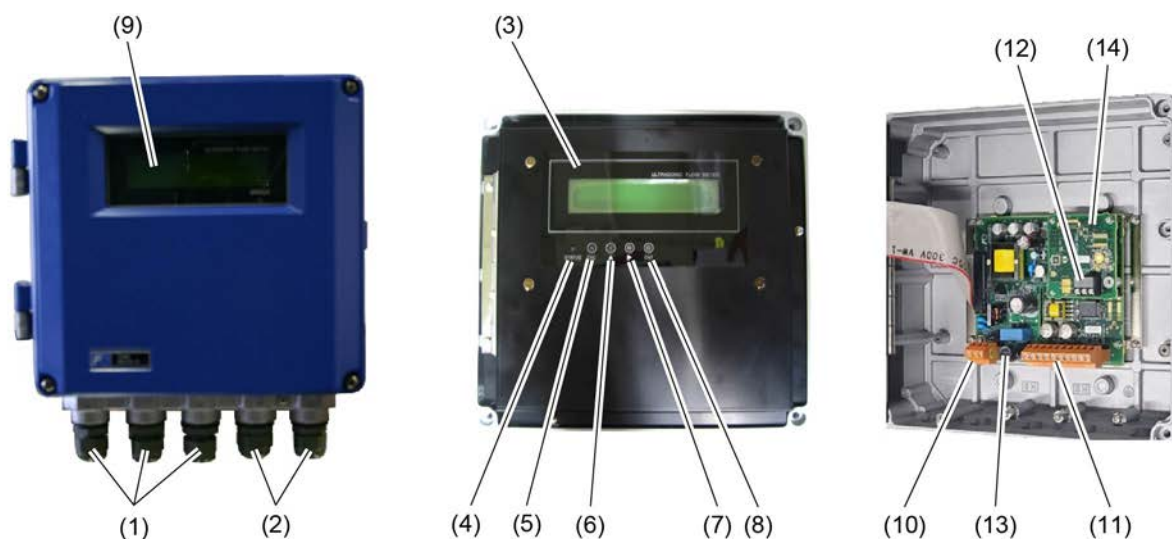


No.	Name	Key	Description
(1)	Wiring connection port		Wiring connection port for power cable and output cable.
(2)	Wiring connection port		Wiring connection port for signal cable only.
(3)	Indication and setting unit		Indicates and sets the flow rate, etc.
(4)	Received wave diagnostic indication (LED)		Indicates whether received wave is normal (green) or abnormal (red).
(5)	Escape key	ESC	Returns to the next-higher menu level or cancels the set status.
(6)	UP key	△	Selects items, numeric values and symbols.
(7)	Shift key	▶	Moves the cursor and selects decimal place.
(8)	Entry key	ENT	Enters a selection or registers a setting.
(9)	LCD display		Indicates the flow rate or setting.
(10)	Power terminal		Connects the power cable.
(11)	Input/output terminal		Connects signal cable, analog output or DO output cable.
(12)	Communication board terminal		Connects communication cable. (A communication board is optional)
(13)	Fuse holder		Fuse holder
(14)	Communication board		Mounted if communication is optionally designated.

2. INSTALLATION AND BEFORE START OF OPERATION OF THE FLOW TRANSMITTER

2.1. Outline of installation procedure

Install the flowmeter according to the following procedure.

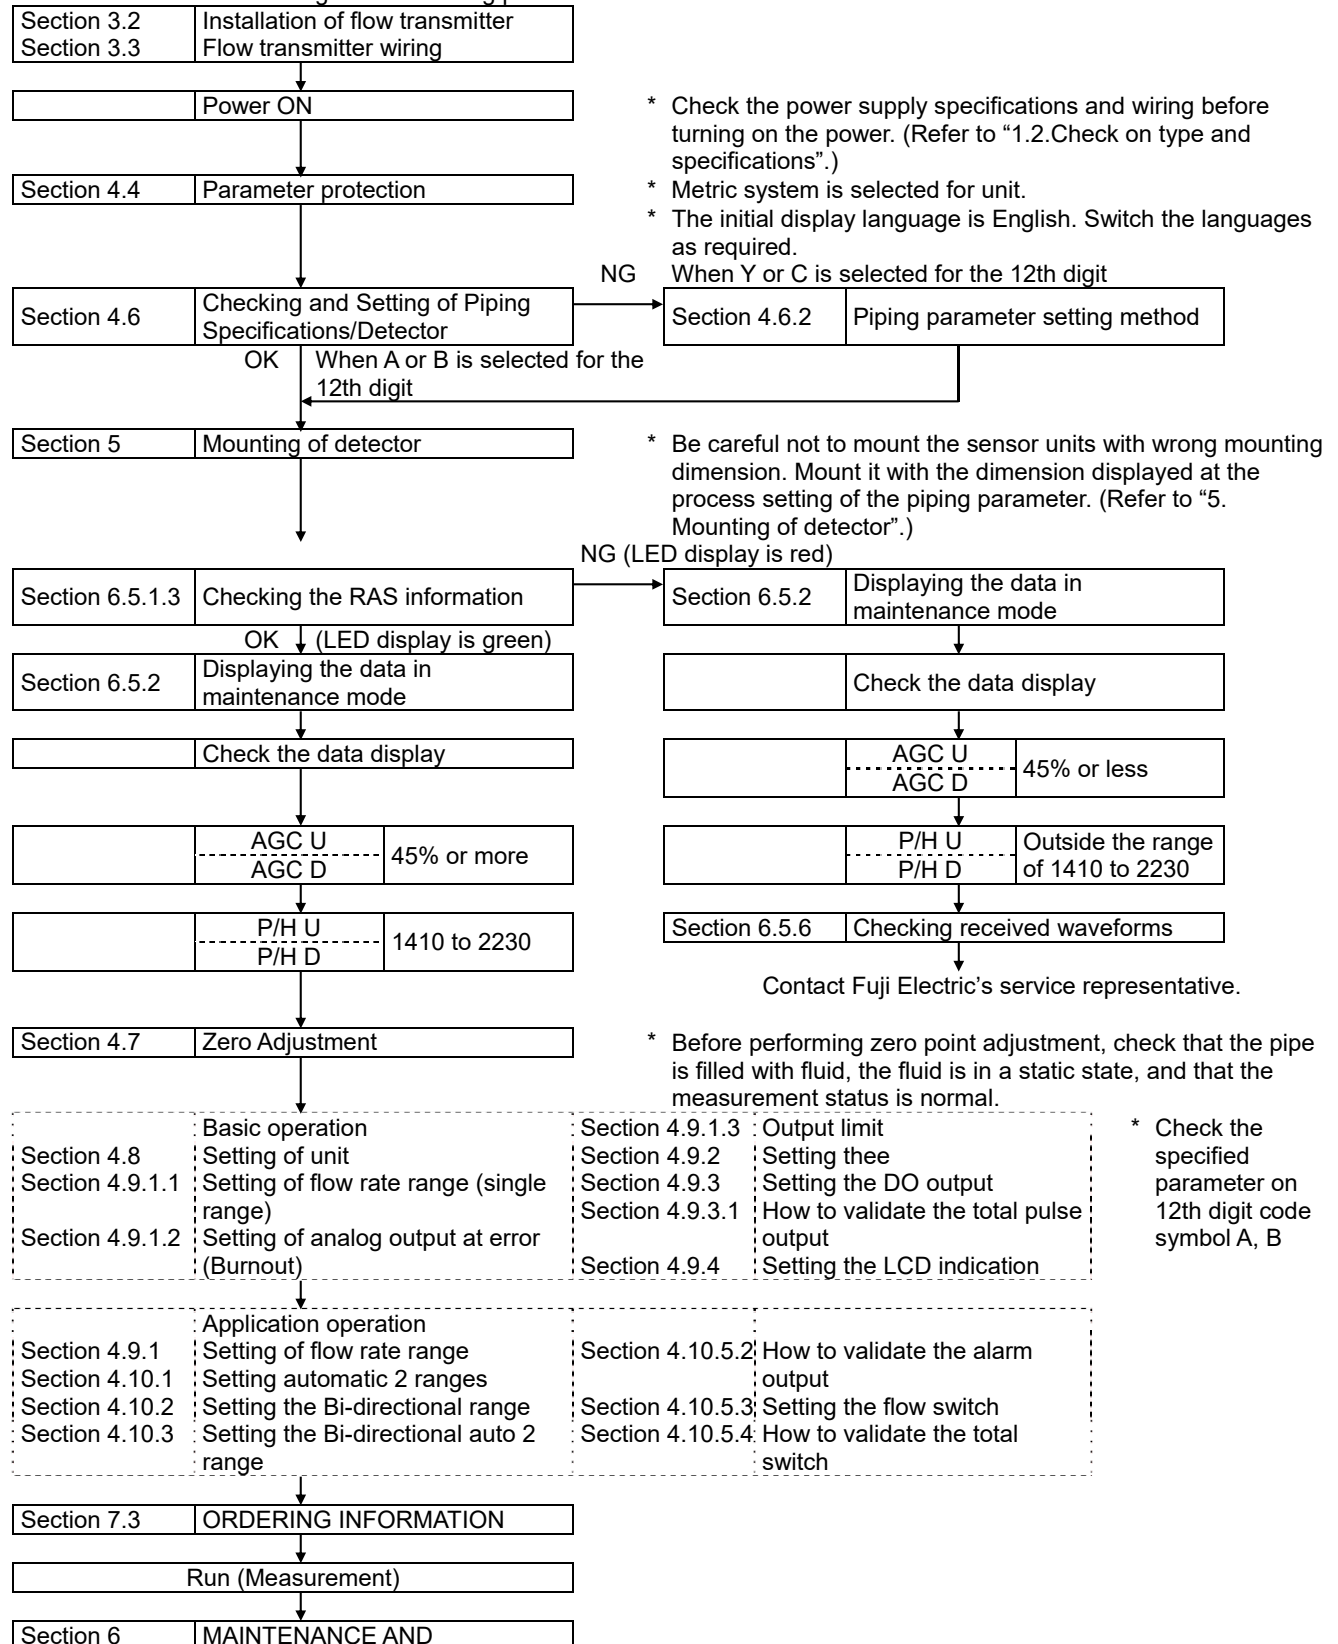

Note) Set the parameter protection to OFF before you change settings or perform zero adjustment.

3. INSTALLATION

Select an installation location that satisfies the following conditions for ease of maintenance and inspection, service life of the instrument, and assurance of reliability all considered.


CAUTION

- (1) A place where ambient temperature and humidity are -20 to +55°C and 95% RH or less for flow transmitter (FSV)
- (2) Indoor place. Outdoor place, not exposed to direct or reflected sunshine nor inclement weather. (outdoor use type only)
- (3) Space for periodic inspection and wiring work is available.
- (4) A place not subjected to radiated heat from a heating furnace, etc.
- (5) A place not subjected to corrosive atmosphere.
- (6) A place not to be submersed.
- (7) A place isolated from excessive vibration, dust, dirt and moisture.
- (8) A place away from electrical devices such as motor and transformer, etc. which generate electromagnetic induction noise, electrostatic noise, etc.
- (9) A place not subjected to excessive fluid pulsation such as pump discharge side.
- (10) A place that provides enough place for the length of the straight pipe.

3.1. Installation location of flow transmitter


Secure at least 100 mm of space between the flow transmitter and nearby wall. Also provide enough space to open the front cover for maintenance.

Allow space for cable wiring under the case.

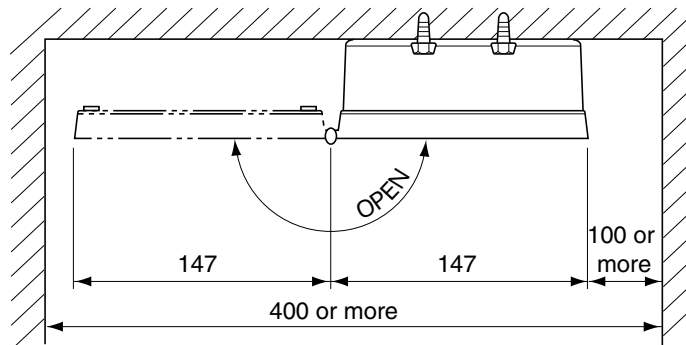

Unit: mm

Fig. 3.1 Top view of mounting (Flow transmitter : FSV...S (IP66))

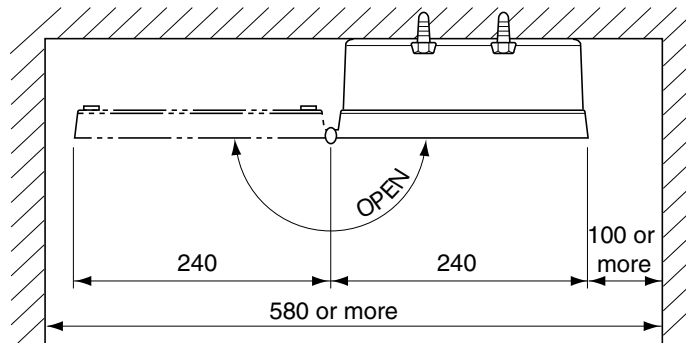

Unit: mm

Fig. 3.2 Top view of mounting (Flow transmitter : FSV...H (IP67))


3.2. Installation of flow transmitter

The flow transmitter may be mounted on a wall or 2 inch pipe stand (option).

3.2.1. Wall mounting (Flow transmitter : FSV...S (IP66))

For wall mounting, use two M8 bolts.

Drill holes according to the mounting hole dimensions shown below, and fasten the flow transmitter using the M8 bolts.

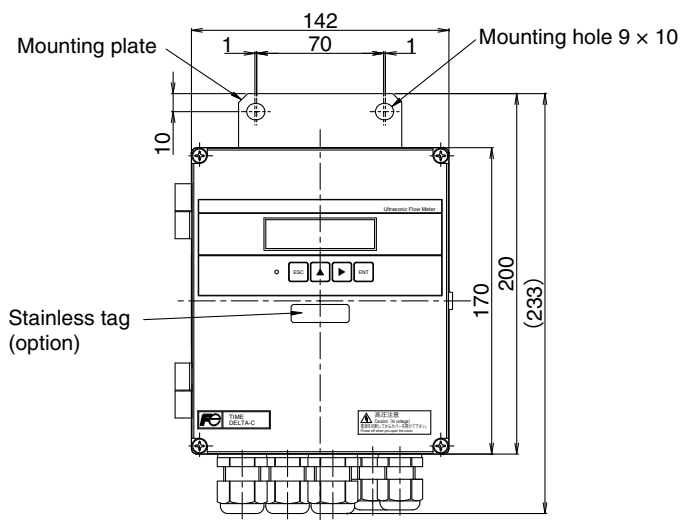

Normal	Standard tightening torque
M8	12 [N.m]

* for concrete walls, steel anchor bolts

3.2.2. 2 inch pipe stand mounting (Flow transmitter : FSV...S (IP66))




CAUTION

When mounting on 2 inch pipe, be sure to use a complete set of fixtures (U bolt, support fixture, plain washer, spring washer, nut) furnished if optionally designated. Tighten the nut by hand. If any support fixture is not used or if the assembly is excessively tightened by tool, the wall mounting fixture may be deformed.


Mount the instrument on 2 inch pipe stand as illustrated below.

Normal	Standard tightening torque
M8	12[N.m]

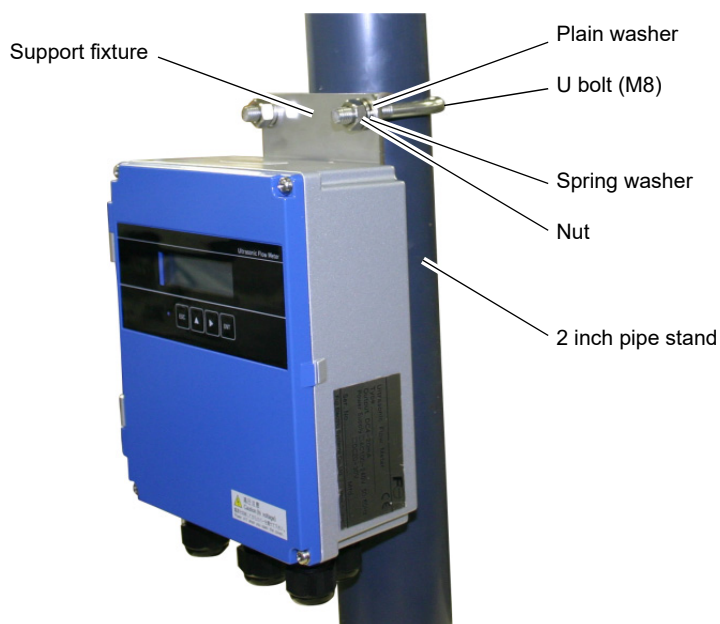

3.2.3. Wall mounting (Flow transmitter : FSV...H (IP67))

For wall mounting, use four M8 bolts.
Drill holes according to the mounting hole dimensions shown below, and fasten the flow transmitter using the M8 bolts.

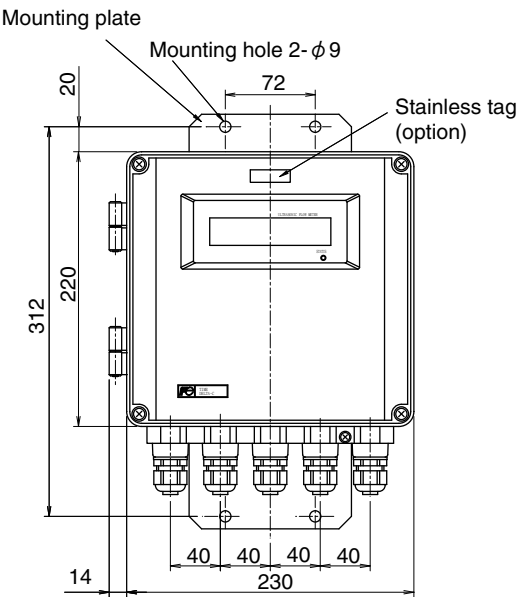

Norminal	Standard tightening torque
M8	12 [N·m]

*for concrete walls, steel anchor bolts


3.2.4. 2 inch pipe stand mounting (Flow transmitter : FSV...H (IP67))

CAUTION

When mounting on 2 inch pipe, be sure to use a complete set of fixtures (U bolt, support fixture, plain washer, spring washer, nut) furnished if optionally designated. Tighten the nut by hand. If any support fixture is not used or if the assembly is excessively tightened by tool, the wall mounting fixture may be deformed.

Mount the instrument on 2 inch pipe stand as illustrated below.

Norminal	Standard tightening torque
M8	12 [N·m]

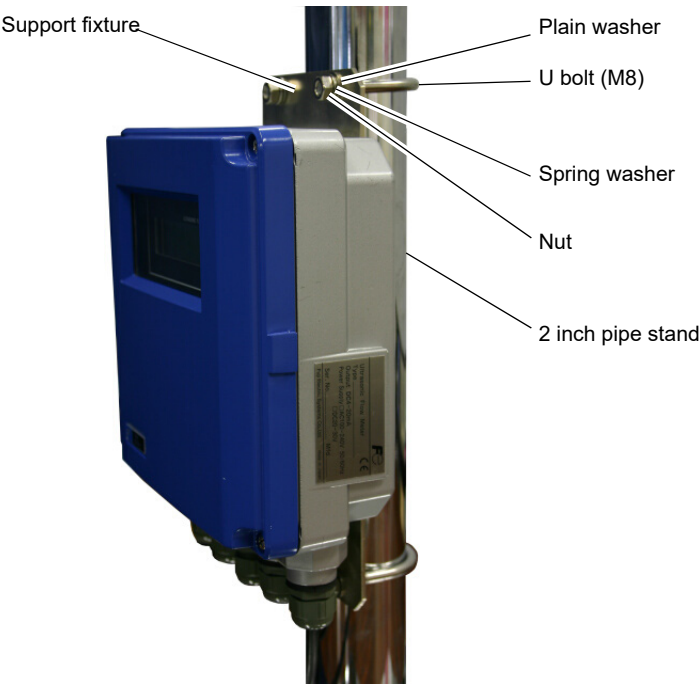

3.3. Flow transmitter wiring

3.3.1. Cautions in wiring



CAUTION

- (1) Use a special coaxial cable (FLYC) as a signal cable between the detector and flow transmitter (FSV). Do not provide a junction or splice of the signal cable midway.
- (2) The signal cable between the detector or flow transmitter should be run in metallic conduits. Upstream and downstream signal cables can be put in the same conduit. However, do not put the power cable together to avoid interference.
- (3) For output signal, use a shielded cable, where possible.
- (4) To avoid noise interference, do not put the cables together with heavy duty line or the like into the same duct.
- (5) If a ground wire is included in the power cable, connect it to ground as it is.
- (6) A power switch is not provided on the instrument and must be mounted separately or circuit breaker must be mounted for each flowmeter. For use, please comply with safety standards according to followings.
 - Switch must be conformed to IEC60947-3. Circuit breaker must be conformed to IEC60947-2.
 - Switch or circuit breaker must be included in the equipment.
 - Place the switch or circuit breaker properly where is easy access to use.
 - Indicate that switch or circuit breaker is a disconnect device for equipment.
 - Use a switch or circuit breaker that complies with local or international standards in your region.
- (7) Seal unused wiring ports by sealing caps provided.

3.3.2. Applicable wires

Use the following cables.

- Power cable : 3-wire cabtyre cable (Allowable temperature: 65°C or more)
Nominal sectional area 0.75mm² or more
Outside diameter ø11mm
- Output signal cable : 2-wire or multi-wire cabtyre cable as required (Allowable temperature: 65°C or more)
Outside diameter ø11mm
- Detector-flow transmitter cable : Signal cable by type designation (FLY)
 - In case of detector FSSA : High-frequency coaxial double shield cable with
 - FSSC characteristic impedance of 50Ω
 - FSSD With one-side waterproof BNC connector
 - FSSH Outside diameter ø7.3mm
 - In case of detector FSSE : High-frequency coaxial double shield cable with
 - characteristic impedance of 50Ω
 - Outside diameter ø7.3mm

3.3.3. Treatment of wiring port

The casing of the flow transmitter is IP66 and IP67. However, if installed in a humid place, the wiring ports must be made airtight to avoid ingress of moisture, condensation, etc. Be sure to use the waterproof glands furnished with the instrument in order to ensure the waterproof means. Unused wiring ports should be sealed by supplied cover.



CAUTION

Do not install the instrument where there is a risk of flooding.


3.3.4. Wiring to each terminal

3.3.4.1. Flow transmitter : FSV...S (IP66)

Carry out wiring to each terminal according to the following figure.

Signal cable for upstream

Signal cable for downstream

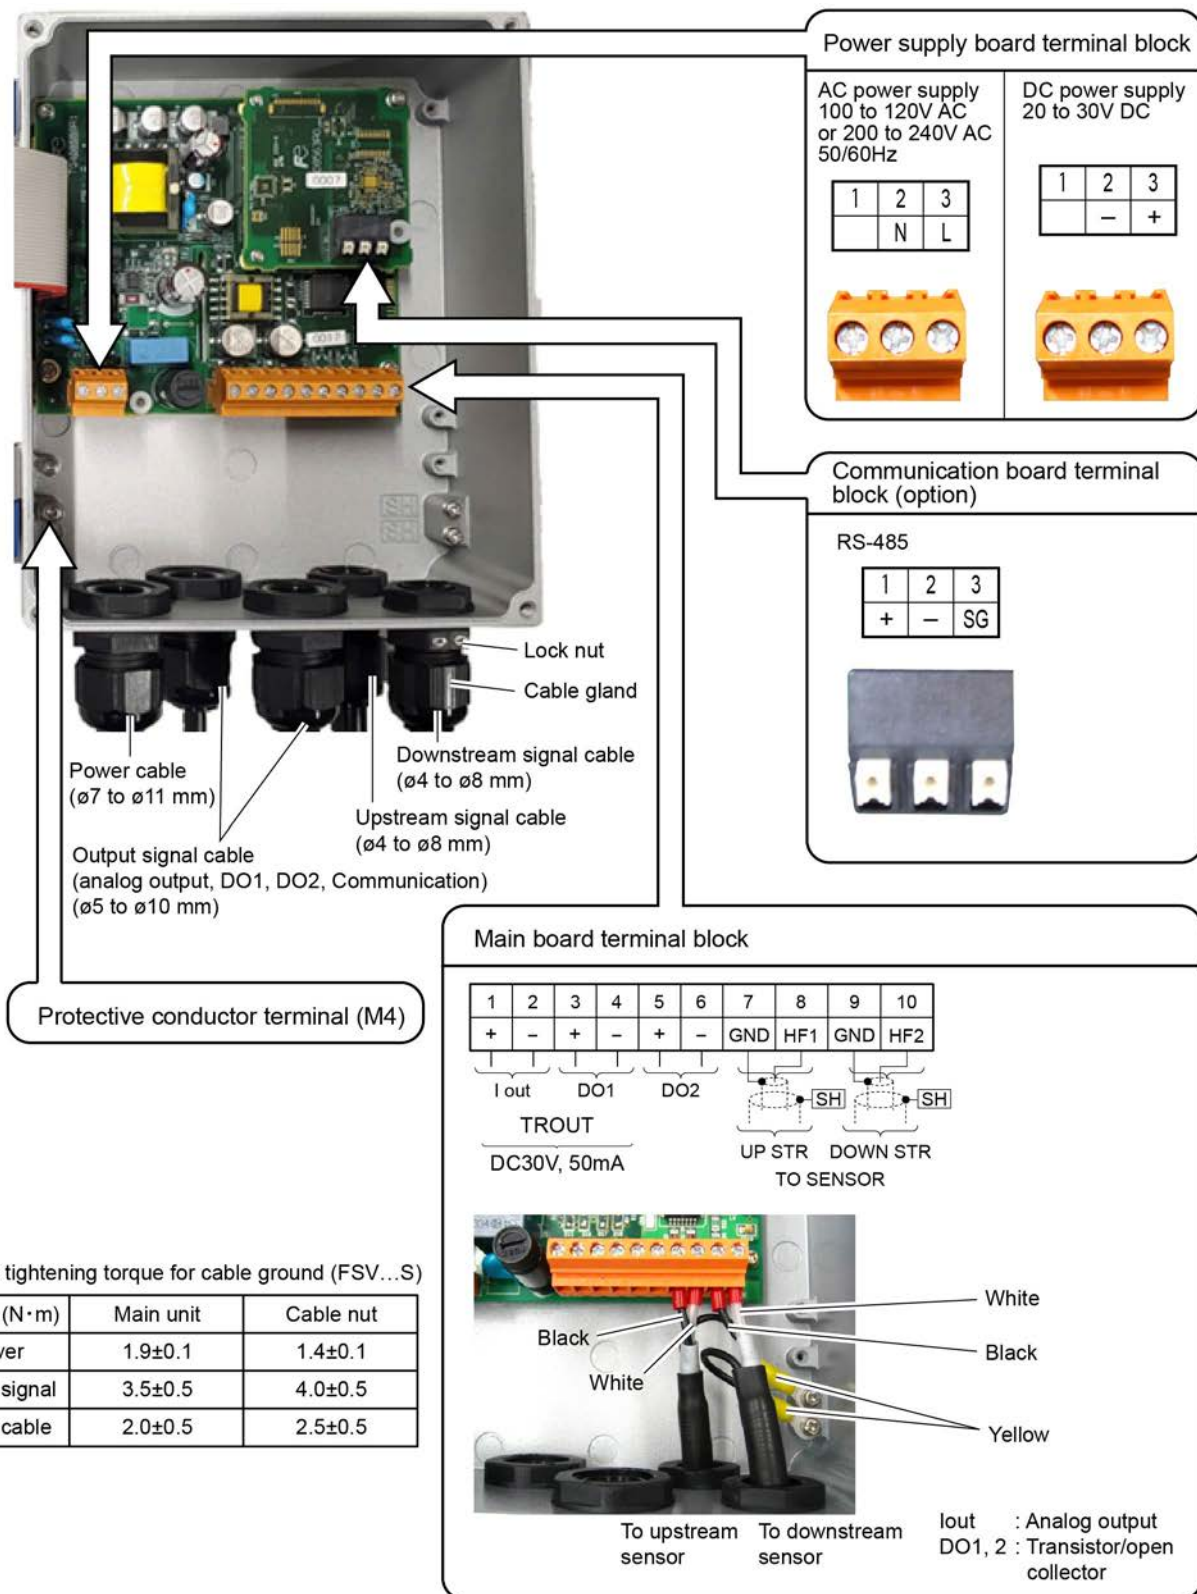

Note 1) Terminal block is insertion type to connect a cable. Use bar terminal as crimp-style terminals.

Note 2) Be sure to connect the protective conductor to the protective conductor terminal inside of the metal enclosure.
(Class D grounding)


Note 3) For output signal, use multiple core cable as required.

3.3.4.2. Flow transmitter : FSV...H (IP67)

Carry out wiring to each terminal according to the following figure.

Sensor cable for upstream

Sensor cable for downstream

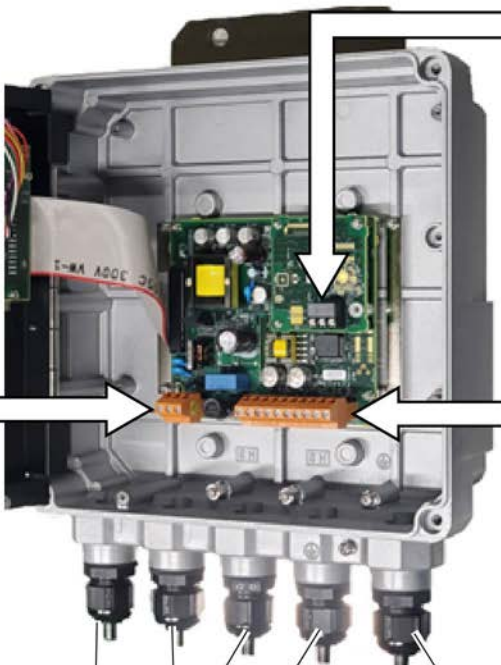

Power cable

Upstream signal cable


Downstream signal cable

Output signal cable
(analog output, DO1, DO2, Communication)
Applicable cable meter (mm) : $\varnothing 7$ to $\varnothing 11$

Communication board terminal block (option)

RS-485

1	2	3
+	-	SG




Type	Standard tightening torque
All parts (5 parts)	1.4 [N·m]

Power supply board terminal block


AC power supply 100 to 120V AC
or 200 to 240V AC 50/60Hz

1	2	3
	N	L



DC power supply 20 to 30V DC

1	2	3
	-	+



Main board terminal block

1	2	3	4	5	6	7	8	9	10
+	-	+	-	+	-	GND	HF1	GND	HF2

l out

DO1


DO2

UP STR

DOWN STR

TO SENSOR

DC30V, 50mA



Black

White

Yellow

To upstream sensor

To downstream sensor

lout : Analog output
DO1, 2 : Transistor/open collector

Note 1) Terminal block is insertion type to connect a cable. Use bar terminal as crimp-style terminals.

Note 2) Be sure to connect the protective conductor to the protective conductor terminal. (Class D grounding)

Note 3) For output signal, use multiple core cable as required.

3.3.5. How to connect to terminal block.

3.3.5.1. Cable treatment


The cable connecting to the terminal block is available to connect with bare wire but for safety's sake please crimp the bar terminal to connect.

When you cut and use the signal cable, make sure to cut the cable in same length of upstream and downstream.


Note) if cable lengths are different, it may adversely affect the output.

Usable wiring materials

- Wire
Gauge: AWG20 (0.5mm²) to AWG16 (1.5mm²)
Strip-off length: 8 to 10mm

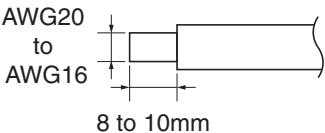

- Bar terminal
Weidmuller
www.weidmuller.com

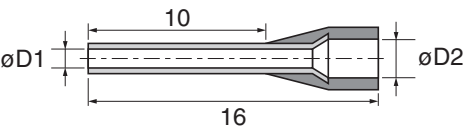

Wire size (mm ²)	AWG	$\phi D1$ (mm)	$\phi D2$ (mm)	Type
0.5	20	1	2.6	H0.5/16
0.75	18	1.2	2.8	H0.75/16
1	17	1.4	3	H1/16
1.5	16	1.7	3.5	H1.5/16

Note1) Make sure to use PZ6/5(H0.25 to H6 for sleeve) as a crimp tool for caulking.

Note2) Applicable sleeve is required for electric wire.


Note3) Insert the electric wire to the end of H sleeve so as to crimp.

Note4) Length of stripped wire is 12mm.

3.3.5.2. How to connect to power supply/terminal block for signal.

Please prepare the flathead screwdriver (head size: 0.6 x 3.5mm) so as to tighten the cable.

- (1) Pull off the cable socket side from the plug on the substrate with holding the right side of the socket by hand.
- (2) If cable connector is closed, turn the screw to the left on the top to open.
- (3) Insert the cable and turn the screw to the right on the top to fix.
- (4) Install the cable socket side to the plug on the substrate.

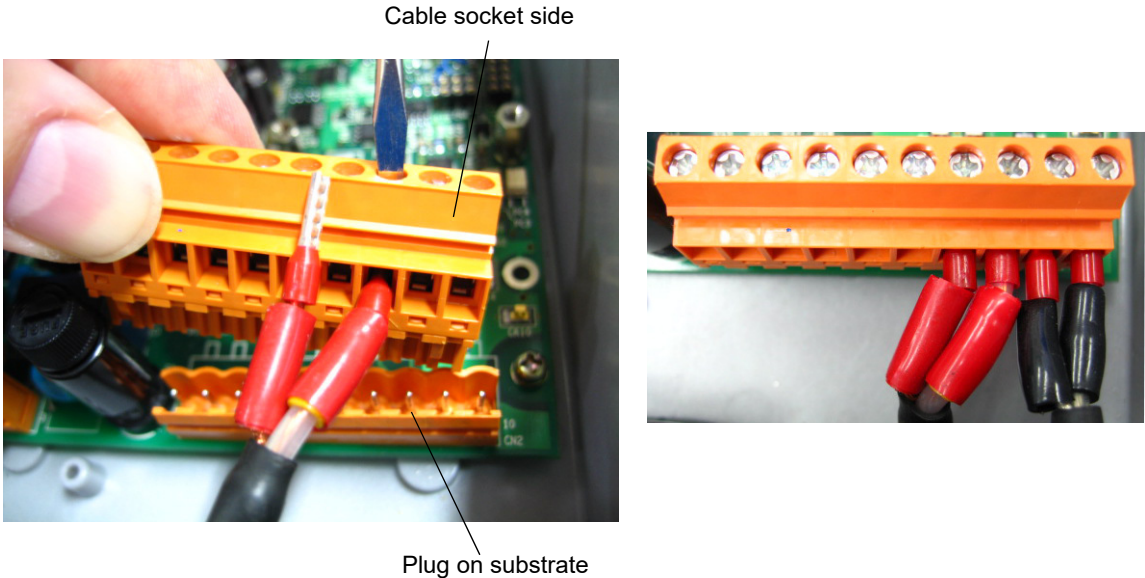


Note) Make sure to conduct the procedure not to damage the printed-circuit board when you remove and install the cable socket side.

3.3.5.3. How to connect to communication terminal block.

Please prepare the flathead screwdriver (head size: 0.6 × 3.5mm) so as to connect the cable.

1. Push the clamp so as to open the connector.
2. Insert the cable to the connector and release the clamp to fix the cable.

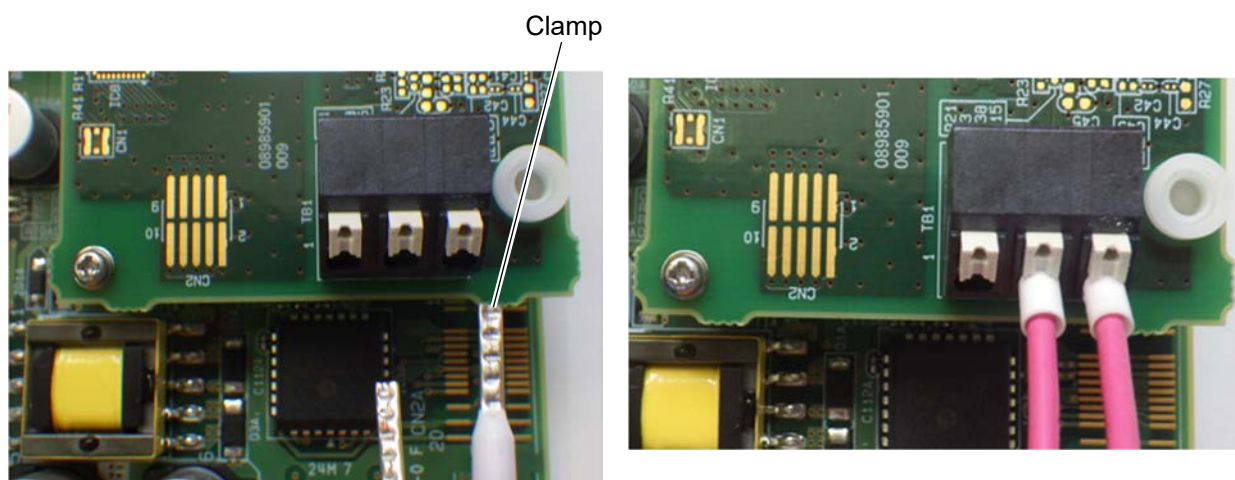


4. Parameter


4.1. Description of display/setting unit

Display unit and setting unit are as shown below.

4.1.1. Flow transmitter : FSV...S (IP66) display/setting unit

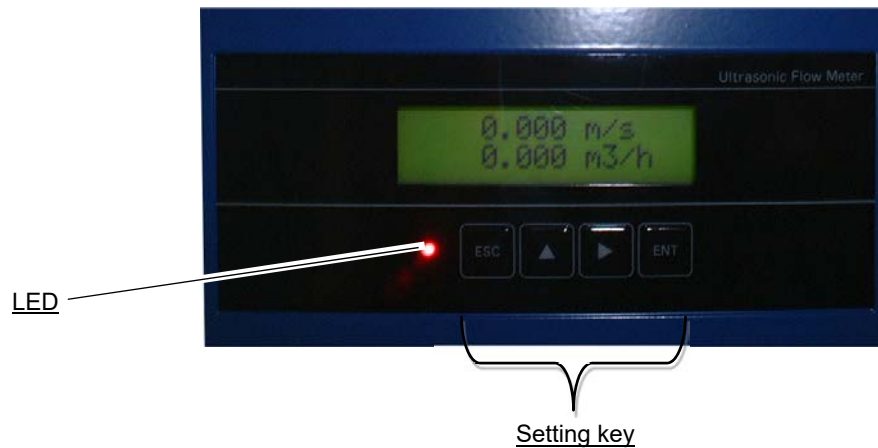


4.1.2. Flow transmitter : FSV...H (IP67) display/setting unit

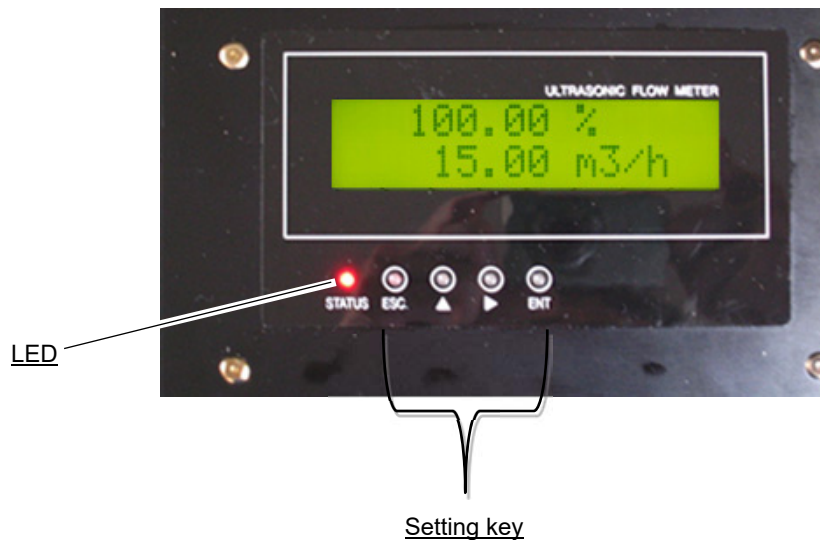

4.1.3. Description of display/setting unit

- LCD display: Displays the measurement and setting (indication in 16 digits, 2 line).
“Measurement display”

Up to 8 digits including the decimal point are displayed in the data field. When the displayed digits exceed, “<” is displayed at the first digit. When the range exceeds maximum or is below minimum setting, “OVERFLOW” or “UNDERFLOW” is displayed blinking on the Display 2.

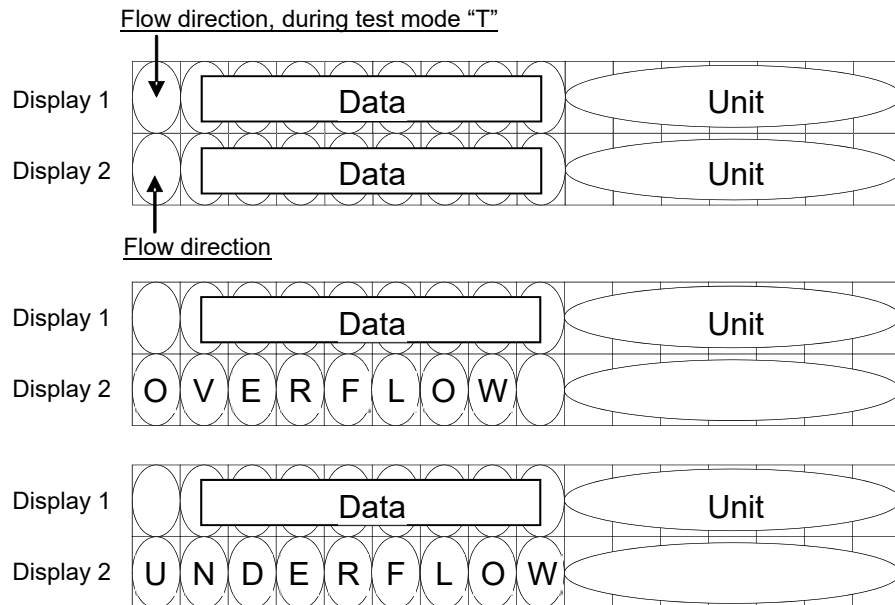

- LED display: Indicates whether the received wave is normal or not.
(Green): Received wave is normal.
(Red) : Received wave is abnormal.


Set the parameter by setting switches. Setting is available through PC for the product having communication (5th digit of type code is D).


- ESCAPE key : Return to the next-higher menu level or cancels the set status.
- UP key : Selects items, numeric values and symbols.
- SHIFT key : Moves the cursor and selects decimal place.
- ENTRY key : Enters a selection or registers a setting.


Note) For changing the parameter, enter the changed value, and press this key to confirm that it is registered.


- + DOWN key : DOWN key function is conducted by holding down SHIFT key and press DOWN key.
Uses DOWN key for selecting the items, values and codes.


4.2. Composition of key operation

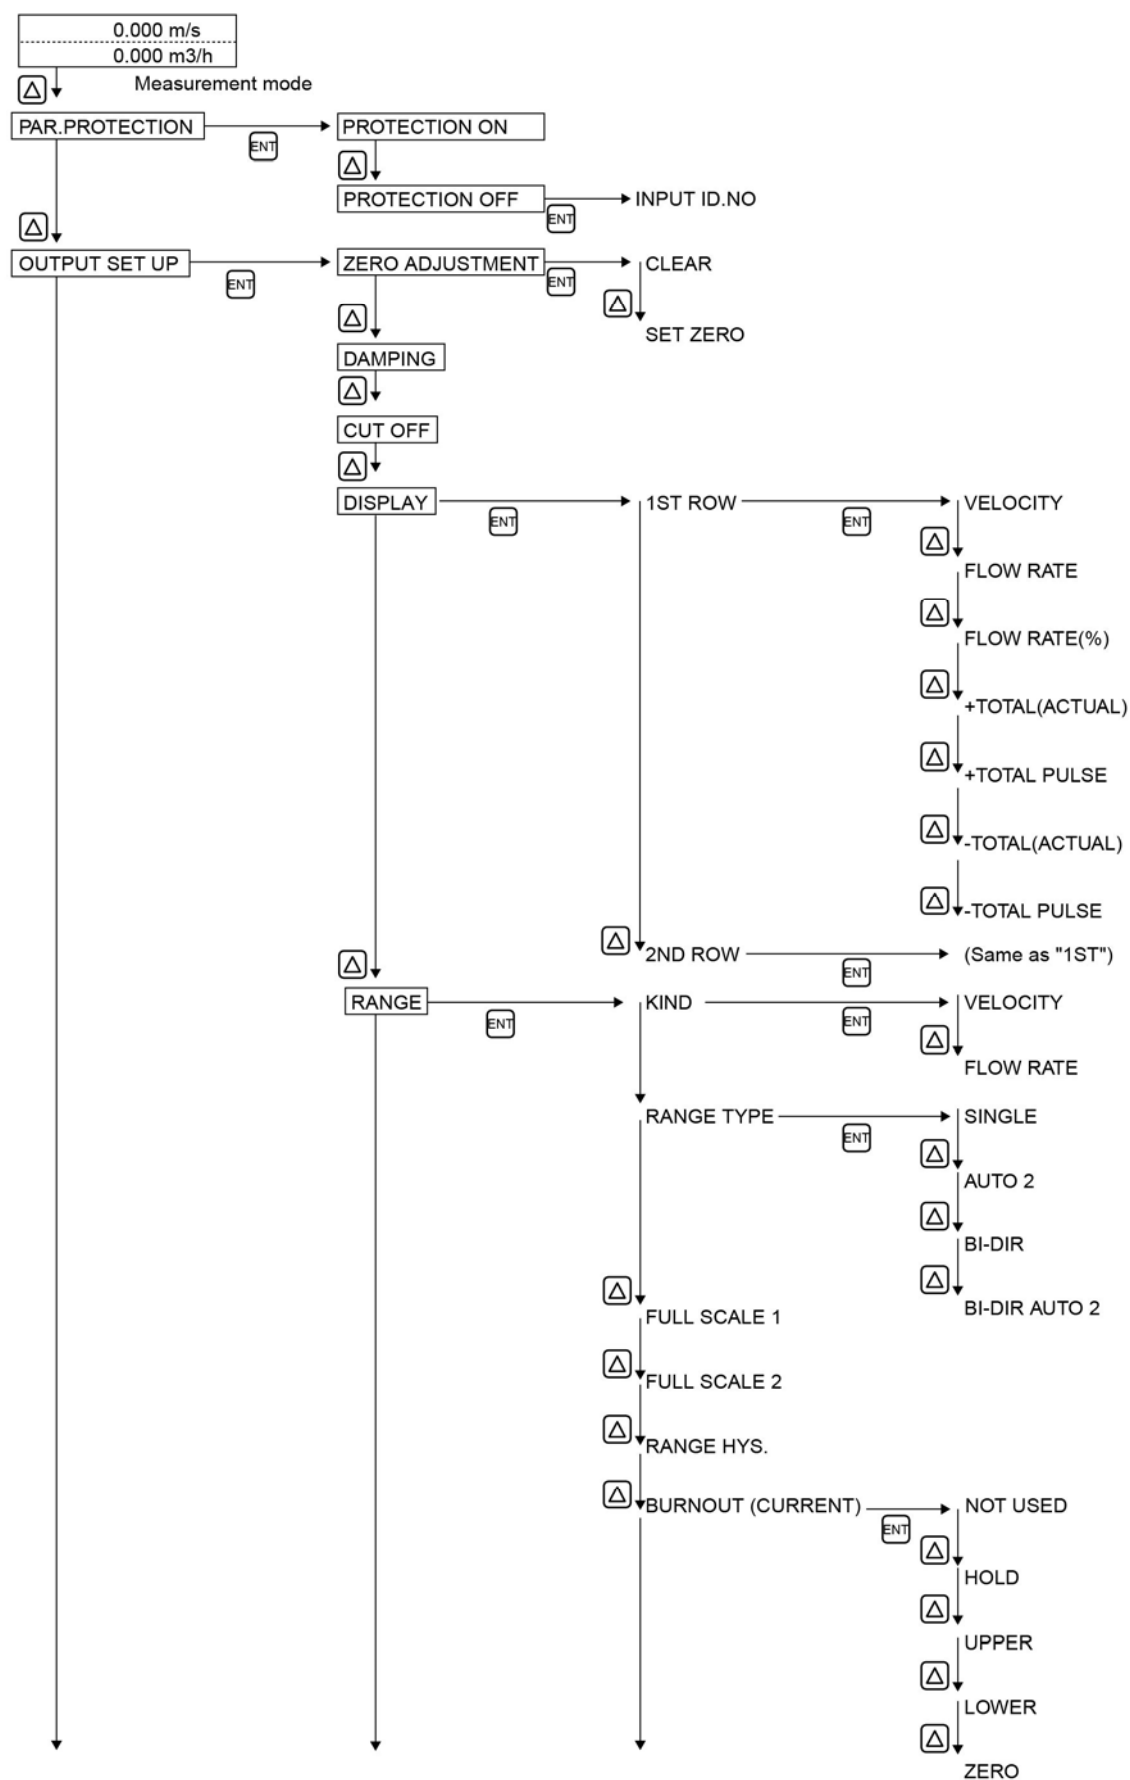

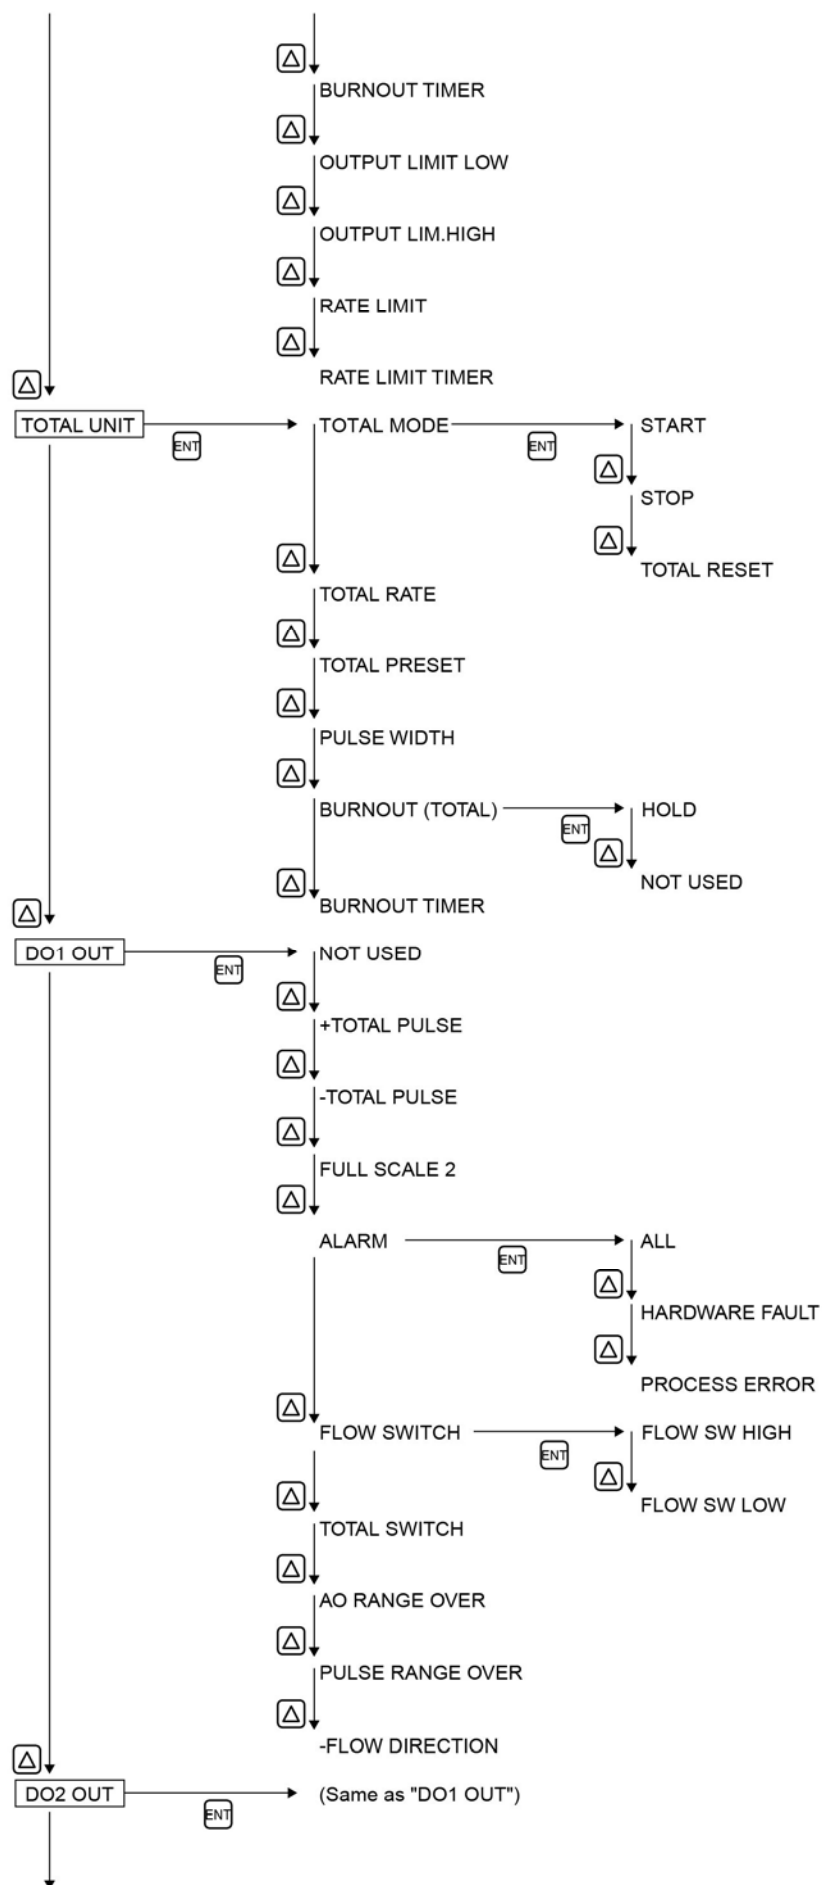

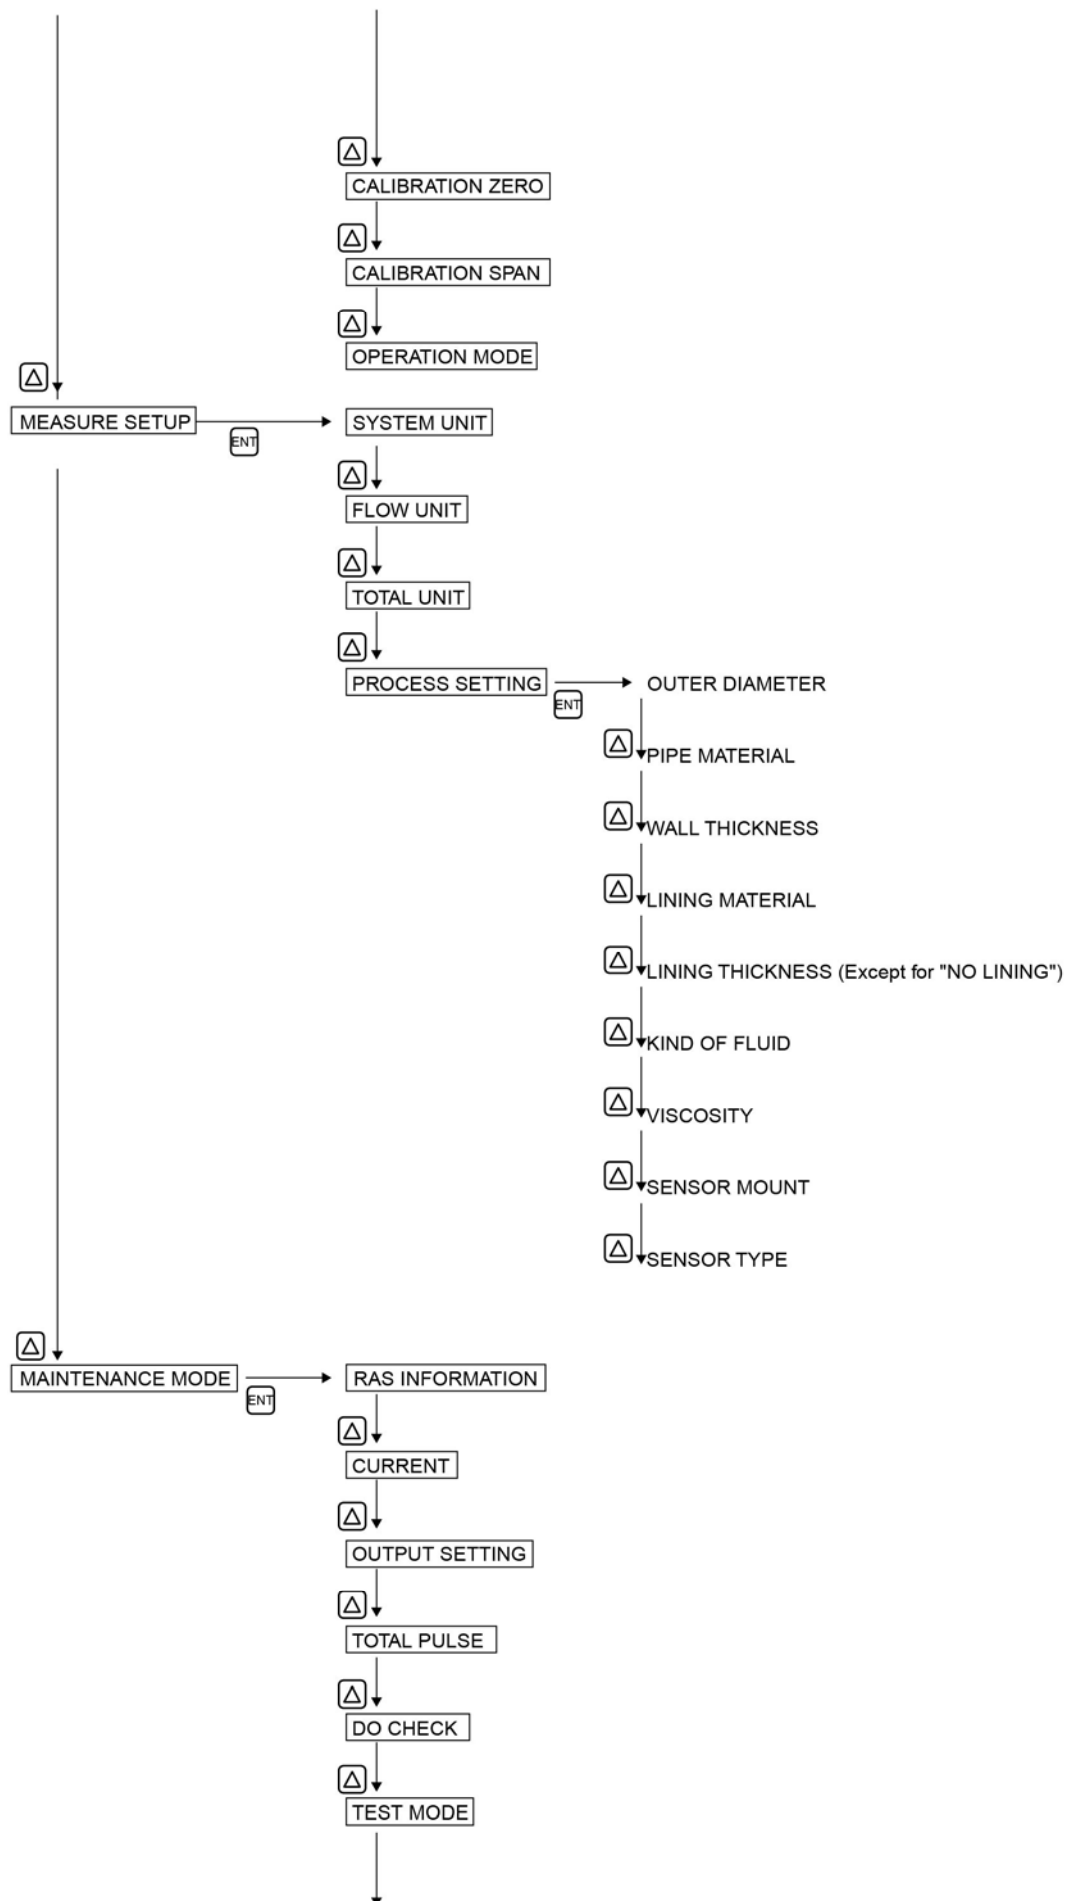

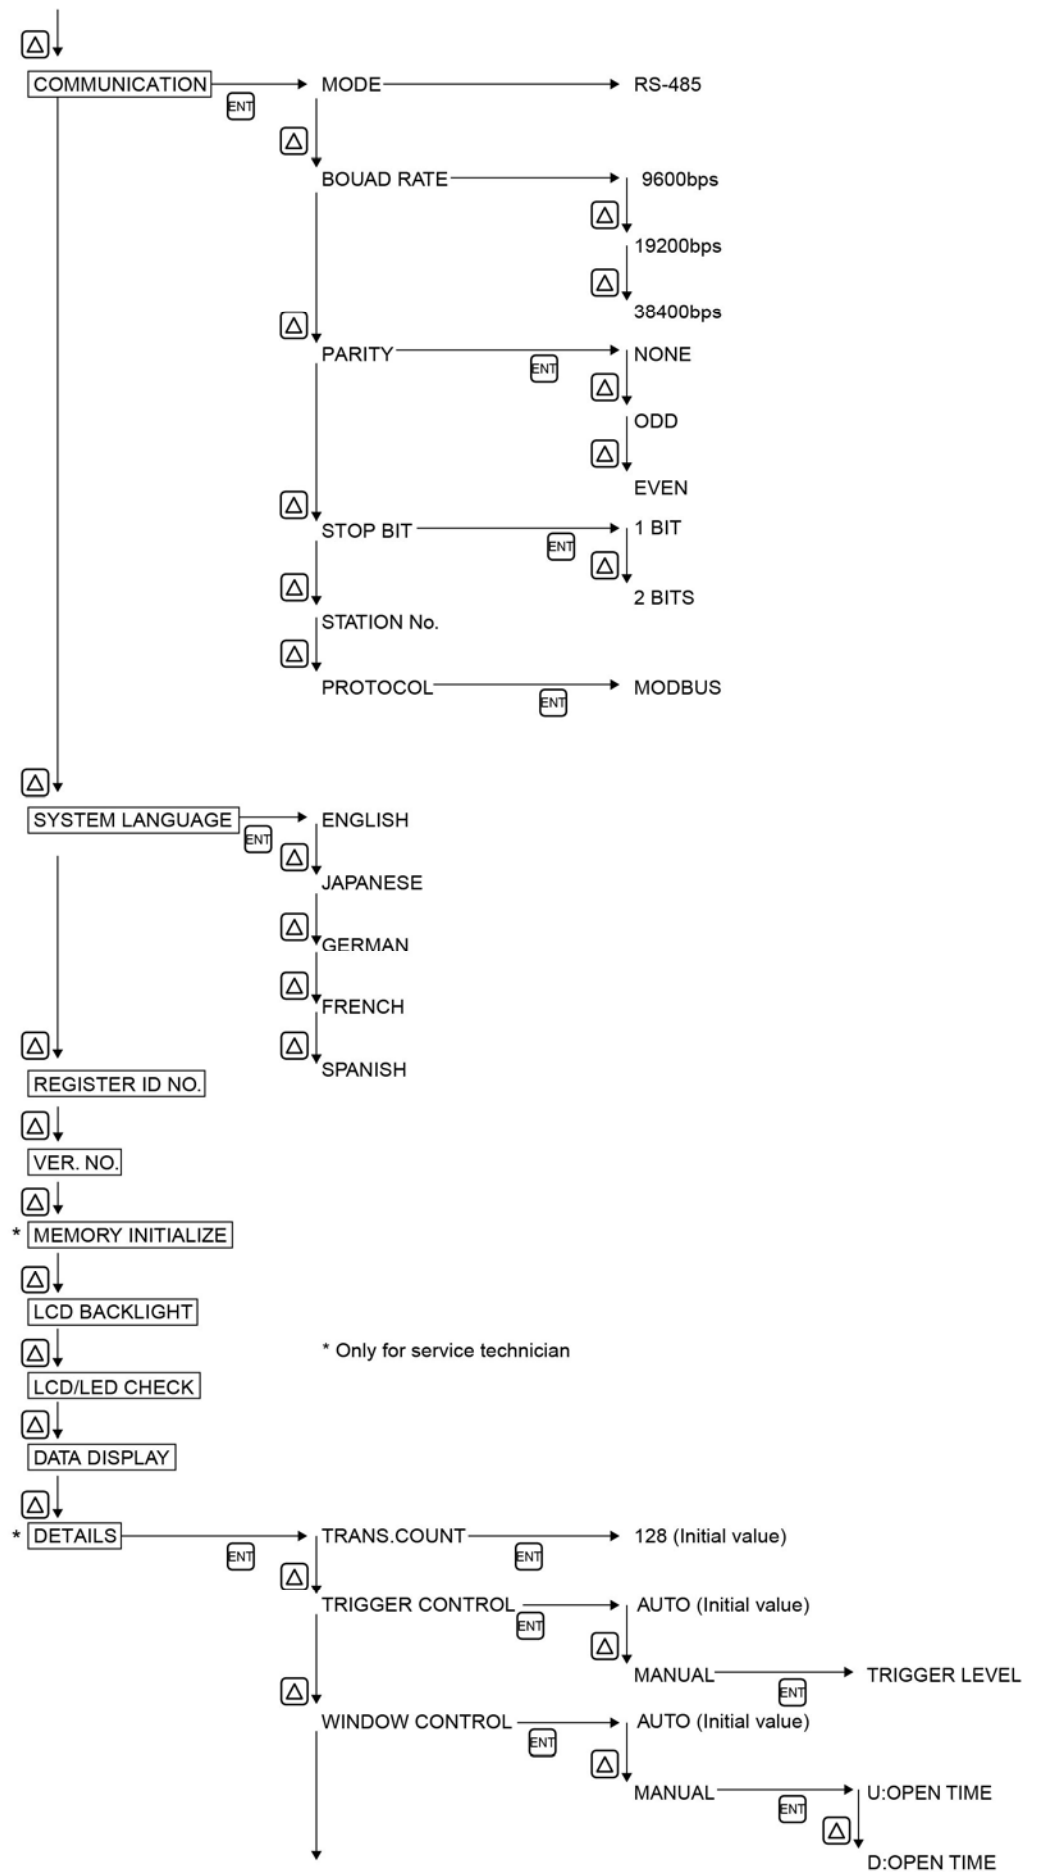

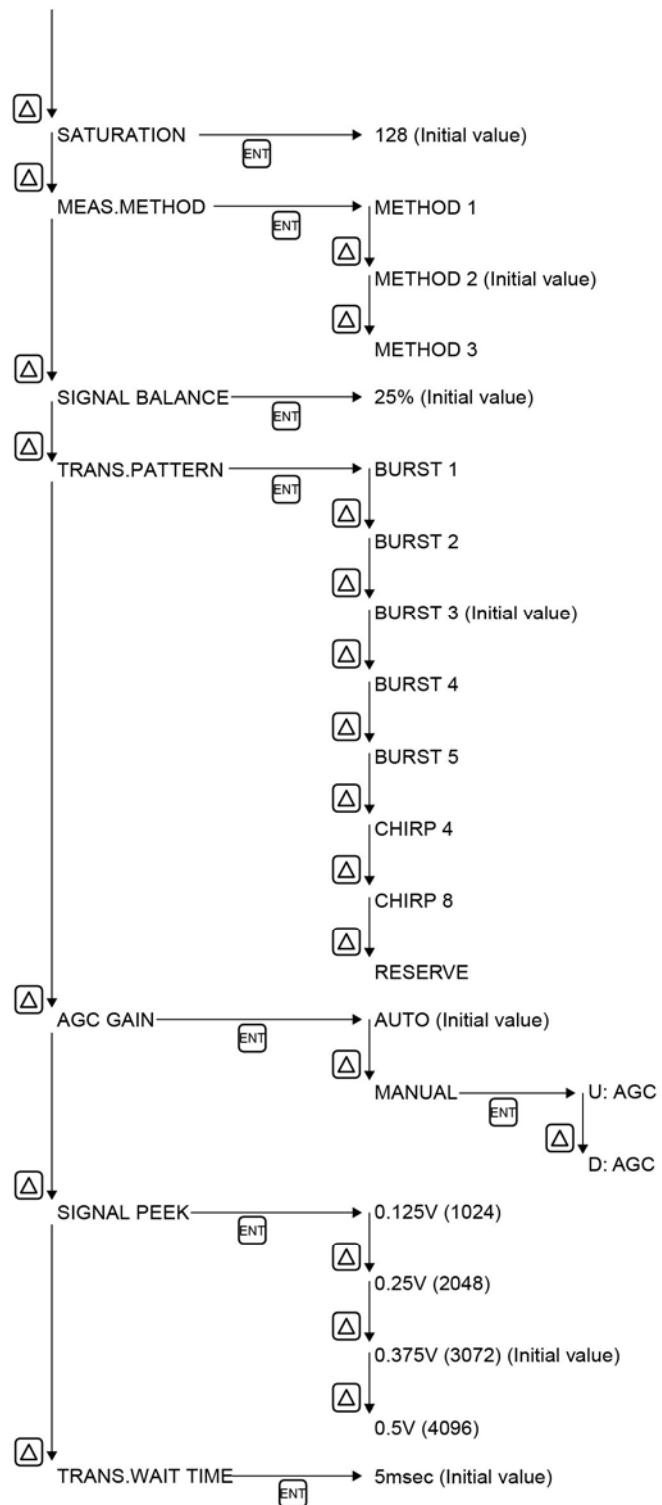


4.3. Parameter initial value list


Factory-set value is shown below. (When parameter setting is not provided.)


	Setting unit	Setting range	Initial value	Setting value
1	Parameter protection	No. of menu: 2	PROTECTION ON	PROTECTION ON, PROTECTION OFF
2	ID No	0000 to 9999	0000	ID No. is invalid when 0000 is selected.
3	Language	No. of menu: 5	English *1	English, Japanese, German, French and Spanish
4	System unit	No. of menu: 2	Metric	Metric or inch
5	Flow unit	No. of menu: 18	m ³ /h	L/s, L/min, L/h, L/d, kL/d, ML/d, m ³ /s, m ³ /min, m ³ /h, m ³ /d, km ³ /d, Mm ³ /d, BBL/s, BBL/min, BBL/h, BBL/d, kBBL/d, MBBL/d
6	Total unit	No. of menu: 8	m ³	mL, L, m ³ , km ³ , Mm ³ , mBBL, BBL, kBBL
7	Outer diameter	6.00 to 6200.00mm	60.00mm	[mm, in]
8	Pipe material	No. of menu: 13 Sound velocity: 1000 to 3700m/s	PVC	Carbon steel, Stainless, PVC, Copper, Cast iron, Aluminum, FRP, Ductile iron, PEEK, PVDF, Acrylic and PP Pipe sound velocity (Sound velocity: [m/s, ft/s])
9	Wall thickness	0.10 to 100.00mm	4.00mm	[mm, in]
10	Lining material	No. of menu: 8 Sound velocity: 1000 to 3700m/s	No lining	No lining, Tar epoxy, Mortar, Rubber, Teflon, Pyrex glass, PVC Lining S.V. (Sound velocity: [m/s, ft/s])
11	Lining thickness	0.01 to 100.00mm	—	[mm, in]
12	Kind of fluid	No. of menu: 18 Sound velocity: 300 to 2500m/s	Water	Seawater, dist. water, ammonia, alcohol, benzene, bromide, ethanol, glycol, kerosene, milk, methanol, toluol, lube oil, fuel oil, petrol and refrigerant R410 Fluid S.V. (Sound velocity: [m/s, ft/s])
13	Dynamic viscosity coefficient	0.001 to 999.999 ×10 ⁻⁶ m ² /s	1.0038 ×10 ⁻⁶ m ² /s	[×10 ⁻⁶ m ² /s, ft ² /s]
14	Sensor mounting method	No. of menu: 2	V method	V method, Z method
15	Sensor type	No. of menu: 10	FSSA/FSSG	FSSA/FSSG, FLS_12/FLS_22, FSSC, FSG_32, FSG_31/FSG_41, FSSE/FSG_50, FSSF/FSG_51, FSD12, FSSD/FSD22, FSSH/FSD32
16	Zero adjustment	No. of menu: 2	Clear (unadjusted)	Clear, adjustment (Clear has been factory-set.)
17	Damping	0.0 to 100.0sec	5.0sec	sec
18	Low flow cut	0 to 5m/s in terms of flow velocity	0.150m ³ /h	[(5) unit]
19	Content of display 1st line	No. of menu: 7	Flow velocity (m/s)	Flow velocity, Flow rate, Flow rate (%), +Total (Actual), +Total pulse, -Total (Actual) and -Total pulse
20	Decimal point position of display 1st line		****.***	□□□□□□□□ (Fill in the specified digit)
21	Content of display 2nd line	No. of menu: 7	Flow rate (m/s)	Flow velocity, Flow rate, Flow rate (%), +Total (Actual), +Total pulse, -Total (Actual) and -Total pulse
22	Decimal point position of display 2nd line		****.***	□□□□□□□□ (Fill in the specified digit)
23	Kind	No. of menu: 2	Flow rate	Flow velocity, Flow rate
24	Range type	No. of menu: 4	Single range	Single range, Auto 2 range, Bi-dir range and Bi-dir Auto 2 range
25	Full scale 1	0, ±0.3 to ±32m/s in terms of flow velocity	15.000m ³ /h	[(5) unit]
26	Full scale 2	0, ±0.3 to ±32m/s in terms of flow velocity	0.000m ³ /h	[(5) unit]
27	Hysteresis	0.00 to 20.00	10.00%	%
28	Burnout (current)	No. of menu: 5	Hold	Not used, Hold, Lower, Upper and Zero
29	Burnout timer	10 to 900sec	10sec	sec
30	Output limit low	-20 to 0%	-20%	%
31	Output limit high	100 to 120%	120%	%
32	Rate limit	0 to 5m/s in terms of flow velocity	0.000m ³ /h	[(5) unit]
33	Rate limit timer	0 to 900sec	0sec	sec
34	Total mode	No. of menu: 3	Stop	Start, Stop and Reset
35	Total rate	0.000000 to 99999999	0m ³	[(6) unit]
36	Total preset	0.000000 to 99999999	0m ³	[(6) unit]
37	Pulse width	No. of menu: 7	50.0msec	5.0msec, 10.0msec, 50.0msec, 100.0msec, 200.0msec, 500.0sec, 1000msec.
38	Burnout (total)	No. of menu: 2	Hold	Not used, hold
39	Burnout timer	10 to 900sec	10sec	sec

		Setting unit	Setting range	Initial value	Setting value
40	Output condition	DO1 output type	No. of output content menu: 10 No. of alarm menu: 3 Flow switch range 0 to 32m/s in terms of flow velocity Total switch range 0.000000 to 99999999	Not used	<input type="checkbox"/> Not used <input type="checkbox"/> +Total pulse <input type="checkbox"/> -Total pulse <input type="checkbox"/> Range full scale 2 <input type="checkbox"/> Alarm [All, Device error, Process error] <input type="checkbox"/> Flow rate switch <input type="checkbox"/> Flow SW high [[(5) unit]] <input type="checkbox"/> Flow SW low [[(5) unit]] <input type="checkbox"/> Total switch [[(6) unit]] <input type="checkbox"/> Range over <input type="checkbox"/> Pulse range over <input type="checkbox"/> -Flow direction
41		DO1 Output operation	No. of menu: 2	Active ON	Active ON, Active OFF
42		DO2 Output type	No. of output content menu: 10 No. of alarm menu: 3 Flow switch range 0 to 32m/s in terms of flow velocity Total switch range 0.000000 to 99999999	Not used	<input type="checkbox"/> Not used <input type="checkbox"/> +Total pulse <input type="checkbox"/> -Total pulse <input type="checkbox"/> Range full scale 2 <input type="checkbox"/> Alarm [All, Device error, Process error] <input type="checkbox"/> Flow rate switch <input type="checkbox"/> Flow SW high [[(5) unit]] <input type="checkbox"/> Flow SW low [[(5) unit]] <input type="checkbox"/> Total switch [[(6) unit]] <input type="checkbox"/> Range over <input type="checkbox"/> Pulse range over <input type="checkbox"/> -Flow direction
43		DO2 Output operation	No. of menu: 2	Active ON	Active ON, Active OFF
44	Communication	Zero calibration	-5 to 5m/s in terms of flow velocity	0.000m³/h	[(5) unit]
45		Span calibration	-200.00 to 200.00%	100.00%	%
46		Operation mode	No. of menu: 2	Standard	Standard, High speed
47		Communication mode	No. of menu: 1	RS-485	RS-485
48		Baud rate	No. of menu: 3	9600bps	9600bps, 19200bps, 38400bps
49		Parity	No. of menu: 3	Odd	None, Odd, Even
50		Stop bit	No. of menu: 2	1 bit	1 bit, 2 bits
51		Station No.	1 to 31	1	(In case of RS-485)
52		Communication protocol	No. of menu: 2	MODBUS	MODBUS
53	LCD	LCD BACKLIGHT	No. of menu: 2	ON	ON, OFF
54		LIGHTS OUT TIME	0 to 99 min	5 min	min

*1) English is set when 4th digit of the type is "E".

FSV  : Japanese

FSV  : English

FSV  : English

4.4. Parameter protection

4.4.1. Protection ON/OFF

Description

- Parameters can be protected so that the flow meter settings will not carelessly be changed.
- Parameters can be protected by setting the "ID No." (Note) in the maintenance mode.
Note) 4 digits are factory set at "0000". (Refer to Section 4.11.7.)

Setting range: PROTECTION ON : Parameter cannot be changed.

PROTECTION OFF: Parameter can be changed.

* 1 hour after "PROTECTION OFF" is set, "PROTECTION ON" is automatically set.

* Protection is set after turning power on.

For actual keying, refer to the typical operation indicated below.

Operation (example)	Change the protection from ON to OFF (suppose ID No. is "2234").	
Key operation	Description	Display
	Press the key in the measurement mode once to indicate "PAR. PROTECTION".	PAR.PROTECT PROTECTION ON
	Press the key once to blink the 2nd line.	PAR.PROTECT PROTECTION ON
	Press the key once to display "PROTECTION OFF".	PAR.PROTECT PROTECTION OFF
	Press the key once to display "PAR.PROTECTION".	PAR.PROTECT ** COMPLETE **
		↓
	Press the key once to indicate "0000" and blink the cursor.	INPUT ID NO. ****
	Note) If ID No. is "0000" (as factory set), press the key to release the protection.	INPUT ID NO. 0000
	Enter ID No. "2234" by the key or the key.	INPUT ID NO. 2234
	Press the key once.	INPUT ID NO. ** COMPLETE **
	* If ID No. does not coincide, "INPUT ERROR!" appears, and the input screen is resumed. ———— Protection canceled. ————	↓
		PAR.PROTECT PROTECTION OFF



CAUTION

About the change of parameter setting

When you change parameters of converter in current use which analog output or alarm has been set, if you change items which affect to the output or alarm, the output may change suddenly after display of "***COMPLETE***" and may generate alarm. If, especially, the output signal is being used for control, perform the signal lock on the system side prior to changing parameters.

Caution on change of parameter setting

When you change parameter settings, parameters will be saved in non-volatile memory at the time of pressing "ENT" key. Saved parameters have been maintained even power is off. However, when you change the parameter and turn off the power without pressing "ENT" key, parameters will not be saved. Thus, you should set the parameter again.

4.5. Display language

4.5.1. How to select the language

Description

- Indication language (English, Japanese, German, French, Spanish) is selectable.

Setting contents

English (default setting), Japanese, German, French, Spanish

For actual keying, refer to the typical operation indicated below. Set the protection to OFF beforehand. (See Section 4.4.1.)

Operation (example)	Select English for the display language.	
Key operation	Description	Display
	Press the key for 4 times to display "MAINTENANCE MODE".	MAINTENANCE MODE
	Press the key once to display "RAS INFORMATION".	RAS INFORMATION 0000000000000000
	Press the key for 8 times to display "SYSTEM LANGUAGE".	SYSTEM LANGUAGE JAPANESE
	Press the key once to blink on the 2nd line.	SYSTEM LANGUAGE JAPANESE
	Press the key for 4 times to display "ENGLISH".	SYSTEM LANGUAGE ENGLISH
	Press the key once to register.	SYSTEM LANGUAGE ** COMPLETE **
	----- English has been registered. -----	SYSTEM LANGUAGE ENGLISH
	Press the key or the key to display the measurement mode.	0.000 m/s 0.000 m3/h

Operation (example)	Select Japanese for the display language.	
Key operation	Description	Display
	Press the key for 4 times to display "MAINTENANCE MODE".	MAINTENANCE MODE
	Press the key once to display "RAS INFORMATION".	RAS INFORMATION 0000000000000000
	Press the key for 8 times to display "SYSTEM LANGUAGE".	SYSTEM LANGUAGE ENGLISH
	Press the key once to blink on the 2nd line.	SYSTEM LANGUAGE ENGLISH
	Press the key for 4 times to display "JAPANESE".	SYSTEM LANGUAGE JAPANESE
	Press the key once to register.	SYSTEM LANGUAGE ** トリカキ **
	----- Japanese has been registered. -----	トリカキ (LANGUAGE) ニホンゴ (JAPANESE)
	Press the key or the key to display the measurement mode.	0.000 m/s 0.000 m3/h

4.6. Checking and Setting of Piping Specifications/Detector

4.6.1. Checking piping parameter

Key operation	Description	Display
		<div>0.000 m/s</div> <div>0.000 m3/h</div>
	Press the key for 3 times to display "MEASURE SETUP".	MEASURE SETUP
 	Press the key once to display "SYSTEM UNIT".	SYSTEM UNIT ENGLISH
 	Press the key for 3 times to display "PROCESS SETTING".	PROCESS SETTING S= 31(93mm)
 	Press the key once to display "OUTER DIAMETER".	OUTER DIAMETER 60.00 mm
 	Press the key once to display "PIPE MATERIAL".	PIPE MATERIAL PVC
 	Press the key once to display "WALL THICKNESS".	WALL THICKNESS 4.00 mm
 	Press the key once to display "LINING MATERIAL".	LINING MATERIAL NO LINING
 	Press the key once to display "KIND OF FLUID".	KIND OF FLUID WATER
 	Press the key once to display "VISCOSITY".	VISCOSITY 1.003800 E-6m2/s
 	Press the key once to display "SENSOR MOUNT".	SENSOR MOUNT V METHOD
 	Press the key once to display "SENSOR TYPE".	SENSOR TYPE FSSA/FSSG
	Press the key twice, and press the key twice to return to the measurement mode.	<div>0.000 m/s</div> <div>0.000 m3/h</div>

4.6.2. Piping parameter setting method

Description

- Set the parameters of piping and fluid to be measured to determine the sensor mounting spacing.
- The mounting dimension of the sensor is automatically calculated. Refer to "5.1.1 PRODUCT OUTLINE".



CAUTION

Be sure to set the following parameters before mounting the sensor on the pipe. Mount the sensor to match the sensor mounting length.

- Unless the sensor units are spaced accurately, the measurement error will be excessive.
- Also, the received wave may be abnormal.

Setting items

1. Pipe outer diameter : 6.00 to 6200.00 [mm] (factory set at 60.00 [mm]).
2. Piping material : CARBON STEEL, STAINLESS STEEL, PVC (factory set), COPPER, CAST IRON, ALUMINIUM, FRP, DUCTILE IRON, PEEK, PVDF, ACRYLIC, PP, Others (Sound velocity: 1000 to 3700[m/s])
3. Wall thickness : 0.10 to 100.00 [mm] (factory set at 4.00 [mm]).
4. Lining material : NO LINING (factory set), TAR EPOXY, MORTAR, RUBBER, TEFLON, PYREX GLASS, PVC, Others (Sound velocity: 1000 to 3700[m/s])
5. Lining thickness : 0.10 to 100.00 [mm]
6. Measuring fluid : WATER, SEAWATER, DIST.WATER, AMMONIA, ALCOHOL, BENZENE, ETHANOL, GLYCOL, KEROSENE, MILK, METHANOL, TOLUOL, LUBE OIL, FUEL OIL, PETROL, REFRIGERANT R410, Others (Sound velocity: 300 to 2500[m/s])
7. Dynamic viscosity coefficient : 0.0010 to 999.999×10^{-6} [m²/s] (factory set at 1.0038×10^{-6} [m²/s])
8. Detector mounting method : V method (factory set), Z method Refer to "5.2.Selection of mounting method"
9. Detector type : FSSA/FSSG (factory set), FLS_12/FLS_22, FSSC,FSG_32, FSG_31/FSG-41, FSSE/FSG_50, FSSF/FSG_51, FSD12, FSSD/FSD22,FSSH/FSD32

Note) If the sensor type is previous type, make a setting change for current type.

Previous type	Current type	Previous type	Current type
FLD22	FSD22	FLW41	FSG_41
FLD32	FSD32	FLW50	FSG_50
FLW11	FSG_31	FLW51	FSG_51
FLW12	FSG_32		

For concrete keying, refer to the typical operation indicated below. Set the protection to OFF beforehand. (See Section 4.4.1.)

(1) Setting method when sensor type is "FSSA".

Operation (example)	Carry out setting for measuring the flow rate of water flowing through PVC pipe (for tap water) using FSSA detector.	
Key operation	Description	Display
		<div>0.000 m/s</div> <div>0.000 m3/h</div>
	Press the key for 3 times to display "MEASURE SETUP".	MEASURE SETUP
	Press the key once to display "SYSTEM UNIT".	SYSTEM UNIT
		METRIC
	Press the key for 3 times to display "PROCESS SETTING".	PROCESS SETTING
		S= 16 (48mm)
	Press the key once to display "OUTER DIAMETER".	OUTER DIAMETER
		60.00 mm
	Press the key once to blink the cursor.	OUTER DIAMETER
		0160.00 mm
		0160.00 mm
		0160.00 mm
		0110.00 mm
		0110.00 mm
	Move the cursor by the key, and change the numeric value by the key. Operated to compose "114" because, from Piping data in Section 7.4., the outer diameter of polyvinyl chloride pipe (tap water size) is 114 mm.	OUTER DIAMETER
		0114.00 mm

ENT	Press the ENT key once to register the outer diameter.	OUTER DIAMETER ** COMPLETE **
▼		↓
▼	Outer diameter has been registered.	OUTER DIAMETER 114.00 mm
▼		
△	Press the △ key once to display "PIPE MATERIAL".	PIPE MATERIAL
▼	Because PVC (factory set) is already registered, go to the next step.	PVC
	Note) If the pipe is made of another material, press ENT key, and select	
	a corresponding menu by the △ key.	
△	Press the △ key once to display "WALL THICKNESS".	WALL THICKNESS
▼		4.00 mm
ENT	Press the ENT key once to blink the cursor.	WALL THICKNESS 004.00 mm
▼		004.00 mm
△ ▶	Move the cursor by the ▶ key, and change the numeric value by the	WALL THICKNESS
▼	△ key.	007.00 mm
	Operated to compose "7" because, from Piping data in Section 7.4., the	
	wall thickness of polyvinyl chloride pipe (tap water size) is 7.0mm.	
ENT	Press the ENT key once to register the wall thickness.	WALL THICKNESS ** COMPLETE **
▼		↓
▼	Wall thickness has been registered.	WALL THICKNESS 7.00 mm
▼		
△	Press the △ key once to display "LINING MATERIAL".	LINING MATERIAL
▼	"NO LINING" (factory set) is already registered. Because there is no	NO LINING
	lining, go to the next step.	
	Note) If lining is provided, press the ENT key and △ key to select the	
	material or enter the sound velocity. Further, go to "LINING	
	THICKNESS", and input a lining thickness. Nothing is indicated in	
	case of "NO LINING".	
△	Press the △ key once to display "KIND OF FLUID". Because, also,	KIND OF FLUID
▼	"WATER" (factory set) is already registered, go to the next step.	WATER
	Note) If fluid to be measured is other than water, press the ENT key, and	
	select the menu or enter the sound velocity.	
△	Press the △ key once to display "VISCOSITY".	VISCOSITY
▼	Input the kinematic viscosity of the fluid to be measured.	1.0038 E-6m2/s
	Because the kinematic viscosity 1.0038E-6 [m ² /s] of water at 20°C is	
	already registered, go to the next step.	
	In case of fluid other than water, input the kinematic viscosity at a	
	measurement status of fluid to be measured referring to data in Section	
	7.4., etc.	
ESC	Press the ESC key once to display "PROCESS SETTING".	PROCESS SETTING
▼	"S=31" is indicated on the 2nd line.	S= 31 (93mm)
	After mounting the frames on piping, insert into it 2 sensor units spaced	
	at 31 divisions.	
ESC △	Press the ESC key once and the △ key twice to return to the	0.000 m/s
	measurement mode.	0.000 m3/h

(2) Setting method when sensor type is not “FSSA”

Operation (example)	Carry out setting for measuring the flow rate of water flowing through PVC pipe (for tap water) having 100 mm of nominal diameter, using FSSC detector. * Settings of piping and fluid to be measured are omitted, since it is same as “(1) Setting method when sensor type is “FSSA”	
Key operation	Description	Display
	Press the key for 3 times to display “MEASURE SETUP”.	MEASURE SETUP
 	Press the key once to display “SYSTEM UNIT”.	SYSTEM UNIT METRIC
 	Press the key for 3 times to display “PROCESS SETTING”.	PROCESS SETTING S= 31 (93mm)
 	Press the key once to display “OUTER DIAMETER”.	OUTER DIAMETER 114.00 mm
 	Press the key for 7 times to blink the cursor.	SENSOR TYPE FSSA/FSSG
 	Press the key once to blink the cursor.	SENSOR TYPE FSSA/FSSG
 	Press the key for 2 times to display “FSSC” on the 2nd line.	SENSOR TYPE FSSC
 	Press the key once to register “FSSC”.	SENSOR TYPE ** COMPLETE **
 	----- “FSSC” has been registered. -----	↓ SENSOR TYPE FSSC
 	Press the key once to display “PROCESS SETTING”.	PROCESS SETTING S= 58.43mm
	“S=58.43mm” is displayed on the 2nd line. Align the sensor mounting spacing to 58.43mm, and attach the sensor to the pipe.	
	Press the key once and the key twice to return to the measurement mode.	0.000 m/s 0.000 m3/h

4.7. Zero Adjustment

Description

- Zero point is calibrated.

Settable range:

CLEAR : Clears the zero point calibration value to "0".

Used in case the flow cannot be stopped when calibrating the zero point.

Note 1) Where possible, stop the flow and carry out "SET ZERO" stated below.

Otherwise, an error may occur in the zero point.

SET ZERO : A point where "SET ZERO" is carried out is regarded as zero, how condition used in case the flow cannot be stopped when calibrating the zero point.





















Note 2) The flow must completely be stopped.

Otherwise, the flowing status is regarded as zero, thereby causing an error.

Please carry out adjustment under the normal measurement condition.

It takes 30 seconds to 2 minutes to complete adjustment depending on pipe diameter.

For actual keying, refer to the typical operation indicated below. Set the protection to OFF beforehand. (See Section 4.4.1.)

Operation (example)	Completely fill the piping, close the upstream and downstream valves, and proceed to zero point calibration.	
Key operation	Description	Display
	Press the  key twice to display "OUTPUT SETUP".	OUTPUT SETUP
		
	Press the  key twice to display "ZERO ADJUSTMENT" and blink the cursor.	ZERO ADJUSTMENT CLEAR
		
	Press the  key once, and select "SET ZERO".	ZERO ADJUSTMENT SET ZERO
		
	Press the  key once to carry out "SET ZERO".	ZERO ADJUSTMENT ** ADJUSTMENT **
	"ADJUSTMENT" is blinking.	↓
	* Be sure to completely stop the flow beforehand.	ZERO ADJUSTMENT ** COMPLETE **
	——— Zero adjustment has been completed. ———	
	* When carrying out "SET ZERO" under the abnormal condition, "NO SET ZERO" is displayed after zero point setting.	
	Press the  key once to return "SET ZERO".	ZERO ADJUSTMENT SET ZERO
 	Press the  key once, and the  key for 3 times to enter the measurement mode.	0.000 m/s 0.000 m3/h

4.8. Setting of unit

4.8.1. How to set the unit system

Description

- Measurement unit can be selected from metric or inch system.

- Metric system (factory set)

Length..... mm

Flow velocity..... m/s






















Flow rate L/s, L/min, L/h, L/d, kL/d, ML/d, m³/s, m³/min, m³/h, m³/d, km³/d, Mm³/d, BBL/s, BBL/min, BBL/h, BBL/d, kBBL/d, MBBL/d

Total unit..... mL, L, m³, km³, Mm³, mBBL, BBL, kBBL

Kinematic viscosity coefficient..... E⁻⁶m²/s

<Note> When setting, stop status should be set at total mode. (See Section 4.9.2.)

For actual keying, refer to the typical operation indicated below. Set the protection to OFF beforehand. (See Section 4.4.1.)

Operation (example)	Change the unit system from inch system to metric system.	
Key operation	Description	Display
	Press the  key for 3 times to display "MEASURE SETUP".	MEASURE SETUP
		
	Press the  key once to display "SYSTEM UNIT".	SYSTEM UNIT INCH
		
	Press the  key once to blink the cursor.	SYSTEM UNIT INCH
		
	Press the  key once to display "METRIC".	SYSTEM UNIT METRIC
		
	Press the  key once to register.	SYSTEM UNIT ** COMPLETE **
		
		
		
 	Press the  key once and  key twice to return to the measurement mode.	0.000 m/s 0.000 m3/h

4.8.2. How to set the flow rate unit

Description

● Select the unit of flow rate.

● Metric system

Flow rate.....L/s, L/min, L/h, L/d, kL/d, ML/d, m³/s, m³/min, m³/h (factory set), m³/d, km³/d, Mm³/d, BBL/s, BBL/min, BBL/h, BBL/d, kBBL/d, MBBL/d

<Note> First, set the unit system (metric) according to Section 4.8.1.

For actual keying, refer to the typical operation indicated below. Set the protection to OFF beforehand. (See Section 4.4.1.)

Operation (example)	Set a flow rate unit to "L/min".	
Key operation	Description	Display
<div>△</div>	Press the △ key for 3 times to display "MEASURE SETUP".	MEASURE SETUP
▼ ENT	Press the ENT key once to display "SYSTEM UNIT".	SYSTEM UNIT METRIC
▼ △	Press the △ key once to display "FLOW UNIT".	FLOW UNIT m3/h
▼ ENT	Press the ENT key once to blink the cursor.	FLOW UNIT m3/h
▼ △	Press the △ key several times to display "L/min".	FLOW UNIT L/min
▼ ENT	Press the ENT key once to register.	FLOW UNIT ** COMPLETE **
▼ ▼ ▼ ▼	—— "L/min" has been registered. ——	↓ FLOW UNIT L/min
ESC △	Press the ESC key once and the △ key twice to return to the measurement mode.	0.000 m/s 0.000 L/min

4.8.3. How to set the total unit

Description

- Select the unit of total volume.
- Metric system
 - Total unit····· mL, L, m³ (factory set), km³, Mm³, mBBL, BBL, kBBL

<Note> First, set the unit system (metric) according to Section 4.8.1.
When setting, stop status should be set at total mode. (See Section 4.9.2.)

For actual keying, refer to the typical operation indicated below. Set the protection to OFF beforehand. (See Section 4.4.1.)

Operation (example)	Set a flow total unit to "L".	
Key operation	Description	Display
<div>△</div>	Press the △ key for 3 times to display "MEASURE SETUP" .	MEASURE SETUP
<div>▼</div> <div>ENT</div>	Press the ENT key once to display "SYSTEM UNIT".	SYSTEM UNIT METRIC
<div>▼</div> <div>△</div>	Press the △ key once to display "TOTAL UNIT".	TOTAL UNIT m3
<div>▼</div> <div>ENT</div>	Press the ENT key once to blink the cursor.	TOTAL UNIT m3
<div>▼</div> <div>△</div>	Press the △ key twice to display "L".	TOTAL UNIT L
<div>▼</div> <div>ENT</div>	Press the ENT key once to register.	TOTAL UNIT ** COMPLETE **
<div>▼</div> <div>▼</div> <div>▼</div> <div>▼</div>	———— "L" has been registered. ————	↓ TOTAL UNIT L
<div>ESC</div> <div>△</div>	Press the ESC key once and the △ key twice to return to the measurement mode.	0.000 L 0.000 L/min

4.9. Output Setting


4.9.1. Setting of flow rate range

4.9.1.1. Setting of flow rate range (single range)

Description

- The range (full scale) of flow rate to be measured is set.
 - * The analog output (4-20mA) corresponds to the range setting.
- Settable range: 0.3 to 32 [m/s] in terms of flow velocity in piping
 - * The piping parameters and FLOW UNIT must be set beforehand.
 - * If a value beyond the settable range is inputted, "INPUT ERROR" appears and then last setting is resumed.
 - * If "piping parameters" or "FLOW UNIT" has been changed after setting the range, recommence the range setting.

<Note> The flow rate unit is as selected by "FLOW UNIT" in the "MEASURE SETUP" mode.
(Refer to Section 4.8.2.)

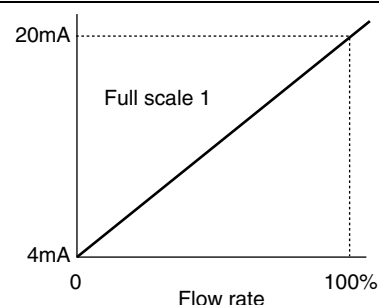

• Setting range of the full scale flow rate

- <Note> • Converted flow rate in the Table 1 is the calculation results obtained by using the internal diameters of pipes in the left columns.
Perform calculation using the actual internal diameters for accuracy.
- Simple formula for calculation of flow velocity



Flow velocity range: 0.3 ~ 32 [m/s] <Table1>

Int. dia. of pipes [mm]	Flow rate unit	
	[m ³ /h]	[L/min]
25	0.530 to 56.5	8.84 to 942
50	2.12 to 226	35.3 to 3770
80	5.43 to 579	90.5 to 9651
100	8.48 to 905	141 to 15080
150	19.1 to 2036	318 to 33929
200	33.9 to 3619	565 to 60319
300	76.3 to 8143	1272 to 135717

For actual keying, refer to the typical operation indicated below. Set the protection to OFF beforehand. (See Section 4.4.1.)

Operation (example)	Set the range type to single range and "FULL SCALE1" to flow rate 60m3/h. * Set the piping parameters and "FLOW UNIT" beforehand.	
Key operation	Description	Display
	Press the key twice to display "OUTPUT SETUP".	OUTPUT SETUP
	Press the key to enter the "ZERO ADJUSTMENT" mode.	ZERO ADJUSTMENT SET ZERO
	Press the key for 4 times to display "RANGE".	RANGE
	Press the key once to display "KIND".	KIND FLOW RATE
	Press the key to display "RANGE TYPE".	RANGE TYPE SINGLE
	Press the key once to display "FULL SCALE1".	FULL SCALE1 15.000 m3/h
	Press the key once to blink the cursor.	FULL SCALE1 00015.000 m3/h
	Move the cursor by the key, and change the numeric value by the key.	00015.000 m3/h
		0005.000 m3/h
		0006.000 m3/h
	Change the full scale1 to "60". Note) To change the decimal point position, align the cursor with a place to change to and press the key likewise.	FULL SCALE1 000060.0 m3/h
	Press the key once to register.	FULL SCALE1 ** COMPLETE **
	----- FULL SCALE1 has been registered. -----	FULL SCALE1 60.000 m3/h



Press the  key for 2 times and then press the  key for 3 times to enter the measurement mode.

0.000	m/s
0.000	m ³ /h

4.9.1.2. Setting of analog output at error (Burnout)

Description

- Determine how to set the analog output when received wave error, etc. due to device error, accidental drain of piping or entry of bubbles.
- Settable range
 - (1) Analog output (4-20mA) at error
 - HOLD (factory set): Outputs a current value preceding the error.
 - UPPER : Sets analog output to upper of the output limit (over scale).
 - LOWER : Sets analog output to lower of the output limit (under scale).
 - ZERO : Outputs 4mA.
 - (2) BURNOUT TIMER (time from error detection to BURNOUT processing) 10 to 900 seconds (factory set at 10 sec). Please set 10 seconds or more.
- * Perform BURNOUT processing as shown below.
 1. LCD display..... Measured value operates with analog output.


For actual keying, refer to the typical operation indicated below. Set the protection to OFF beforehand. (See Section 4.4.1.)

Operation (example)	Set "UPPER" to BURNOUT. Set "20sec" to BURNOUT TIMER. * Set the piping parameters and "FLOW UNIT" beforehand.	
Key operation	Description	Display
	Press the key twice to display "OUTPUT SETUP".	OUTPUT SETUP
	Press the key once to display "ZERO ADJUSTMENT".	ZERO ADJUSTMENT SET ZERO
	Press the key for 4 times to display "RANGE".	RANGE
	Press the key once to display "KIND".	KIND FLOW RATE
	Press the key for 5 times to display "BURNOUT" (CURRENT).	BURNOUT (CURRENT) HOLD
	Press the key once to blink on the 2nd line.	BURNOUT (CURRENT) HOLD
	Press the key once to display "UPPER".	BURNOUT (CURRENT) UPPER
	Press the key once to register.	BURNOUT (CURRENT) ** COMPLETE **
	—— UPPER has been registered. ——	BURNOUT (CURRENT) UPPER
	Press the key once to display "BURNOUT TIMER".	BURNOUT TIMER 10 sec
	Press the key once to blink the cursor.	BURNOUT TIMER 010 sec
	Press the key once to align the cursor to "1".	BURNOUT TIMER 010 sec
	Press the key once to set "2".	BURNOUT TIMER 020 sec
	Press the key once to register.	BURNOUT TIMER ** COMPLETE **
	—— BURNOUT TIMER has been registered. ——	BURNOUT TIMER 20 sec
	Press the key twice and then press the key for 3 times to enter the measurement mode.	0.000 m/s 0.000 m3/h

4.9.1.3. Output limit

Description

- Upper and lower limits can be set within the range of analog output 0.8mA to 23.2mA (-20% to 120%).
- Settable range
 - (1) Output lower limit: -20% to 0% (0.8mA to 4mA)
 - (2) Output upper limit: 100% to 120% (20mA to 23.2mA)

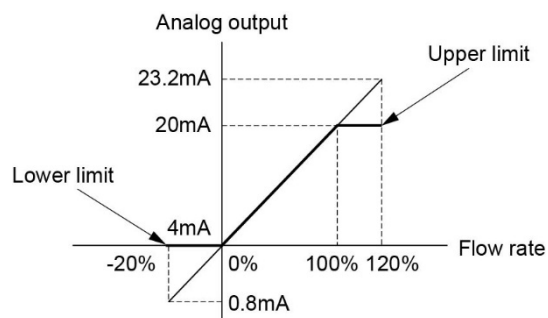

For actual keying, refer to the typical operation indicated below. Set the protection to OFF beforehand. (See Section 4.4.1.)

Operation (example)	Set "-10% (2.4mA)" to lower limit, and "110% (21.6mA)" to upper limit. * Set the piping parameters and "FLOW UNIT" beforehand.	
Key operation	Description	Display
	Press the key twice to display "OUTPUT SETUP".	OUTPUT SETUP
	Press the key once to display "ZERO ADJUSTMENT".	ZERO ADJUSTMENT SET ZERO
	Press the key for 4 times to display "RANGE".	RANGE
	Press the key once to display "KIND".	KIND FLOW RATE
	Press the key for 7 times to display "OUTPUT LIMIT LOW".	OUTPUT LIMIT LOW -20 %
	Press the key once to blink the cursor.	OUTPUT LIMIT LOW -20 %
	Press the key once to align the cursor to "2".	OUTPUT LIMIT LOW -20 %
	Press the key several times to set "1".	OUTPUT LIMIT LOW -10 %
	Press the key once to register.	OUTPUT LIMIT LOW ** COMPLETE **
	----- OUTPUT LIMIT LOW has been registered. -----	OUTPUT LIMIT LOW -10 %
	Press the key once to display "OUTPUT LIM. HIGH".	OUTPUT LIM. HIGH 120 %
	Press the key once to blink the cursor.	OUTPUT LIM. HIGH 120 %
	Press the key once to align the cursor to "2".	OUTPUT LIM. HIGH 120 %
	Press the key several times to set "1".	OUTPUT LIM. HIGH 110 %
	Press the key once to register.	OUTPUT LIM. HIGH ** COMPLETE **
	----- OUTPUT LIM. HIGH has been registered. -----	OUTPUT LIM. HIGH 110 %
	Press the key twice and then press the key for 3 times to enter the measurement mode.	0.000 m/s 0.000 m3/h

4.9.2. Setting the total(actual)

4.9.2.1. Setting the total pulse (total rate, pulse width)

Description

- Set to totalize a process variable (flow rate) by total meter, etc. according to total pulse output.
- Total rate : Total amount (volume) per pulse.
A pulse is outputted when the total volume has attained an amount set by the pulse value, and adds to the total pulse count (in case of total pulse indication). Settable range: 0.000001 to 99999999
* Set the total unit before setting the pulse value. (See Section 4.8.3.)
- Pulse width: Width of total pulse output.
Select a pulse width according to a corresponding total meter out of menus. Settable range: 5ms, 10ms, 50ms, 100ms, 200ms, 500ms, 1000ms.
- Restrictions in the setup
Output of total pulses involves the following restrictions depending on the DO output port (DO1 and DO2).

DO output port	Frequency range of pulse output (at full scale flow rate)	Pulse width
DO1, DO2: Transistor, open collector	100 pulse/sec	5ms, 10ms, 50ms, 100ms, 200ms

The maximum output frequency is also restricted by the setup of the pulse width. Therefore, set the pulse width and pulse value so that both of condition 1 and condition 2 indicated below are satisfied. Correct results may not occur, if any setup that does not satisfy both of condition 1 and condition 2 is made.

Condition 1:

$$\frac{\text{FULL SCALE}^{(\text{Note1})} [\text{m}^3/\text{s}]}{\text{TOTAL RATE} [\text{m}^3]} \leq 100[\text{Hz}]$$

Condition 2:

$$\frac{\text{FULL SCALE}^{(\text{Note1})} [\text{m}^3/\text{s}]}{\text{TOTAL RATE} [\text{m}^3]} \leq \frac{1000}{2 \times \text{PULSE WIDTH} [\text{ms}]}$$

Note 1) The range of FULL SCALE1 or FULL SCALE2, whichever is larger, is the object in the case of automatic 2-range setup, forward and reverse range setup or forward and reverse automatic 2-range setup.

Note 2) The output frequency on the output ports is limited when the flow rate exceeds the set range. Therefore, if such a setup that the maximum frequency per range occurs at the time of 100% flow rate, there is possibility that the total pulse output will be incapable of following when the flow rate exceeds 100%, and accurate total value cannot be obtained if over-range continues for a long time. If there are cases where the flow rate exceeds 100%, modify the set range and pulse value so that the maximum frequency will not exceed the restricted level.

Example of calculation

Calculate the range that permits setup of the total value under the range and pulse width indicated below.

When the range and the pulse width are as follows.

FLOW SPAN -1: 36[m³/h] (=0.01[m³/s]), Pulse width:50[ms]

Condition 1

$$\begin{aligned} \text{TOTAL RATE} &\geq \frac{\text{FULL SCALE} [\text{m}^3/\text{s}]}{100[\text{Hz}]} = \frac{0.01 [\text{m}^3/\text{s}]}{100 [\text{Hz}]} \\ &= 0.0001 [\text{m}^3] = 0.1 [\text{L}] \end{aligned}$$

As above:

$$0.1 [\text{L}] \leq \text{TOTAL RATE} \dots\dots\dots \text{A}$$

Condition 2

$$\begin{aligned} \text{TOTAL RATE} &\geq \text{FULL SCALE} [\text{m}^3/\text{s}] \times \frac{2 \times \text{PULSE WIDTH} [\text{ms}]}{1000} = 0.01 [\text{m}^3/\text{s}] \times \frac{2 \times 50 [\text{ms}]}{1000} \\ &= 0.001 [\text{m}^3] = 1 [\text{L}] \dots\dots\dots \text{B} \end{aligned}$$

The settable range of the total value that satisfies both of condition 1 and condition 2 is as follows from results of calculation A and B.

$$1 [\text{L}] \leq \text{TOTAL RATE}$$

Note) When the total setting value is "0", total pulse is not output.

Note) When setting, stop status is set at the total mode.

For actual keying, refer to the typical operation indicated below. Set the protection to OFF beforehand. (See Section 4.4.1.)

Operation (example)	Set total value to 0.1m ³ /pulse, and pulse width to 100ms. * Set the total value beforehand.	
Key operation	Description	Display
	Press the key twice to display "OUTPUT SETUP".	OUTPUT SETUP
	Press the key once to display "ZERO ADJUSTMENT".	ZERO ADJUSTMENT SET ZERO
	Press the key for 5 times to display "TOTAL".	TOTAL
	Press the key once to display "TOTAL MODE".	TOTAL MODE STOP
	Press the key once to display "TOTAL RATE".	TOTAL RATE 0 m3
	Press the key once to display the cursor.	TOTAL RATE 000000000 m3
	Press the key for 7 times to move the cursor.	TOTAL RATE 00000000 m3
	Press the key several times to display decimal point.	TOTAL RATE 0000000.0 m3
	Press the key once to move the cursor.	TOTAL RATE 0000000.0 m3
	Press the key once to display "1".	TOTAL RATE 0000000.1 m3
	Press the key once to register.	TOTAL RATE ** COMPLETE **
	----- "TOTAL RATE" has been registered. -----	↓ TOTAL RATE 0.1 m3
	Press the key twice to display "PULSE WIDTH".	PULSE WIDTH 50.0 msec
	Press the key once to blink the cursor.	PULSE WIDTH 50.0 msec
	Press the key twice, and select "100.0msec".	PULSE WIDTH 100.0 msec
	Press the key once to register.	PULSE WIDTH ** COMPLETE **
	----- PULSE WIDTH has been registered. -----	↓ PULSE WIDTH 100.0 msec
	Press the key for 3 times to display "TOTAL MODE".	TOTAL MODE STOP
	Press the key once to blink the cursor.	TOTAL MODE STOP
	Press the key once, and select "TOTAL PRESET".	TOTAL MODE TOTAL RESET
	Press the key once to register.	TOTAL MODE ** COMPLETE **
	----- TOTAL MODE has been registered. -----	↓ TOTAL MODE TOTAL RESET
	Press the key twice and then press the key for 3 times to enter the measurement mode.	0.000 m/s 0.000 m3/h

4.9.2.2. Setting the preset value

Description


- Preset value: Value which appears on the total counter when the total value has been reset.

Settable range: 0 to 99999999

<Note> A resetting action simultaneously resets both forward total memory and reverse total memory.

Set the total unit beforehand in the MEASURE SETUP mode. (Refer to 4.8.3.)

When setting, stop status is set at the total mode.

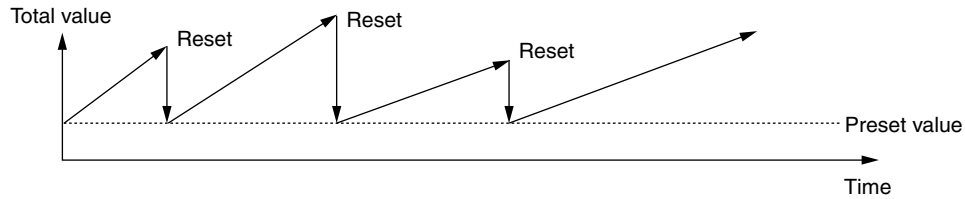

For actual keying, refer to the typical operation indicated below. Set the protection to OFF beforehand. (See Section 4.4.1.)

Operation (example)	Set the preset value to 100m ³ . * Set the total unit beforehand.	
Key operation	Description	Display
	Press the key twice to display "OUTPUT SETUP".	OUTPUT SETUP
	Press the key once to display "ZERO ADJUSTMENT".	ZERO ADJUSTMENT SET ZERO
	Press the key for 5 times to display "TOTAL".	TOTAL
	Press the key once to display "TOTAL MODE".	TOTAL MODE STOP
	Press the key twice to display "TOTAL PRESET"	TOTAL PRESET 0 m3
	Press the key once to display the cursor.	TOTAL PRESET 0000000
	Press the key for 6 times to move the cursor. * Note that, it cannot be entered on the first digit (leftmost).	TOTAL PRESET 0000000
	Press the key once to display "1".	TOTAL PRESET 00000100 m3
	Press the key once to register.	TOTAL PRESET ** COMPLETE **
	—— "TOTAL PRESET" has been registered. ——	TOTAL PRESET 100 m3
	Press the key for 4 times to display "TOTAL MODE".	TOTAL MODE STOP
	Press the key once to blink the cursor.	TOTAL MODE STOP
	Press the key once, and select "TOTAL PRESET".	TOTAL MODE TOTAL RESET
	Press the key once to register.	TOTAL MODE ** COMPLETE **
	—— "TOTAL MODE" has been registered. ——	TOTAL MODE TOTAL RESET
	Press the key twice and then press the key for 3 times to enter the measurement mode.	0.000 m/s 0.000 m3/h

4.9.2.3. TOTAL mode (total reset, start, stop)

Description

- The total is started, stopped or reset.
- Settable range: START, STOP, TOTAL RESET
 - START : Starts totalizing. Totalizes continuously from the stopped status.
 - STOP : Stops totalizing. Setting cannot be changed when it is not stopped.
 - RESET : Resets the total memory to the reset value, and starts totalizing.

<Note> A resetting action simultaneously resets both forward total memory and reverse total memory.

For actual keying, refer to the typical operation indicated below. Set the protection to OFF beforehand. (See Section 4.4.1.)

Operation (example)	Reset the total value (reset value 0m³), and restart a total. *Set the "TOTAL UNIT" beforehand. Refer to "4.9.4 Setting the LCD indication"	
Key operation	Description	Display
		<div>0.00m3/h</div> <div>+127.26m3</div>
<div>△</div>	Press the <div>△</div> key twice to display "OUTPUT SETUP".	<div>OUTPUT SETUP</div>
<div>▼</div> <div>ENT</div>	Press the <div>ENT</div> key once to display "ZERO ADJUSTMENT".	<div>ZERO ADJUSTMENT</div> <div>SET ZERO</div>
<div>▼</div> <div>△</div>	Press the <div>△</div> key for 5 times to display "TOTAL".	<div>TOTAL</div>
<div>▼</div> <div>ENT</div>	Press the <div>ENT</div> key once to display "TOTAL MODE".	<div>TOTAL MODE</div> <div>START</div>
<div>▼</div> <div>ENT</div>	Press the <div>ENT</div> key once to blink the cursor.	<div>TOTAL MODE</div> <div>START</div>
<div>▼</div> <div>△</div>	Press the <div>△</div> key twice to display "TOTAL RESET".	<div>TOTAL MODE</div> <div>TOTAL RESET</div>
<div>▼</div> <div>ENT</div>	Press the <div>ENT</div> key twice to execute "TOTAL RESET".	<div>TOTAL MODE</div> <div>** COMPLETE **</div>
<div>▼</div> <div>▼</div> <div>▼</div> <div>▼</div>	----- The total operation is started. -----	<div>TOTAL MODE</div> <div>TOTAL RESET</div>
<div>ESC</div> <div>△</div>	Press the <div>ESC</div> key twice and then press the <div>△</div> key for 3 times to enter the measurement mode.	<div>0.00m3/h</div> <div>0.00m3</div>

4.9.2.4. Determining how to dispose of total at error (BURNOUT)

Description

BURNOUT (TOTAL)

- Determines how to dispose of the total when the measurement status is abnormal on account of an empty pipe interior or bubbles mixed in fluid (common to total indication and total pulse output).
- Settable range:
HOLD : Stops the total (as factory set).
NOT USED: Continues the total according to a flow rate marked immediately before the error occurrence.

BURNOUT TIMER

- Sets the time from error occurrence to error processing.
- Settable range: 10 to 900sec (factory set: 10sec) Please set 10 seconds or more.
The total continues until the burnout timer is actuated.

For actual keying, refer to the typical operation indicated below. Set the protection to OFF beforehand. (See Section 4.4.1.)

Operation (example)	Change the processing from "BURNOUT" to "HOLD", and change the burnout timer setting from 10 seconds to 15 seconds.	
Key operation	Description	Display
	Press the key twice to display "OUTPUT SETUP".	OUTPUT SETUP
	Press the key once to display "ZERO ADJUSTMENT".	ZERO ADJUSTMENT SET ZERO
	Press the key for 5 times to display "TOTAL".	TOTAL
	Press the key once to display "TOTAL MODE".	TOTAL MODE START
	Press the key for 4 times to display "BURNOUT(TOTAL)".	BURNOUT(TOTAL)
	Because HOLD (factory set) is already registered, go to the next step.	HOLD
	Note) For setting "NOT USED", press the //ENT key, and the /// key to select "NOT USED".	
	Press the key once to display "BURNOUT TIMER".	BURNOUT TIMER 10sec
	Press the key once to blink the cursor.	BURNOUT TIMER 010sec
	Press the key twice to move the cursor.	BURNOUT TIMER 010sec
	Press the key for 5 times to set "5".	BURNOUT TIMER 015sec
	Press the key once to register.	BURNOUT TIMER ** COMPLETE **
	—— BURNOUT TIMER has been registered. ——	BURNOUT TIMER 15sec
	Press the key twice and then press the key for 3 times to enter the measurement mode.	0.00 m3/h + 0.00 m3

4.9.3. Setting the DO output

Description

- Selects the output of total pulses and statuses (of alarm, flow switch, total switch, etc.).
- Settable range (common to DO1, DO2)
 - NOT USED : Does not use the contact output.
 - +TOTAL PULSE : Outputs the forward total pulses.
 - TOTAL PULSE : Outputs total pulse in reverse direction.
 - FULL SCALE 2 : Selects a contact output as FULL SCALE 2 measurement status.
(forward automatic 2 ranges, forward and reverse range, forward/reverse automatic 2 ranges)
- ALARM
 - ALL : Selects a contact output at HARDWARE FAULT or PROCESS ERROR status.
 - HARDWARE FAULT : Selects a contact output when circuit error such as memory occurred.
 - PROCESS ERROR : Selects a contact output when no waves are received, or waves are unstable.
- FLOW SWITCH
 - FLOW SW HIGH : Selects a contact output when flow rate is above the setting.
 - FLOW SW LOW : Selects a contact output when flow rate is below the setting.
- TOTAL SWITCH : Selects a contact output when total value exceeds the setting.
- AO RANGE OVER : Selects a contact output when the lower and upper limits of range are above the setting.
- PULSE RANGE OVER : Selects a contact output when the total pulse output exceeds the maximum output frequency.
- FLOW DIRECTION : Selects a contact output when the flow is in reverse direction.
- CONTACT ACTION
 - ACTIVE ON : Normally off
 - ACTIVE OFF : Normally on



CAUTION

- If the contact action is set to "ACTIVE OFF", DO output is provided when the power is turned on.
- Check if DO output can be modified before setting.

<Note> DO output specifications

DO1/DO2 : Open collector, Contact capacity 30V DC, 50mA
 When total pulse output is selected (Note: See 4.9.2.1)
 100 pulses/s or less (at full scale flow rate)
 Pulse width: 5, 10, 50, 100, 200,500 and 1000ms.

For actual keying, refer to the typical operation indicated below. Set the protection to OFF beforehand. (See Section 4.4.1.)


4.9.3.1. How to validate the total pulse output

Description

- Validates the total pulse output for DO1 OUT and/or DO2 OUT.
 - + TOTAL PULSE : Outputs flow rate total pulse in forward direction.
 - TOTAL PULSE: Reverse flow rate total pulse output.
- Note) Referring to Section 4.9.2.1., set the pulse value, pulse width, etc.

For concrete keying, refer to the typical operation indicated below. Set the protection to OFF beforehand. (See Section 4.4.1.)

Operation (example)	Set the DO1 output to "+ TOTAL PULSE". Also, set the contact to "ACTIVE ON".	
Key operation	Description	Display
	Press the key twice to display "OUTPUT SETUP".	OUTPUT SETUP
	Press the key once to display "ZERO ADJUSTMENT".	ZERO ADJUSTMENT SET ZERO
	Press the key for 6 times to display "DO1 OUT".	DO1 OUT NOT USED
	* Press the key again to display "DO2 OUT".	
	Press the key once to blink the cursor.	DO1 OUT NOT USED
	Press the key once to display "+ TOTAL PULSE " on the 2nd line.	DO1 OUT +TOTAL PULSE
	Press the key again to select "- TOTAL PULSE".	
	Press the key once to register "+TOTAL PULSE".	DO1 OUT ** COMPLETE **
		↓

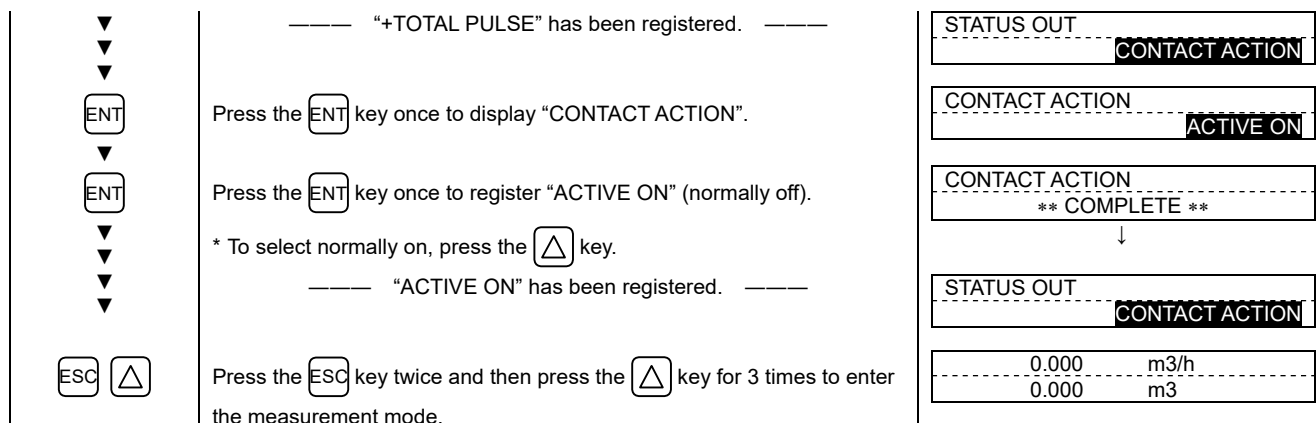

4.9.4. Setting the LCD indication

Description

- Flow velocity indication
Selectable flow velocity units: m/s (if SYSTEM UNIT was set to METRIC) (See 4.8.1)
<Note> The decimal point position is fixed. (Decimal point 3 digits)
- Flow rate indication
Selectable flow rate indications: Actual value reading, % reading.
<Note> The indication unit is as selected by FLOW UNIT. (See 4.8.2.)
- Total indication
Selectable total indications: Actual total value reading (forward/reverse flow), total pulse count (forward/reverse flow).
<Note> The indication unit is as selected by TOTAL UNIT. (See 4.8.3.)
- How to validate the indication
Set the DISPLAY setting mode to 1st ROW (for indication on 1st line) or 2nd ROW (for indication on 2nd line), and further select indication contents.

For actual keying, refer to the typical operation indicated below. Set the protection to OFF beforehand. (See Section 4.4.1.)

Operation (example)	Display the 1st line of LCD indication in percentages (%).	
Key operation	Description	Display
<div>▲</div>	Press the <div>▲</div> key twice to display "OUTPUT SETUP".	<div>OUTPUT SETUP</div>
<div>▼</div> <div>ENT</div>	Press the <div>ENT</div> key once to display "ZERO ADJUSTMENT".	<div>ZERO ADJUSTMENT</div> <div>SET ZERO</div>
<div>▼</div> <div>▲</div>	Press the <div>▲</div> key for 3 times to display "DISPLAY".	<div>DISPLAY</div> <div>DISPLAY 1</div>
<div>▼</div> <div>ENT</div>	Press the <div>ENT</div> key once to blink the cursor.	<div>DISPLAY</div> <div>DISPLAY 1</div>
<div>▼</div> <div>ENT</div>	Press the <div>ENT</div> key again, and select "1ST LOW".	<div>1ST LOW</div> <div>VELOCITY</div>
<div>▼</div> <div>▲</div>	Press the <div>▲</div> key twice to display "FLOW RATE(%)".	<div>1ST LOW</div> <div>FLOW RATE(%)</div>
<div>▼</div> <div>ENT</div>	Press the <div>ENT</div> key once, and select and fix "FLOW RATE(%) to display "1:DECIMAL POINT".	<div>1:DECIMAL POINT</div> <div>****.***</div>
<div>▼</div> <div>▶</div>	Press the <div>▶</div> key once to shift the decimal point position to next place.	<div>1:DECIMAL POINT</div> <div>****.*</div>
<div>▼</div> <div>ENT</div>	Press the <div>ENT</div> key once to register.	<div>1:DECIMAL POINT</div> <div>** COMPLETE **</div>
<div>▼</div> <div>▼</div> <div>▼</div> <div>▼</div>	——— FLOW RATE(%) indication has been set. ———	<div>1:DECIMAL POINT</div> <div>****.*</div>
<div>ESC</div> <div>▲</div>	Press the <div>ESC</div> key twice and then press the <div>▲</div> key for 3 times to enter the measurement mode.	<div>0.00</div> <div>0.000</div> <div>%</div> <div>m3</div>

4.9.5. Setting the damping

Description

● Used for attenuating the variation of measured value.
A time constant is set (response time of about 63%).

Settable range: 0.0 to 100.0sec in 0.1 sec steps

Note) In case you set to 0 sec, response time become as below.

- System cycle 0.2sec
- Dead time 0.2sec or less, time constant 0.1sec

For actual keying, refer to the typical operation indicated below. Set the protection to OFF beforehand. (See Section 4.4.1.)

Operation (example)	Change the damping from 5 to 20 sec.	
Key operation	Description	Display
<div><div>△</div><div>▼</div><div>ENT</div><div>▼</div><div>△</div><div>▼</div><div>ENT</div><div>▼</div></div>	<div>Press the △ key twice to display "OUTPUT SETUP".</div> <div>Press the ENT key once to display "ZERO ADJUSTMENT".</div> <div>Press the △ key once to display "DAMPING".</div> <div>Press the ENT key once to blink the cursor.</div>	<div>OUTPUT SETUP</div> <div>ZERO ADJUSTMENT SET ZERO</div> <div>DAMPING 5.0 sec</div> <div>DAMPING 005.0 sec</div> <div>005.0 sec</div> <div>025.0 sec</div> <div>025.0 sec</div>
<div><div>△▶</div><div>▼</div><div>ENT</div><div>▼</div><div>▼</div><div>▼</div><div>▼</div><div>ESC△</div></div>	<div>Set "20" by the △ key and the ▶ key.</div> <div>Press the ENT key once to register.</div> <div>———— DAMPING has been registered. ————</div> <div>Press the ESC key once and then press the △ key for 3 times to enter the measurement mode.</div>	<div>DAMPING 020.0 sec</div> <div>DAMPING ** COMPLETE **</div> <div>↓</div> <div>DAMPING 20 sec</div> <div>0.000 % 0.000 m3</div>

4.9.6. Setting the low flow rate cutting

Description

- The output can be cut when the flow rate is too small.
- Effective for indication, analog output (4-20mA) and total operation.

Settable range: 0 to 5 [m/s] in terms of flow velocity.
(Factory set: 0.150 [m³/h])

Note 1) As required, set the low flow rate cut because the flow meter may read a flow rate when the fluid in the piping is moving on account of convection, etc. even if the valves are closed.

Note 2) The flow rate unit is as selected by "FLOW UNIT" in "MEASURE SETUP".
(See 4.8.2.)

For actual keying, refer to the typical operation indicated below. Set the protection to OFF beforehand. (See Section 4.4.1.)

Output

Flow rate

Low flow cut setting value


Operation (example)	Set the low flow rate cut point to 0.5 [m³/h].	
Key operation	Description	Display
<div><div>△</div><div>▼</div><div>ENT</div><div>▼</div><div>△</div><div>▼</div><div>ENT</div><div>▼</div></div>	Press the <div>△</div> key twice to display "OUTPUT SETUP".	<div>OUTPUT SETUP</div>
	Press the <div>ENT</div> key once to display "ZERO ADJUSTMENT".	<div>ZERO ADJUSTMENT</div> <div>SET ZERO</div>
	Press the <div>△</div> key twice to display "CUT OFF".	<div>CUT OFF</div> <div>0.150 m3/h</div>
	Press the <div>ENT</div> key once to blink the cursor.	<div>CUT OFF</div> <div>0000.150 m3/h</div>
<div><div>△▶</div><div>▼</div><div>ENT</div><div>▼</div><div>▼</div><div>▼</div><div>▼</div></div>	Set "0.5" by the <div>△</div> key and the <div>▶</div> key.	<div>0000.150 m3/h</div> <div>0000.150 m3/h</div> <div>0000.550 m3/h</div> <div>0000.550 m3/h</div>
	Press the <div>ENT</div> key once to register.	<div>CUT OFF</div> <div>0000.500 m3/h</div>
	———— CUT OFF has been registered. ————	<div>CUT OFF</div> <div>** COMPLETE **</div>
		<div>↓</div> <div>CUT OFF</div> <div>0.500 m3/h</div>
		<div>0.000 %</div> <div>0.000 m3</div>
<div>ESC △</div>	Press the <div>ESC</div> key once and then press the <div>△</div> key for 3 times to enter the measurement mode.	

4.10. Application operation of parameter

4.10.1. Setting automatic 2 ranges





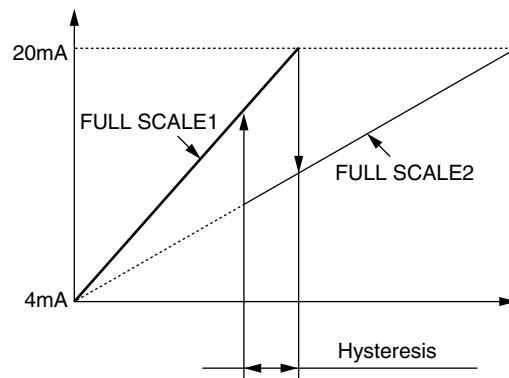



































Description

- The function carries out a measurement while changing over the range according to the flow rate.
- The current output changes with the action range as illustrated on the right.
- The hysteresis can be set to between 0 and 20% of the smaller range.
- Upon setting DO1 and/or DO2 to "FULL SCALE 2", a contact outputs "FULL SCALE 2" action. Select "ACTIVE ON" or "ACTIVE OFF" separately. (See 4.10.5.)
- Settable range: 0.3 to 32 [m/s] in terms of flow velocity in piping for any of FULL SCALE1 and FULL SCALE2.
 - * Preset PIPE PARAMETER and FLOW UNIT.
 - * If a value beyond the settable range is inputted, "INPUT ERROR" appears and then last setting is resumed.
 - * If "FLOW UNIT" has been changed after setting the range, redo the range setting.
 - * When FULL SCALE2 is not used (in the case of single range), set "0" to FULL SCALE2.



<Note> The flow rate unit is as selected by "FLOW UNIT". Before setting range, set the "FLOW UNIT". (See 4.8.2.)

For actual keying, refer to the typical operation indicated below. Set the protection to OFF beforehand. (See Section 4.4.1.)


Operation (example)	Set "AUTO 2" to "RANGE TYPE", 10[m³/h] to "FULL SCALE1", and 60[m³/h] to "FULL SCALE2". Set "RANGE HYS." to 7%. * Preset "PIPE PARAMETER" and "FLOW UNIT".	
Key operation	Description	Display
	Press the  key twice to display "OUTPUT SETUP".	OUTPUT SETUP
		
	Press the  key once to display "ZERO ADJUSTMENT".	ZERO ADJUSTMENT SET ZERO
		
	Press the  key for 4 times to display "RANGE".	RANGE
		
	Press the  key once to display "KIND"	KIND FLOW RATE
		
	Press the  key once to display "RANGE TYPE"	RANGE TYPE SINGLE RANGE
		
	Press the  key twice to blink the cursor.	RANGE TYPE SINGLE
		
	Press the  key once, and select "AUTO 2".	RANGE TYPE AUTO 2
		
	Press the  key once to display "RANGE TYPE".	RANGE TYPE AUTO 2
		
	Press the  key once to display "FULL SCALE1".	FULL SCALE1 20.0000 m3/h
		
	Press the  key once to blink the cursor on the 2nd line.	FULL SCALE1 0020.0000 m3/h
		
	Press the  key several times to align the cursor to "2".	FULL SCALE1 0020.0000 m3/h
		
	Press the  key several times to change to "1".	FULL SCALE1 0010.0000 m3/h
	Note) To change the decimal point position, align the cursor with a place to change to, and press the  key.	
	Press the  key once to register.	FULL SCALE1 ** COMPLETE **
		

<div style="text-align: center;">▼</div> <div style="text-align: center;">▼</div> <div style="text-align: center;">△</div> <div style="text-align: center;">▼</div> <div style="text-align: center;">ENT</div> <div style="text-align: center;">▼</div> <div style="text-align: center;">▶</div> <div style="text-align: center;">▼</div> <div style="text-align: center;">△</div> <div style="text-align: center;">▼</div> <div style="text-align: center;">ENT</div> <div style="text-align: center;">▼</div> <div style="text-align: center;">▼</div> <div style="text-align: center;">▼</div> <div style="text-align: center;">▼</div> <div style="text-align: center;">△</div> <div style="text-align: center;">▼</div> <div style="text-align: center;">ENT</div> <div style="text-align: center;">▼</div> <div style="text-align: center;">▼</div> <div style="text-align: center;">▼</div> <div style="text-align: center;">▼</div> <div style="text-align: center;">ESC △</div>	<p style="text-align: center;">----- FULL SCALE1 has been registered. -----</p> <p>Press the △ key once to display "FULL SCALE2".</p> <p>Press the ENT key once to blink the cursor.</p> <p>Press the ▶ key twice to move the cursor.</p> <p>Press the △ key for 6 times to set "6".</p> <p>Press the ENT key once to register.</p> <p style="text-align: center;">----- FULL SCALE2 has been registered. -----</p> <p>Press the △ key once to display "RANGE HYS.". </p> <p>Press the ENT key once to blink the cursor.</p> <p>Press the ▶ key once to move the cursor.</p> <p>Press the △ key twice to set "7".</p> <p>Press the ENT key once to register.</p> <p style="text-align: center;">----- RANGE HYS. has been registered. -----</p> <p>Press the ESC key twice and then press the △ key for 3 times to enter the measurement mode.</p>	<table border="1" style="width: 100%; border-collapse: collapse;"> <tr> <td colspan="3">FULL SCALE1</td> </tr> <tr> <td style="text-align: center;">10.0000</td> <td colspan="2" style="text-align: right;">m3/h</td> </tr> <tr> <td colspan="3">FULL SCALE2</td> </tr> <tr> <td style="text-align: center;">0.0000</td> <td colspan="2" style="text-align: right;">m3/h</td> </tr> <tr> <td colspan="3">FULL SCALE2</td> </tr> <tr> <td style="text-align: center;">0000.0000</td> <td colspan="2" style="text-align: right;">m3/h</td> </tr> <tr> <td colspan="3">FULL SCALE2</td> </tr> <tr> <td style="text-align: center;">0000.0000</td> <td colspan="2" style="text-align: right;">m3/h</td> </tr> <tr> <td colspan="3">FULL SCALE2</td> </tr> <tr> <td style="text-align: center;">0000.0000</td> <td colspan="2" style="text-align: right;">m3/h</td> </tr> <tr> <td colspan="3">FULL SCALE2</td> </tr> <tr> <td colspan="3" style="text-align: center;">** COMPLETE **</td> </tr> <tr> <td colspan="3" style="text-align: center;">↓</td> </tr> <tr> <td colspan="3">FULL SCALE2</td> </tr> <tr> <td style="text-align: center;">60.0000</td> <td colspan="2" style="text-align: right;">m3/h</td> </tr> <tr> <td colspan="3">RANGE HYS.</td> </tr> <tr> <td style="text-align: center;">5.00</td> <td colspan="2" style="text-align: right;">%</td> </tr> <tr> <td colspan="3">RANGE HYS.</td> </tr> <tr> <td style="text-align: center;">05.00</td> <td colspan="2" style="text-align: right;">%</td> </tr> <tr> <td colspan="3">RANGE HYS.</td> </tr> <tr> <td style="text-align: center;">05.00</td> <td colspan="2" style="text-align: right;">%</td> </tr> <tr> <td colspan="3">RANGE HYS.</td> </tr> <tr> <td style="text-align: center;">07.00</td> <td colspan="2" style="text-align: right;">%</td> </tr> <tr> <td colspan="3">RANGE HYS.</td> </tr> <tr> <td colspan="3" style="text-align: center;">** COMPLETE **</td> </tr> <tr> <td colspan="3" style="text-align: center;">↓</td> </tr> <tr> <td colspan="3">RANGE HYS.</td> </tr> <tr> <td style="text-align: center;">7.00</td> <td colspan="2" style="text-align: right;">%</td> </tr> <tr> <td colspan="3">0.000 %</td> </tr> <tr> <td colspan="3">0.000 m3</td> </tr> </table>	FULL SCALE1			10.0000	m3/h		FULL SCALE2			0.0000	m3/h		FULL SCALE2			0000.0000	m3/h		FULL SCALE2			0000.0000	m3/h		FULL SCALE2			0000.0000	m3/h		FULL SCALE2			** COMPLETE **			↓			FULL SCALE2			60.0000	m3/h		RANGE HYS.			5.00	%		RANGE HYS.			05.00	%		RANGE HYS.			05.00	%		RANGE HYS.			07.00	%		RANGE HYS.			** COMPLETE **			↓			RANGE HYS.			7.00	%		0.000 %			0.000 m3		
FULL SCALE1																																																																																												
10.0000	m3/h																																																																																											
FULL SCALE2																																																																																												
0.0000	m3/h																																																																																											
FULL SCALE2																																																																																												
0000.0000	m3/h																																																																																											
FULL SCALE2																																																																																												
0000.0000	m3/h																																																																																											
FULL SCALE2																																																																																												
0000.0000	m3/h																																																																																											
FULL SCALE2																																																																																												
** COMPLETE **																																																																																												
↓																																																																																												
FULL SCALE2																																																																																												
60.0000	m3/h																																																																																											
RANGE HYS.																																																																																												
5.00	%																																																																																											
RANGE HYS.																																																																																												
05.00	%																																																																																											
RANGE HYS.																																																																																												
05.00	%																																																																																											
RANGE HYS.																																																																																												
07.00	%																																																																																											
RANGE HYS.																																																																																												
** COMPLETE **																																																																																												
↓																																																																																												
RANGE HYS.																																																																																												
7.00	%																																																																																											
0.000 %																																																																																												
0.000 m3																																																																																												

4.10.2. Setting the Bi-directional range

Description

- The function measures the flow rate of either forward or reverse flow while changing over the range corresponding to the flow direction.
- The current output changes with the action range as illustrated on the right.
- The hysteresis can be set to between 0 and 20% of the action range.
- Upon setting DO1 and/or DO2 to "FULL SCALE2", a contact outputs "FULL SCALE2" action.
Select "ACTIVE ON" or "ACTIVE OFF" separately. (See 4.10.5.)
- Settable range: ± 0.3 to $32[\text{m/s}]$ in terms of flow velocity in piping for any of FULL SCALE1 and FULL SCALE2.
* Preset PIPE PARAMETER and FLOW UNIT.
* If a value beyond the settable range is inputted, "INPUT ERROR" appears and then last setting is resumed.
* If "FLOW UNIT" has been changed after setting the range, redo the range setting.
* When FULL SCALE2 is not used (in the case of single range), set "0" to FULL SCALE2.

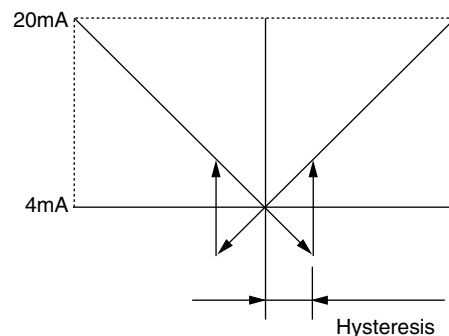

<Note> The flow rate unit is as selected by "FLOW UNIT" in "MEASURE SETUP" mode. Before setting range, set the "FLOW UNIT". (See 4.8.2.)

For actual keying, refer to the typical operation indicated below. Set the protection to OFF beforehand. (See Section 4.4.1.)


Operation (example)	Set "BI-DIR" to "RANGE TYPE", 20[m ³ /h] to "FULL SCALE1", and -10[m ³ /h] to "FULL SCALE2". Set "RANGE HYS." to 7%. * Preset "PIPE PARAMETER" and "FLOW UNIT".	
Key operation	Description	Display
	Press the key twice to display "OUTPUT SETUP".	OUTPUT SETUP
	Press the key once to display "ZERO ADJUSTMENT".	ZERO ADJUSTMENT SET ZERO
	Press the key for 4 times to display "RANGE".	RANGE
	Press the key once to display "KIND"	KIND FLOW RATE
	Press the key once to display "RANGE TYPE"	RANGE TYPE SINGLE RANGE
	Press the key twice to blink the cursor.	RANGE SINGLE
	Press the key twice, and select "BI-DIR".	RANGE TYPE BI-DIR
	Press the key for 4 times to display "RANGE TYPE".	RANGE TYPE BI-DIR
	Press the key once to display "FULL SCALE1".	FULL SCALE1 50.0000 m ³ /h
	Press the key once to blink the cursor.	FULL SCALE1 0050.0000 m ³ /h
	Press the key several times to align the cursor to "5".	FULL SCALE1 0050.0000 m ³ /h
	Press the key several times to set "2".	FULL SCALE1 0020.0000 m ³ /h
	Note) To change the decimal point position, align the cursor with a place to change to, and press the key.	
	Press the key once to register.	FULL SCALE1 ** COMPLETE **
	—— FULL SCALE1 has been registered. ——	FULL SCALE1 20.0000 m ³ /h
	Press the key once to display "FULL SCALE2".	FULL SCALE2 0.0000 m ³ /h

<div> <div>ENT</div> <div>▼</div> <div>△</div> <div>▼</div> <div>▶</div> <div>▼</div> <div>△</div> <div>▼</div> <div>ENT</div> <div>▼</div> <div>▼</div> <div>▼</div> <div>▼</div> <div>△</div> <div>▼</div> <div>ENT</div> <div>▼</div> <div>▼</div> <div>▼</div> <div>▼</div> <div>▼</div> <div>ESC</div> <div>△</div> </div>	<p>Press the ENT key once to register.</p> <p>Press the △ key several times to display “-” on the 1st line.</p> <p>Press the ▶ key twice to move the cursor.</p> <p>Press the △ key once to set “1”.</p> <p>Press the ENT key once to register.</p> <p>———— FULL SCALE2 has been registered. ————</p> <p>Press the △ key once to display “RANGE HYS.”.</p> <p>Press the ENT key once to blink the cursor.</p> <p>Press the ▶ key once to move the cursor.</p> <p>Press the △ key twice to set “7”.</p> <p>Press the ENT key once to register.</p> <p>———— RANGE HYS. has been registered. ————</p> <p>Press the ESC key twice and then press the △ key for 3 times to enter the measurement mode.</p>	<div> <div>FULL SCALE2</div> <div>0000.0000</div> <div>m3/h</div> </div> <div> <div>FULL SCALE2</div> <div>-000.0000</div> <div>m3/h</div> </div> <div> <div>FULL SCALE2</div> <div>-000.0000</div> <div>m3/h</div> </div> <div> <div>FULL SCALE2</div> <div>-0010.0000</div> <div>m3/h</div> </div> <div> <div>FULL SCALE2</div> <div>** COMPLETE **</div> </div> <div> <div>↓</div> </div> <div> <div>FULL SCALE2</div> <div>-10.0000</div> <div>m3/h</div> </div> <div> <div>RANGE HYS.</div> <div>5.00</div> <div>%</div> </div> <div> <div>RANGE HYS.</div> <div>05.00</div> <div>%</div> </div> <div> <div>RANGE HYS.</div> <div>05.00</div> <div>%</div> </div> <div> <div>RANGE HYS.</div> <div>07.00</div> <div>%</div> </div> <div> <div>RANGE HYS.</div> <div>** COMPLETE **</div> </div> <div> <div>↓</div> </div> <div> <div>RANGE HYS.</div> <div>7.00</div> <div>%</div> </div> <div> <div>0.000</div> <div>%</div> <div>0.000</div> <div>m3</div> </div>
---	---	--

4.10.3. Setting the Bi-directional auto 2 range

Description

- The function measures the flow rate of either forward or reverse flow while changing over the range corresponding to the flow direction.
- The current output changes with the action range as illustrated on the right.
- The hysteresis can be set to between 0 and 20% of either range of FULL SCALE1 or FULL SCALE2 and FULL SCALE3 or FULL SCALE4 whichever the span is smaller.
- Upon setting DO1 and/or DO2 to "FULL SCALE2", a contact outputs "FULL SCALE2" action. Select "ACTIVE ON" or "ACTIVE OFF" separately. (See 4.10.5.)
- Settable range: ± 0.3 to 32[m/s] in terms of flow velocity in piping for any of FULL SCALE1 and FULL SCALE2. When FULL SCALE1 and FULL SCALE2 are set, FULL SCALE3 and FULL SCALE4 are automatically set. FULL SCALE1 and FULL SCALE3, FULL SCALE2 and FULL SCALE4 are related as follows.
[FULL SCALE1] = [FULL SCALE3]
[FULL SCALE2] = [FULL SCALE4]
* Preset PIPE PARAMETER and FLOW UNIT.
* If a value beyond the settable range is inputted, "INPUT ERROR" appears and then last setting is resumed.
* If "FLOW UNIT" has been changed after setting the range, redo the range setting.
* When FULL SCALE2 is not used (in the case of single range), set "0" to FULL SCALE2.

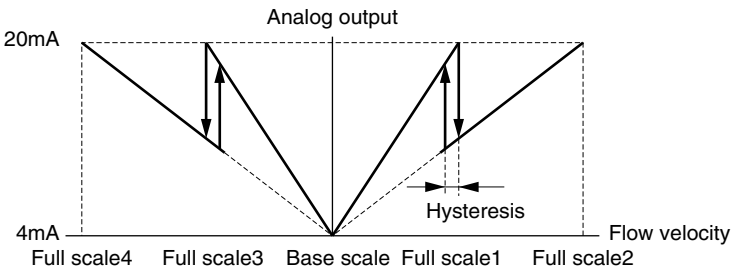

<Note> The flow rate unit is as selected by "FLOW UNIT" in "MEASURE SETUP" mode. Before setting range, set the "FLOW UNIT". (See 4.8.2.)

For actual keying, refer to the typical operation indicated below. Set the protection to OFF beforehand. (See Section 4.4.1.)


Operation (example)	Set "BI-DIR AUTO 2" to "RANGE TYPE", 10[m ³ /h] to "FULL SCALE1", and 60[m ³ /h] to "FULL SCALE2". Set "RANGE HYS." to 7%. * Preset "PIPE PARAMETER" and "FLOW UNIT".	
Key operation	Description	Display
	Press the key twice to display "OUTPUT SETUP".	OUTPUT SETUP
	Press the key once to display "ZERO ADJUSTMENT".	ZERO ADJUSTMENT
		SET ZERO
	Press the key for 4 times to display "RANGE".	RANGE
	Press the key once to display "KIND"	KIND
		FLOW RATE
	Press the key once to display "RANGE TYPE"	RANGE TYPE
		SINGLE RANGE
	Press the key twice to blink the cursor.	RANGE TYPE
		SINGLE
	Press the key for 3 times, and select "BI-DIR AUTO 2".	RANGE TYPE
		BI-DIR AUTO 2
	Press the key once to display "RANGE TYPE".	RANGE TYPE
		BI-DIR AUTO 2
	Press the key once to display "FULL SCALE1".	FULL SCALE1
		20.0000 m3/h
	Press the key once to blink the cursor on the 2nd line.	FULL SCALE1
		0020.0000 m3/h
	Press the key several times to align the cursor to "2".	FULL SCALE1
		0020.0000 m3/h
	Press the key several times to set "1".	FULL SCALE1
	Note) To change the decimal point position, align the cursor with a place to change to, and press the key.	FULL SCALE1
	Press the key once to register.	FULL SCALE1
		** COMPLETE **

▼	----- FULL SCALE1 has been registered. -----	FULL SCALE1 10.0000 m3/h
△	Press the △ key once to display "FULL SCALE2".	FULL SCALE2 0.0000 m3/h
ENT	Press the ENT key once to blink the cursor.	FULL SCALE2 0000.0000 m3/h
▶	Press the ▶ key twice to move the cursor.	FULL SCALE2 0000.0000 m3/h
△	Press the △ key for 6 times to set "6".	FULL SCALE2 0060.0000 m3/h
ENT	Press the ENT key once to register.	FULL SCALE2 ** COMPLETE **
▼	----- FLOW SPAN2 has been registered. -----	↓
△	Press the △ key once to display "RANGE HYS.".	FULL SCALE2 60.0000 m3/h
ENT	Press the ENT key once to blink the cursor.	RANGE HYS. 5.00 %
▶	Press the ENT key once to move the cursor.	RANGE HYS. 05.00 %
△	Press the △ key twice to set "7".	RANGE HYS. 05.00 %
ENT	Press the ENT key once to register.	RANGE HYS. 07.00 %
▼	----- RANGE HYS. has been registered. -----	RANGE HYS. ** COMPLETE **
ESC △	Press the ESC key twice and then press the △ key for 3 times to enter the measurement mode.	↓
		RANGE HYS. 7.00 %
		0.000 % 0.000 m³

4.10.4. Rate limit

Description

- Spike noise input such as slurry fluid can be cut and output.
- Settable range
 - (1) RATE LIMIT 0 to 5 [m/s] in terms of flow velocity. Absolute value is input (Factory set: 0[m³/h])
 - (2) RATE TIMER Enter in the range of 0 to 900 sec. (Factory set: 0sec)

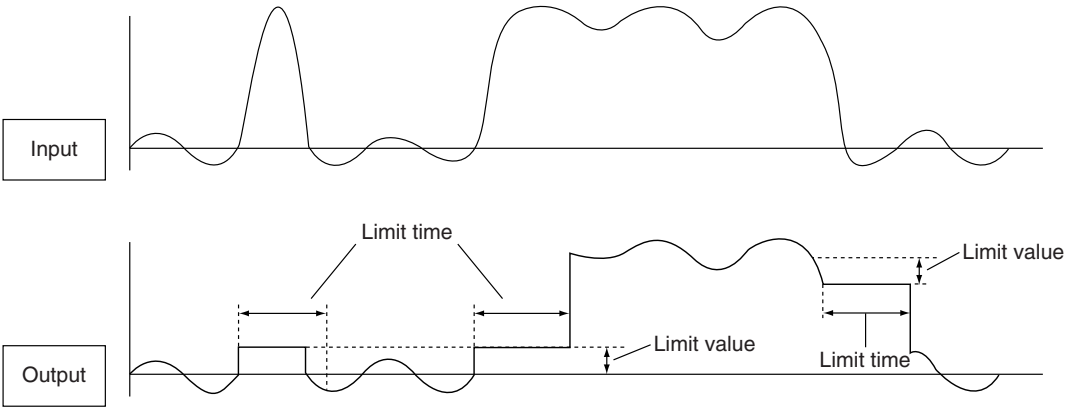

(Note 1) When input exceeding a limit value continues more than limit time, it is output as a true signal.
(Note 2) When the limit time is set to 0sec, this function does not operate.

For actual keying, refer to the typical operation indicated below. Set the protection to OFF beforehand. (See Section 4.4.1.)

Operation (example)	Set 5m³/h to RATE LIMIT, and 10sec to RATE LIMIT TIMER. * Preset "PIPE PARAMETER" and "FLOW UNIT".	
Key operation	Description	Display
	Press the key twice to display "OUTPUT SETUP".	OUTPUT SETUP
	Press the key once to display "ZERO ADJUSTMENT".	ZERO ADJUSTMENT SET ZERO
	Press the key for 4 times to display "RANGE".	RANGE
	Press the key once to display ""KIND"	KIND FLOW RATE
	Press the key for 9 times to display "RATE LIMIT".	RATE LIMIT 0.000 m3/h
	Press the key once to blink the cursor.	RATE LIMIT 00000.000 m3/h
	Press the key for 4 times to align the cursor.	RATE LIMIT 00000.000 m3/h
	Press the key several times to set "5".	RATE LIMIT 00005.000 m3/h
	Press the key once to register.	RATE LIMIT ** COMPLETE **
	----- RATE LIMIT has been registered. -----	RATE LIMIT 5.000 m3/h
	Press the key once to display "RATE LIMIT TIMER".	RATE LIMIT TIMER 0 sec
	Press the key once to blink the cursor.	RATE LIMIT TIMER 000 sec
	Press the key once to align the cursor.	RATE LIMIT TIMER 000 sec
	Press the key several times to set "1".	RATE LIMIT TIMER 010 sec

ENT

▼

▼

▼

▼

ESC

△

Press the

ENT

 key once to register.

----- RATE LIMIT TIMER has been registered. -----

Press the

ESC

 key twice and then press the

△

 key for 3 times to enter the measurement mode.

RATE LIMIT TIMER

** COMPLETE **

↓

RATE LIMIT TIMER

10 sec

0.000 %

0.000 m3

4.10.5. Setting the DO output

4.10.5.1. How to validate outputting the FULL SCALE 2

Description

● Select a contact output as DO1 and/or DO2 at FULL SCALE2 measurement status.

For actual keying, refer to the typical operation indicated below. Set the protection to OFF beforehand. (See Section 4.4.1.)

Operation (example)	Set the DO1 output to "FULL SCALE2". Also, set the contact to "ACTIVE ON".	
Key operation	Description	Display
<div>△</div>	Press the <div>△</div> key twice to display "OUTPUT SETUP".	<div>OUTPUT SETUP</div>
<div>▼</div>		
<div>ENT</div>	Press the <div>ENT</div> key once to display "ZERO ADJUSTMENT".	<div>ZERO ADJUSTMENT</div> <div>SET ZERO</div>
<div>▼</div>		
<div>△</div>	Press the <div>△</div> key for 6 times to display "DO1 OUT".	<div>DO1 OUT</div> <div>NOT USED</div>
<div>▼</div>	* Press the <div>△</div> key again to display "DO2 OUT".	
<div>ENT</div>	Press the <div>ENT</div> key once to blink the cursor.	<div>DO1 OUT</div> <div>NOT USED</div>
<div>▼</div>		
<div>△</div>	Press the <div>△</div> key for 3 times to display "FULL SCALE2" on the 2nd line.	<div>DO1 OUT</div> <div>FULL SCALE2</div>
<div>▼</div>		
<div>ENT</div>	Press the <div>ENT</div> key once to register "FULL SCALE2".	<div>DO1 OUT</div> <div>** COMPLETE **</div>
<div>▼</div>		↓
<div>▼</div>	—— "FULL SCALE2" has been registered. ——	<div>STATUS OUT</div> <div>CONTACT ACTION</div>
<div>▼</div>		
<div>ENT</div>	Press the <div>ENT</div> key once to display "CONTACT ACTION".	<div>CONTACT ACTION</div> <div>ACTIVE ON</div>
<div>▼</div>		
<div>ENT</div>	Press the <div>ENT</div> key once to register "ACTIVE ON"(normally off).	<div>CONTACT ACTION</div> <div>** COMPLETE **</div>
<div>▼</div>		↓
<div>▼</div>	* To select normally on, press the <div>△</div> key.	<div>STATUS OUT</div> <div>CONTACT ACTION</div>
<div>▼</div>	—— ACTIVE ON has been registered. ——	
<div>ESC</div> <div>△</div>	Press the <div>ESC</div> key twice and then press the <div>△</div> key for 3 times to enter the measurement mode.	<div>0.000 %</div> <div>0.000 m3</div>

4.10.5.2. How to validate the alarm output

Description

- Select a contact output as DO1 and/or DO2 when received wave or E²PROM is abnormal.
- Settable range
 ALL : Select a contact output when hardware and received wave (nothing, unstable) are abnormal.
 HARDWARE FAULT: Select a contact output when circuit is abnormal.
 PROCESS ERROR : Select a contact output when received wave is abnormal.

For actual keying, refer to the typical operation indicated below. Set the protection to OFF beforehand. (See Section 4.4.1.)

Operation (example)	Set the DO1 output to "PROCESS ERROR". Also, set the contact to "ACTIVE ON".	
Key operation	Description	Display
	Press the key twice to display "OUTPUT SETUP".	OUTPUT SETUP
	Press the key once to display "ZERO ADJUSTMENT".	ZERO ADJUSTMENT SET ZERO
	Press the key for 6 times to display "DO1 OUT".	DO1 OUT NOT USED
	* Press the key again to display "DO2 OUT".	
	Press the key once to blink the cursor.	DO1 OUT NOT USED
	Press the key for 4 times to display "ALARM" on the 2nd line.	DO1 OUT ALARM
	Press the key once to display the ALARM select panel.	ALARM ALL
	Press the key twice to display "PROCESS ERROR".	ALARM PROCESS ERROR
	Press the key once to register.	ALARM ** COMPLETE **
	----- "PROCESS ERROR" has been registered. -----	STATUS OUT CONTACT ACTION
	Press the key once to display "CONTACT ACTION".	CONTACT ACTION ACTIVE ON
	Press the key once to register "ACTIVE ON"(normally off).	CONTACT ACTION ** COMPLETE **
	* To select normally on, press the key.	
	----- "ACTIVE ON" has been registered. -----	STATUS OUT CONTACT ACTION
	Press the key twice and then press the key for 3 times to enter the measurement mode.	0.000 % 0.000 m3

Burnout timer

The time between error occurrence and contact output can be changed by a setting of the burnout timer. Make a setting according to the section "4.9.1.2 Setting of analog output at error (Burnout)".

Note) If "Process error" or "All" is issued, the burnout timer is enabled. If "Device error" is issued, the burnout timer is disabled.

Description

- Select a contact output as DO1 and/or DO2 when the flow rate has exceeded a setting.

In case of FLOW SW HIGH SWITCH

Flow rate

Time

ON or OFF

Hysteresis

In case of FLOW SW LOW SWITCH

Flow rate

Time

ON or OFF

Hysteresis

● **Settable range**

Flow rate : 0 to 32m/s in terms of flow velocity.

Action : FLOW SW HIGH or FLOW SW LOW

Contact action: ACTIVE ON : DO1/DO2: Normally off

ACTIVE OFF: DO1/DO2: Normally on

Note) The hysteresis value set in Section 4.9.1 "Setting of flow rate range" is applied to the action range.

For actual keying, refer to the typical operation indicated below. Set the protection to OFF beforehand. (See Section 4.4.1.)

-57-

▼
▼

ESC△

----- "ACTIVE ON" has been registered. -----

Press the ESC key twice and then press the △ key for 3 times to enter the measurement mode.

STATUS OUT

CONTACT ACTION

0.000 %
0.000 m3

4.10.5.4. How to validate the total switch

Description

- Select a contact output as DO1 and/or DO2 when the total value exceeds a setting.

Settable range: 0.000001 to 99999999


Contact action:

ACTIVE ON : DO1/DO2: Normally off

ACTIVE OFF: DO1/DO2: Normally on

Note) Different values can be assigned to DO1 and DO2.

For actual keying, refer to the typical operation indicated below. Set the protection to OFF beforehand. (See Section 4.4.1.)

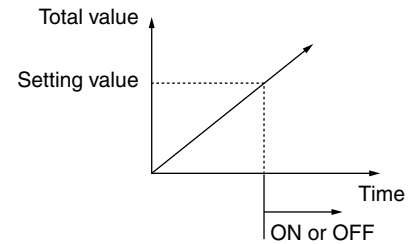
























Operation (example)	Set the DO1 output to "TOTAL SWITCH", and change the setting value from 10000[m ³] to 100[m ³]. Also, set the contact to "ACTIVE ON".	
Key operation	Description	Display
	Press the key twice to display "OUTPUT SETUP".	OUTPUT SETUP
	Press the key once to display "ZERO ADJUSTMENT".	ZERO ADJUSTMENT SET ZERO
	Press the key for 6 times to display "DO1 OUT".	DO1 OUT NOT USED
	* Press the key again to display "DO2 OUT".	
	Press the key once to blink the cursor.	DO1 OUT NOT USED
	Press the key for 6 times to display "TOTAL SWITCH" on the 2nd line.	DO1 OUT TOTAL SWITCH
	Press the key once to display the setting screen of "TOTAL SWITCH".	TOTAL SWITCH 10000 m ³
	Press the key once to blink the cursor.	TOTAL SWITCH 00010000 m ³
	Press the key for 3 times to move the cursor.	TOTAL SWITCH 00010000 m ³
	Press the key for 10 times to set "0".	TOTAL SWITCH 00000000 m ³
	Press the key twice to move the cursor.	TOTAL SWITCH 00000000 m ³
	Press the key once to set "1".	TOTAL SWITCH 00000100 m ³
	Press the key once to register.	TOTAL SWITCH ** COMPLETE **
	—— "TOTAL SWITCH" has been registered. ——	STATUS OUT CONTACT ACTION
	Press the key once to display "CONTACT ACTION".	CONTACT ACTION ACTIVE ON
	Press the key once to register "ACTIVE ON"(normally off).	CONTACT ACTION ** COMPLETE **
	* To select normally on, press the key.	
	—— "ACTIVE ON" has been registered. ——	STATUS OUT CONTACT ACTION
	Press the key twice and then press the key for 3 times to enter the measurement mode.	0.000 % 0.000 m ³

4.10.5.5. How to validate the range over output and pulse range over output

Description

- **AO RANGE OVER** : Select a contact output as DO1 and/or DO2 when the upper limit and lower limit output are above the setting.
- **PULSE RANGE OVER**: Select a contact output as DO1 and/or DO2 when the total pulse output exceeds the maximum output frequency value.

For actual keying, refer to the typical operation indicated below. Set the protection to OFF beforehand. (See Section 4.4.1.)

Operation (example)	Set the DO1 output to "AO RANGE OVER". Also, set the contact to "ACTIVE ON".	
Key operation	Description	Display
	Press the  key twice to display "OUTPUT SETUP".	OUTPUT SETUP
	Press the  key once to display "ZERO ADJUSTMENT".	ZERO ADJUSTMENT SET ZERO
	Press the  key for 6 times to display "DO1 OUT".	DO1 OUT NOT USED
	* Press the  key again to display "DO2 OUT".	
	Press the  key once to blink the cursor.	DO1 OUT NOT USED
	Press the  key for 7 times to display "AO RANGE OVER" on the 2nd line.	DO1 OUT AO RANGE OVER
	* Press the  key again to display "PULSE RANGE OVER".	
	Press the  key once to register "RANGE OVER".	DO1 OUT ** COMPLETE **
	----- "RANGE OVER" has been registered. -----	STATUS OUT CONTACT ACTION
	Press the  key once to display "CONTACT ACTION".	CONTACT ACTION ACTIVE ON
	Press the  key once to register "ACTIVE ON"(normally off).	CONTACT ACTION ** COMPLETE **
	* To select normally on, press the  key.	
	----- "ACTIVE ON" has been registered. -----	STATUS OUT CONTACT ACTION
 	Press the  key twice and then press the  key for 3 times to enter the measurement mode.	0.000 % 0.000 m3

4.10.5.6. How to validate the output at the minus direction action

Description		
● Select a contact output as DO1 and/or DO2 when the flow is in reverse direction.		
For actual keying, refer to the typical operation indicated below. Set the protection to OFF beforehand. (See Section 4.4.1.)		

Operation (example)	Set the DO1 output to “-:FLOW DIRECTION”. Also, set the contact to “ACTIVE ON”.	
Key operation	Description	Display
	Press the key twice to display “OUTPUT SETUP”.	OUTPUT SETUP
	Press the key once to display “ZERO ADJUSTMENT”.	ZERO ADJUSTMENT SET ZERO
	Press the key for 6 times to display “DO1 OUT”.	DO1 OUT NOT USED
	* Press the key again to display “DO2 OUT”.	
	Press the key once to blink the cursor.	DO1 OUT NOT USED
	Press the key for 9 times to display “-:FLOW DIRECTION” on the 2nd line.	DO1 OUT -:FLOW DIRECTION
	Press the key once to register “-:FLOW DIRECTION”.	DO1 OUT ** COMPLETE **
	----- “-:FLOW DIRECTION” has been registered. -----	STATUS OUT CONTACT ACTION
	Press the key once to display “CONTACT ACTION”.	CONTACT ACTION ACTIVE ON
	Press the key once to register “ACTIVE ON”(normally off).	CONTACT ACTION ** COMPLETE **
	* To select normally on, press the key.	
	----- “ACTIVE ON” has been registered. -----	STATUS OUT CONTACT ACTION
	Press the key twice and then press the key for 3 times to enter the measurement mode.	0.000 % 0.000 m3

4.10.6. How to compensate the measurement value

Description

- Measurement value can be calibrated arbitrarily.

Zero point and span adjustment can be made.

Settable range


(1) Zero point: -5 to +5 [m/s] in terms of flow velocity in piping.

(2) Span : ±200%

The output value (reading, analog output and total output) is computed by the following expression.


$$\text{Output} = \frac{\text{Measurement value} \times [\text{Span set value \%}]}{100} + \text{Zero point}$$

Output

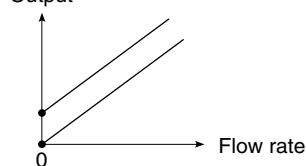

Zero adjustment movement

Output

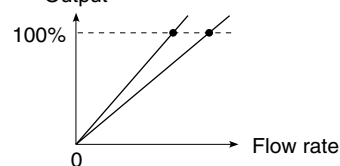

Span movement

For actual keying, refer to the typical operation indicated below. Set the protection to OFF beforehand. (See Section 4.4.1.)

Operation (example)	Compensate the zero point to 0.5m³/h, and the span by +1%.	
Key operation	Description	Display
	Press the key twice to display "OUTPUT SETUP".	OUTPUT SETUP
	Press the key once to display "ZERO ADJUSTMENT".	ZERO ADJUSTMENT SET ZERO
	Press the key for 8 times to display "CALIBRATION ZERO".	CALIBRATION ZERO 0.000 m3/h
	Press the key once to blink the cursor.	CALIBRATION ZERO 00000.000 m3/h
	Press the key for 6 times to move the cursor.	CALIBRATION ZERO 00000.000 m3/h
	Press the key for 5 times to set "5".	CALIBRATION ZERO 00000.500 m3/h
	Press the key once to register.	CALIBRATION ZERO ** COMPLETE **
	—— "CALIBRATION ZERO" has been registered. ——	CALIBRATION ZERO 0.500 m3/h
	Press the key once to display "CALIBRATION SPAN".	CALIBRATION SPAN 100.0 %
	Press the key once to blink the cursor.	CALIBRATION SPAN 100.0 %
	Press the key twice to move the cursor.	CALIBRATION SPAN 100.0 %
	Press the key once to set "1".	CALIBRATION SPAN 101.0 %
	Press the key once to register.	CALIBRATION SPAN ** COMPLETE **
	—— "CALIBRATION SPAN" has been registered. ——	CALIBRATION SPAN 101.0 %
	Press the key once and then press the key for 3 times to enter the measurement mode.	0.000 % 0.000 m3

4.10.7. Setting of the operation mode

























Description

- Used to switch computation cycle and output cycle.
- Settable range

NORMAL : Standard mode (factory-set value), computation/output cycle is approximately for a second.

HIGH SPEED: High speed response mode, computation/output cycle is approximately 0.2 seconds.

For actual keying, refer to the typical operation indicated below. Set the protection to OFF beforehand. (See Section 4.4.1.)

Operation (example)	Switch the operation mode to the high speed response mode.	
Key operation	Description	Display
	Press the  key twice to display "OUTPUT SETUP".	<div>OUTPUT SETUP</div>
		
	Press the  key once to display "ZERO ADJUSTMENT".	<div>ZERO ADJUSTMENT</div> <div>SET ZERO</div>
		
	Press the  key for 10 times to display "OPERATION MODE".	<div>OPERATION MODE</div> <div>NORMAL</div>
		
	Press the  key once to blink the cursor.	<div>OPERATION MODE</div> <div>NORMAL</div>
		
	Press the  key for 6 times to move the cursor.	<div>OPERATION MODE</div> <div>HIGH SPEED</div>
		
	Press the  key once to register.	<div>OPERATION MODE</div> <div>** COMPLETE **</div>
		
		
		
 	Press the  key once and then press the  key for 3 times to enter the measurement mode.	<div>OPERATION MODE</div> <div>HIGH SPEED</div> <div>0.000 %</div> <div>0.000 m3</div>

Reference

The difference between standard mode and high speed mode

High speed mode is unfit for the measurement when foreign objects or air bubbles are contained.

Standard mode is about 10 times more resistant to entry of foreign objects or air bubbles than high speed mode.

4.11. MAINTENANCE MODE


4.11.1. How to calibrate the analog output

Description

- The calibration is performed so as to obtain 4mA and 20mA when the analog signal (4-20mA DC) output is 0% and 100%, respectively.

- Connect an ammeter to lout terminals as shown below. In the CURRENT CALIBRATION mode, select 4mA or 20mA, and operate the

△ key (UP) or the ▷ key (Down) .

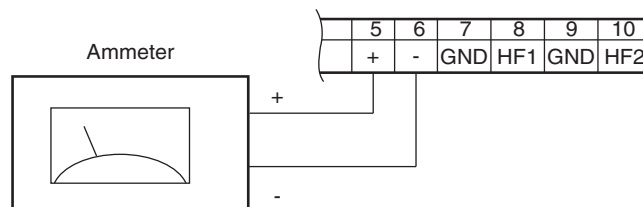

For actual keying, refer to the typical operation indicated below. Set the protection to OFF beforehand. (See Section 4.4.1.)

Operation (example)	Adjust the 4mA and 20mA analog outputs.	
Key operation	Description	Display
△	Press the △ key for 4 times to display "MAINTENANCE MODE".	MAINTENANCE MODE
▼		
ENT	Press the ENT key once to display "RAS INFORMATION".	RAS INFORMATION 0000000000000000
▼		
△	Press the △ key once to display "CURRENT".	CURRENT
▼		CARIBRATION
ENT	Press the ENT key twice to enter the calibration mode of 4mA output.	CARIBRATION 4 mA
▼	Adjust the output to 4mA by the △ (UP) and the ▷ (down) key, while observing the output of calibration devices such as an ammeter.	
ENT	Press the ENT key once to register the adjustment result.	CARIBRATION ** COMPLETE **
▼	——— 4mA adjustment result has been registered. ———	↓
▼		CARIBRATION 4 mA
▼		
△	Press the △ key once, and select 20mA.	CARIBRATION 20mA
▼		
ENT	Press the ENT key twice to enter the calibration mode of 20mA output.	CARIBRATION 20mA
▼	Adjust the output to 20mA by the △ (UP) and the ▷ (down) key.	
ENT	Press the ENT key once to register the adjustment result.	CARIBRATION ** COMPLETE **
▼	——— 20mA adjustment result has been completed. ———	↓
▼		CARIBRATION 20mA
▼		
ESC △	Press the ESC key twice and then press the △ key once to enter the measurement mode.	0.000 % 0.000 m3

4.11.2. How to set the constant current output

Description

- Generates a fixed value output of analog signal.
- Application example: The operation of a connected receiver is checked by generating a fixed value output of analog signal.
- In the constant current setting mode (OUTPUT SETTING), set the constant current output value.

Settable range: -20%(0.8mA) to +120%(23.2mA)

For actual keying, refer to the typical operation indicated below. Set the protection to OFF beforehand. (See Section 4.4.1.)

Operation (example)	Set the constant current output of 50% (12mA).	
Key operation	Description	Display
<div>△</div>	Press the △ key for 4 times to display "MAINTENANCE MODE".	<div>MAINTENANCE MODE</div>
<div>▼</div>		
<div>ENT</div>	Press the ENT key once to display "RAS INFORMATION".	<div>RAS INFORMATION</div> <div>0000000000000000</div>
<div>▼</div>		
<div>△</div>	Press the △ key twice to display "OUTPUT SETTING".	<div>CURRENT</div> <div>OUTPUT SETTING</div>
<div>▼</div>		
<div>ENT</div>	Press the ENT key once to display the setting screen.	<div>OUTPUT SETTING</div> <div>0 %</div>
<div>▼</div>		
<div>ENT</div>	Press the ENT key once to blink the cursor.	<div>OUTPUT SETTING</div> <div>000 %</div>
<div>▼</div>	Note) Start constant current output.	
<div>▶ △</div>	Enter "5" by the ▶ and the △ key.	<div>OUTPUT SETTING</div> <div>+050 %</div>
<div>▼</div>		
<div>ENT</div>	Press the ENT key once to output 12mA.	<div>OUTPUT SETTING</div> <div>** COMPLETE **</div>
<div>▼</div>		<div>↓</div>
<div>▼</div>	----- Outputting 12mA. -----	<div>OUTPUT SETTING</div> <div>50 %</div>
<div>▼</div>		
<div>ESC</div>	Press the ESC key once to stop constant current output.	<div>CURRENT</div> <div>OUTPUT SETTING</div>
<div>▼</div>	Note) Current output is in the measurement status.	
<div>ESC △</div>	Press the ESC key once and then press the △ key once to enter the measurement mode.	<div>0.000 %</div> <div>0.000 m3</div>

4.11.3. How to check the action of total pulses

Description

- Checks the action of total pulse output.

The output action can be checked upon designating the number of pulses to be outputted per second.

Settable range: 1 to 100 pulses/s (when pulse width is 5ms, 10ms, 50ms, 100ms or 200ms)

Note 1) The output pulse width is as selected currently. (See 4.9.2.1.)

Set the frequency taking the pulse width into account referring to the following expression.

The number of setting pulses $\leq 1000 / (\text{Pulse width}[\text{ms}] \times 2)$

Example: If the pulse width is set to 50ms, select 10 pulses/s or less.

Note 2) When pulse width is 500ms and 1000ms, output action is performed at the rate of 1pulse/4seconds regardless of setting.

Note3) Before checking the action, confirm whether proceeding to an action is permitted.

For actual keying, refer to the typical operation indicated below. Set the protection to OFF beforehand. (See Section 4.4.1.)

Operation (example)	Perform pulse output of 5 pulses/s.	
Key operation	Description	Display
	Press the key for 4 times to display "MAINTENANCE MODE".	MAINTENANCE MODE
	Press the key once to display "RAS INFORMATION".	RAS INFORMATION 0000000000000000
	Press the key for 3 times to display "TOTAL PULSE".	TOTAL PULSE 1 PULSE/s
	Press the key once to blink the cursor.	TOTAL PULSE 001 PULSE/s
	Note) Start simulated pulse output.	
	Press the key twice to move the cursor.	TOTAL PULSE 001 PULSE/s
	Press the key for 4 times to set "5".	TOTAL PULSE 005 PULSE/s
	Press the key once to register.	TOTAL PULSE ** COMPLETE **
		↓
	——— 5 PULSE/s has been registered. ———	TOTAL PULSE 005 PULSE/s
	5 PULSE/s simulated pulse is output.	
	After checking the output, press the key once to stop simulated pulse output.	TOTAL PULSE 005 PULSE/s
	Press the key once and then press the key once to enter the measurement mode.	0.000 % 0.000 m3

4.11.4. How to check the status output

Description

- Check the status output.
- Setting content ON: Close the contact.
 OFF: Open the contact.



CAUTION

- This operation sets DO1 and DO2 the same contact action.
- Before operation, check whether DO output testing is permitted.

For actual keying, refer to the typical operation indicated below. Set the protection to OFF beforehand. (See Section 4.4.1.)

Operation (example)	Check the contact action.	
Key operation	Description	Display
	Press the key for 4 times to display "MAINTENANCE MODE".	MAINTENANCE MODE
▼		
	Press the key once to display "RAS INFORMATION".	RAS INFORMATION 0000000000000000
▼		
	Press the key for 4 times to display "STATUS".	DO CHECK OFF
▼		
	Press the key once to blink the cursor.	DO CHECK OFF
▼	Note) Contact output is displayed at this time. "OFF" is given at right.	
	Press the key once, and select "ON".	DO CHECK ON
▼		
	Press the key once to register "ON".	DO CHECK ** COMPLETE **
▼		
▼	—— "ON" has been registered. ——	↓
▼		DO CHECK ON
▼	* Check the contact output "ON".	
	Press the key once, and select "OFF".	DO CHECK OFF
▼		
	Press the key once to register "OFF".	DO CHECK ** COMPLETE **
▼		
▼	—— "OFF" has been registered. ——	↓
▼		DO CHECK OFF
▼	* Check the contact output "OFF".	
	Press the key once to stop the cursor from blinking.	DO CHECK OFF
▼	* It returns to contact output at the normal measurement status.	
	Press the key once and then press the key once to enter the measurement mode.	0.000 % 0.000 m3

4.11.5. How to validate the test mode (simulated flow rate output)

Description

- Checks different outputs (LCD indication, analog output, DO output) upon simulating flow rate outputs.

With the output at the actuated time as an initial value, the output changes up to the input value (simulated flow rate target value) in a selected TRACKING TIME, and at the input value, the output value becomes constant.

During the test mode, "T" blinks on the left end of the 1st line of LCD.

Setting content

TEST MODE : Enables or disables the test mode.

INPUT DATA : Simulated flow rate target (percentage of MV full scale).

TRACKING TIME : Time required to attain the simulated flow rate target (above input value).

Settable range

TEST MODE validation: SETTING (valid), NOT USED (invalid)

INPUT DATA : ±120%

TRACKING TIME : 0 to 999 seconds

* For setting TRACKING TIME, 0sec is set to the damping (See 4.9.5).

Flow rate output

Input value

Initial value

TRACKING TIME

Time

CAUTION

- By performing the operation, the output of analog outputs DO1 and DO2 will be changed depending on the setting. Check beforehand whether each output can be changed or not.
- Be sure to resume "NOT USED" after the end of test. Otherwise, the input value output status will be held until power is turned off.
- If "START/RESET" is selected as TOTAL MODE, the total value also changes. Select "STOP" to prevent the total value change.

For actual keying, refer to the typical operation indicated below. Set the protection to OFF beforehand. (See Section 4.4.1.)

Operation (example)	Set the simulated flow rate target to 100%, and the tracking time to 100 [s]. *Set the "FLOW RATE (%)" before hand. Refer ot "4.9.4 Setting the LCD indication"	
Key operation	Description	Display
	Press the key for 4 times to display "MAINTENANCE MODE".	MAINTENANCE MODE
	Press the key once to display "RAS INFORMATION".	RAS INFORMATION 0000000000000000
	Press the key for 5 times to display "TEST MODE".	TEST MODE NOT USED
	Press the key once to blink the cursor.	TEST MODE NOT USED
	Press the key once, and select "SETTING".	TEST MODE SETTING
	Press the key once to register "SETTING".	INPUT DATA 0 %
	Press the key once to blink the cursor on the 2nd line.	INPUT DATA +000 %
	Enter "100" by the and the key.	INPUT DATA +100 %
	Press the key once to register.	INPUT DATA ** COMPLETE **
	—— "INPUT DATA" has been registered. ——	INPUT DATA 100 %
	Press the key once to display "TRACKING TIME".	TRACKING TIME 0 sec
	Press the key once to blink the cursor on the 2nd line.	TRACKING TIME 000 sec
	Press the key once to set "100".	TRACKING TIME 100 sec

ENT

▼

▼

▼

▼

ESC

△

Press the **ENT** key once to register.

——— “TRACKING TIME” has been registered. ———

* Simulating flow rate output is started.

Display the measurement mode by the **ESC** key and the **△** key.

"T" blinks on the left end of 1st line of LCD, and the output changes. In 100 seconds (at which tracking time is set), the output becomes stable at 10 [m³/h] (simulated flow rate target). (In case of full scale 10 [m³/h])

Note) Be sure to return the TEST MODE to "NOT USED" after checking the output.

TRACKING TIME

** COMPLETE **

↓

TRACKING TIME

100 s

T

0.00

%

0.000

m3/h

↓

T

100.00

%

10.000

m3/h

4.11.6. How to validate a serial transmission (RS-485)

Description

Validates a transmission before using the transmission function.

Setting content

Transmission type, transmission rate, parity, stop bits and slave No.

Settable range

Transmission type

: RS-485.

Transmission rate (BAUD RATE)

: 9600 bps (factory set) or 19200 bps, 38400 bps.

Parity

: NONE, ODD (factory set), EVEN

Stop bits

: 1 bit (factory set), 2 bits

Station No.

: 1 to 31 (factory set: 1)

Communication protocol

: MODBUS RTU mode

Note) For the transmission specifications, refer to the separate instruction manual "Ultrasonic Flowmeter Communication functions" (INF-TN5A16216).

For actual keying, refer to the typical operation indicated below. Set the protection to OFF beforehand. (See Section 4.4.1.)

Operation (example)	Set the baud rate to "9600BPS", the parity to "NONE", the stop bits to "1 BIT", and the slave No. to "5".	
Key operation	Description	Display
<div>△</div>	Press the <div>△</div> key for 4 times to display "MAINTENANCE MODE".	<div>MAINTENANCE MODE</div>
<div>▼</div>		
<div>ENT</div>	Press the <div>ENT</div> key once to display "RAS INFORMATION".	<div>RAS INFORMATION</div> <div>0000000000000000</div>
<div>▼</div>		
<div>△</div>	Press the <div>△</div> key for 6 times to display "COMMUNICATION".	<div>COMMUNICATION</div>
<div>▼</div>		
<div>ENT</div>	Press the <div>ENT</div> key once to display " RS-485 "	<div>MODE</div> <div>RS-485</div>
<div>▼</div>		
<div>△</div>	Press the <div>△</div> key once to display "BAUD RATE".	<div>BAUD RATE</div> <div>9600BPS</div>
<div>▼</div>	Because "9600 BPS" is set, go to the next step. To select other baud rate, press the <div>ENT</div> key, and select by the <div>△</div> key, and register by the <div>ENT</div> key.	
<div>△</div>	Press the <div>△</div> key once to display "PARITY".	<div>PARITY</div> <div>ODD</div>
<div>▼</div>		
<div>ENT</div>	Press the <div>ENT</div> key once to blink on the 2nd line.	<div>PARITY</div> <div>ODD</div>
<div>▼</div>		
<div>△</div>	Press the <div>△</div> key once to display "NONE".	<div>PARITY</div> <div>NONE</div>
<div>▼</div>		
<div>ENT</div>	Press the <div>ENT</div> key once to register.	<div>PARITY</div> <div>** COMPLETE **</div>
<div>▼</div>		
<div>▼</div>		
<div>▼</div>		
<div>▼</div>	——— "NONE" has been registered. ———	<div>PARITY</div> <div>NONE</div>
<div>△</div>	Press the <div>△</div> key once to display "STOP BIT".	<div>STOP BIT</div> <div>1 BIT</div>
<div>▼</div>	Because "1 BIT" is set, go to the next step. To select "2 BITS", press the <div>ENT</div> key, and select by the <div>△</div> key, and register by the <div>ENT</div> key.	
<div>△</div>	Press the <div>△</div> key once to display "STATION No.".	<div>STATION No.</div> <div>01</div>
<div>▼</div>		
<div>ENT</div>	Press the <div>ENT</div> key once to blink the cursor.	<div>STATION No.</div> <div>01</div>
<div>▼</div>		
<div>△</div> <div>▶</div>	Set "5" by the <div>△</div> and the <div>▶</div> key.	<div>STATION No.</div> <div>05</div>
<div>▼</div>		
<div>ENT</div>	Press the <div>ENT</div> key once to register.	<div>STATION No.</div> <div>** COMPLETE **</div>
<div>▼</div>		

<div>▼</div> <div>▼</div> <div>▼</div> <div>▲</div> <div>▼</div> <div>ESC</div> <div>▲</div>	<div>——— STATION No. has been registered. ———</div>	<div>STATION No. 05</div>
	<div>Press the ▲ key once to display "PROTOCOL".</div> <div>Because "MODBUS" is set, setting is completed.</div>	<div>PROTOCOL MODBUS</div>
	<div>Display the measurement mode by the ESC key and the ▲ key.</div>	<div>0.000 %</div> <div>0.000 m3/h</div>




























4.11.7. How to set the ID No.

Description

- Set the ID No. for parameters (Section 4.4.1).
If ID No. is set, the number must be inputted before canceling the protection.
- To validate the protection, set the protection to "ON". (See Section 4.4.1.)

ID No. settable range: 0000 to 9999 (4-digit number)

For actual keying, refer to the typical operation indicated below. Set the protection to OFF beforehand. (See Section 4.4.1.)
If you forget the ID number you set, contact us.














Operation (example)	Set "1106" as the ID No.	
Key operation	Description	Display
	Press the  key for 4 times to display "MAINTENANCE MODE".	MAINTENANCE MODE
		
	Press the  key once to display "RAS INFORMATION".	RAS INFORMATION 0000000000000000
		
	Press the  key for 8 times to display "REGISTER ID NO.".	REGISTER ID NO.
		
	Press the  key twice to blink on the 2nd line.	REGISTER ID NO. 0000
		
 	Set "1106" by the  and the  key.	REGISTER ID NO. 1106
		
	Press the  key once to register.	REGISTER ID NO. ** COMPLETE **
		
		
		
		
 	Display the measurement mode by the  key and the  key. Note) To validate the protection, set the protection to "PROTECT ON". (See Section 4.4.1.)	0.000 % 0.000 m3/h

4.11.8. How to confirm the software version

Description

- Indicates the software version.

For actual keying, refer to the typical operation indicated below.

Operation (example)	Check the software version.	
Key operation	Description	Display
	Press the  key for 4 times to display "MAINTENANCE MODE".	MAINTENANCE MODE
		
	Press the  key once to display "RAS INFORMATION".	RAS INFORMATION 0000000000000000
		
	Press the  key for 9 times to display "VER. NO.".	* FSV**Y*3 Ver.30C
		
 	After checking, display the measurement mode by the  key or the  key.	0.000 % 0.000 m3/h

* The indicated version number is display example.

4.11.9. Initializing setting parameters

Description

- Initializes the setting parameters saved in the memory.
- Initializes those other than the zero adjusted values or analog output calibration value.

Initialize code: 0100 (4-digit number)



CAUTION

- This parameter is intended for our service personnel.
 - Do not attempt to initialize the setting parameters. Otherwise measurement is disabled.
- When the parameter is initialized, display language is set to English.
To switch the display language, refer to “4.5. Display language”.

For actual keying, refer to the typical operation indicated below. Set the protection to OFF beforehand. (See Section 4.4.1.)

Operation (example)	Initializes the setting parameters.	
Key operation	Description	Display
	Press the key for 4 times to display “MAINTENANCE MODE”.	MAINTENANCE MODE
	Press the key once to display “RAS INFORMATION”.	RAS INFORMATION 0000000000000000
	Press the key for 10 times to display “MEMORY INITIAL”.	MEMORY INITIAL
	Press the key twice to blink on the 2nd line.	MEMORY INITIAL 0000
	Set “0100” by the and the key.	MEMORY INITIAL 0100
	Press the key once to register.	MEMORY INITIAL ** COMPLETE **
		↓
	— Flow transmitter is reset, and the measurement mode is displayed. —	0.000 m/s 0.000 m3/h

4.11.10. LCD backlight setting

Description

- Sets the operation of the LCD backlight.
You can set that light is ON all the time/ light is OFF all the time/ light is ON only when key operation and light is OFF at setting time.

Setting content

- ON: LCD backlight is ON all the time.
- OFF: LCD backlight is OFF all the time
- Lights-out time: sets the time for backlight to put out.
 - When OFF is set, this function is enabled. [setting range: 0 to 99min]
 - When you set the setting time to 0 min, backlight is OFF all the time.

For actual keying, refer to the typical operation indicated below. Set the protection to OFF beforehand. (See Section 4.4.1.)

Operation (example)	Set the backlight ON time to 10minuites after key operation is completed.	
Key operation	Description	Display
<div>△</div>	Press the <div>△</div> key for 4 times to display "MAINTENANCE MODE".	<div>MAINTENANCE MODE</div>
<div>▼</div>		
<div>ENT</div>	Press the <div>ENT</div> key once to display "RAS INFORMATION".	<div>RAS INFORMATION</div> <div>0000000000000000</div>
<div>▼</div>		
<div>△</div>	Press the <div>△</div> key for 11 times to display "LCD BACKLIGHT"	<div>LCD BACKLIGHT</div> <div>ON</div>
<div>▼</div>		
<div>ENT</div>	Press the <div>ENT</div> key once to blink the cursor.	<div>LCD BACKLIGHT</div> <div>ON</div>
<div>▼</div>		
<div>△</div>	Press the <div>△</div> key once to select "OFF"	<div>LCD BACKLIGHT</div> <div>OFF</div>
<div>▼</div>		
<div>ENT</div>	Press the <div>ENT</div> key once to register "OFF"	<div>LCD BACKLIGHT</div> <div>OFF</div>
<div>▼</div>		
<div>ENT</div>	Press the <div>ENT</div> key once to blink the cursor on line2.	<div>LIGHT-OFF TIME</div> <div>05min</div>
<div>▼</div>		
<div>▶</div> <div>△</div>	Set "10" by the <div>▶</div> and the <div>△</div> key.	<div>LIGHT-OFF TIME</div> <div>10min</div>
<div>▼</div>		
<div>ENT</div>	Press the <div>ENT</div> key once to register.	<div>LIGHT-OFF TIME</div> <div>10min</div>
<div>▼</div>		
<div>ESC</div> <div>△</div>	Display the measurement mode by the <div>ESC</div> key and the <div>△</div> key.	<div>0.000 m/s</div> <div>0.000 m3/h</div>

4.11.11. How to set the detailed setting

Description

- The data required for time difference measurement can be set as follows.



CAUTION

- This parameter is intended for our service personnel.
- Do not change the setting by yourself. Otherwise measurement may be disabled.
- Make the detailed setting only when a problem should arise in flow rate measurement with factory default settings, and instructed to do so by a trained factory representative. Setting need not be made in other cases.


● Setting items

Item	Input method	Function, range or menu
Transmission count	Select	The number of transmission of ultrasonic signals per flow rate signal output ^{*1} . (Factory-set value: 128) ● 16, 32, 64, 128
Number of transmitted waves	Numeric value	Setting of transmission wave of ultrasonic signals (Factory-set value: 3 waves) ● 1 to 31
Transmission wait time	Numeric value	Transmission interval of ultrasonic signals. (Factory-set value: 5msec) 5msec to 30msec
Converter Level	Select	Setting of the trigger level (detection point) of ultrasonic receiving signals. (Factory-set value: -220mV) ● -35mV, -50mV, -75mV, -125mV, -220mV, -410mV, -775mV, -1500mV
Signal monitor	Select	Monitoring judgment of the detection points of forward and reverse direction received signals. (Factory-set value: Converter level) ● OFF, Converter level, P/H alarm, Converter level + P/H alarm
Window control	Select Numeric value Numeric value	Setting of control method of measurement window that takes in signals (Factory-set value: AUTO) ● AUTO ● MANUAL Set the time of starting taking in signals (period from the start of transmission until the startup of window signals) ● U: open time: 18μs to 16406μs ● D: open time: 18μs to 16406μs Note) U: forward direction, D: reverse direction In case of MANUAL, set U and D.
AGC gain	Select Numeric value Numeric value	Setting of control method of signal AGC gain (Factory-set value: AUTO) Signal peak is controlled to be kept at 2.0V _{PP} . ● AUTO ● MANUAL Make the setting so that the signal peak in both forward and reverse directions is kept at 2.0V _{PP} . ● Forward gain: 1700 to 4000 ● Reverse gain: 1700 to 4000
Success rate	Numeric value	Ratio of the number of normal measurements per output of the flow signal (factory-set value: 25%) ● 0 to 100%

For actual keying, refer to the typical operation indicated below. Set the protection to OFF beforehand. (See Section 4.4.1.)

*1) Forward-direction signals are taken in with forward total time measurement and reverse-direction signals are taken in with reverse total time measurement. They are conducted alternately for the transmission count. Forward and reverse signal data is added for the transmission count and averaged. The result is 1 output of signal in forward/reverse direction.

[Outline drawing of signal processing]

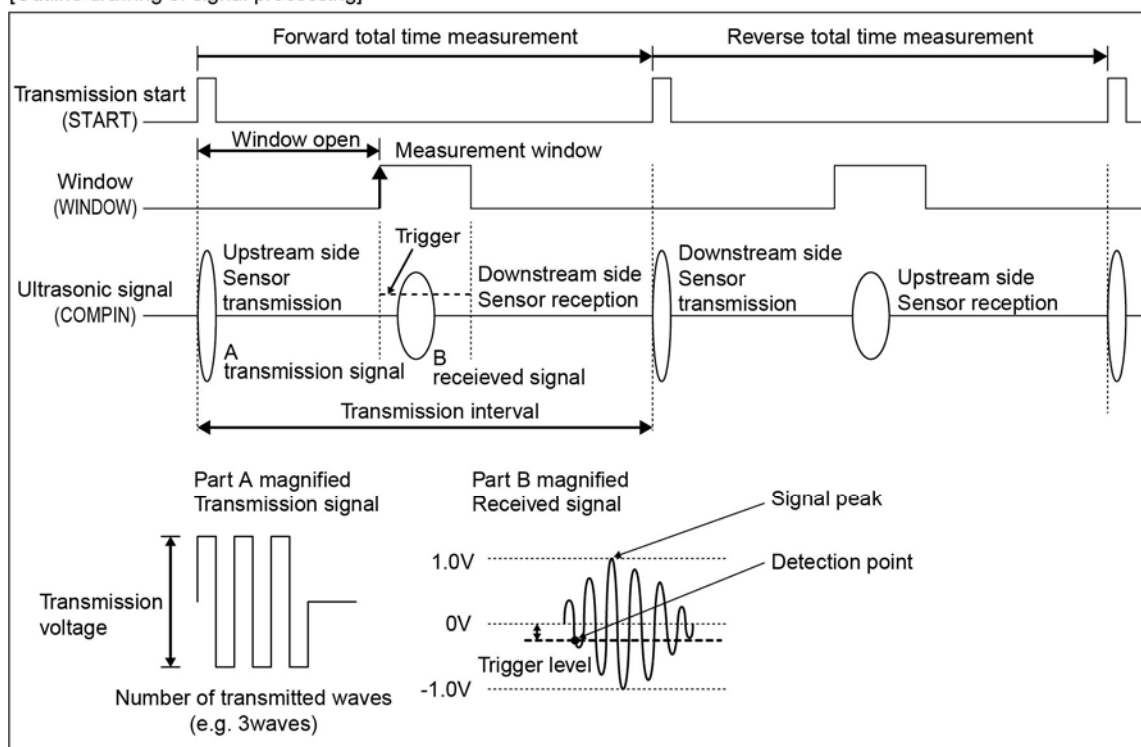

Note) Make the setting, following the description in "6.5.6. Checking received waveforms".

Operation (example)	Set the converter level to "-125mV"	
Key operation	Description	Display
	Press the key for 4 times to display "MAINTENANCE MODE".	MAINTENANCE MODE
	Press the key once to display "RAS INFORMATION".	RAS INFORMATION 0000000000000000
	Press the key for 14 times to display "DETAILS".	DETAILS
	Press the key once to display "TRANS.COUNT".	TRANS.COUNT 128
	Press the key for 3 times to display "CONVERTER LEVEL".	CONVERTER LEVEL -220mV
	Press the key once to select, and press it once again to blink on the 2nd line.	CONVERTER LEVEL -220mV
	Press the key for 7 times to display "-125mV".	CONVERTER LEVEL -125mV
	Press the key once to register.	CONVERTER LEVEL ** COMPLETE **
	—— "CONVERTER LEVEL" has been registered. ——	CONVERTER LEVEL -125mV
	Press the key twice and then press the key once to enter the measurement mode.	0.000 m/s 0.000 m3/h

5. Mounting of detector

5.1. Detector mounting procedure

Mount the sensor on the pipe, and perform the following steps in order before making measurement.

Reference section	Work item	: Outline steps
5.2	Selection of mounting method	: Check the V/Z method, pipe size, and detector.
↓		
5.3	Mounting method on the pipe	: Apply acoustic couplant to the detector oscillation surface, and connect the signal cable.

For the “5.3.Mounting method on the pipe”, refer to the separate instruction manual “ULTRA SONIC FLOW METER DETECTOR”

5.1.1. Mounting of detector

For sensor spacing, select either method in advance.

Calculate from flow transmitter

Turn ON the flow transmitter.

Enter the piping information, etc described in Section 4.6.2, and display it.

Display example: PROCESS SETTING S=16 (48mm)



During wiring work, be sure to turn the power off.



Calculate from our website.




Address https://www.fujielectric.com/products/sensors_measurements/instruments/product_series/software_ultra.html





5.1.2. Image figure of mounting dimension

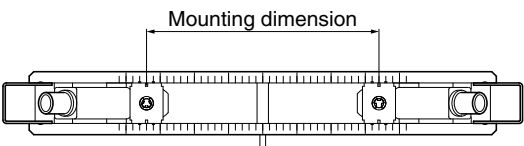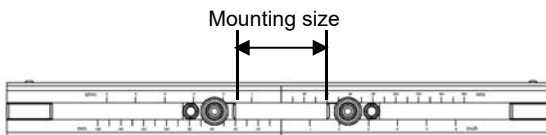Type	FSS, FLS_12, FLS_22	FSSC
Mounting method	V method	V method
Mounting dimension		

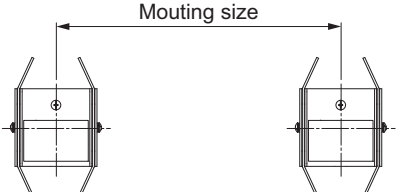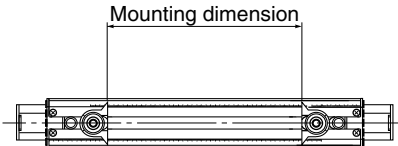Type	FSSE, FSG_50, FSG_51	FSSD, FSD22, FSD32
Mounting method	V method	V method
Mounting dimension		

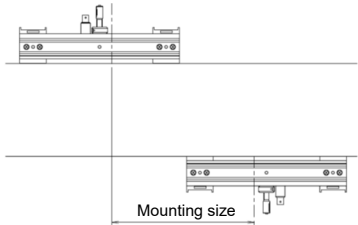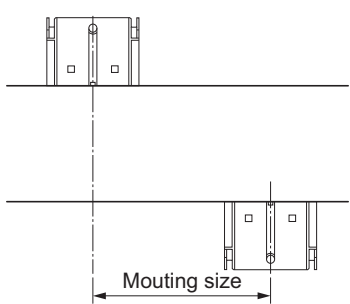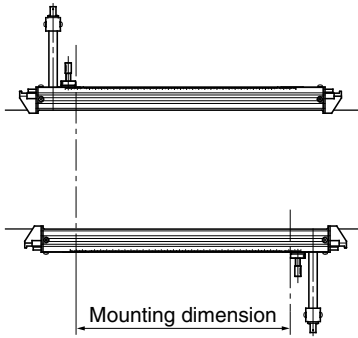Type	FSSC	FSSE, FSG_50, FSG_51	FSSH, FSD32
Mounting method	V method	V method	V method
Mounting dimension			

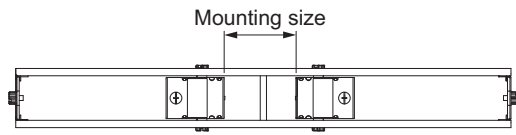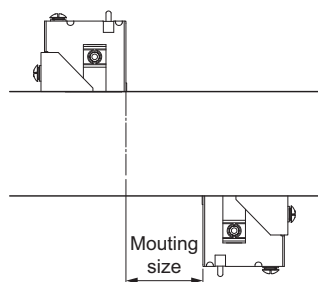Type	FSG_31, FSG_32	FSG_41
Mounting method	V method	Z method
Mounting dimension		

5.2. Selection of mounting method

There are 2 methods for mounting the detector; V method and Z method. (See Fig. 5-1.)

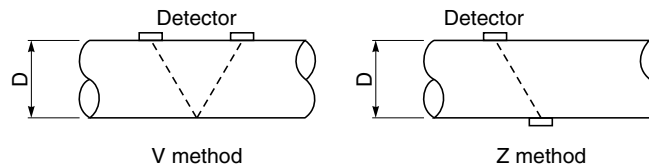


Fig. 5-1 Mounting method

The Z method should be used in the following cases.

- Where a V mounting space is not available.
- When measuring fluid of high turbidity such as sewage.
- When the pipe has a mortar lining.
- Piping is old and presumed to have a deposit of a thick layer of scales inside the piping.

Selection standard

The Z method for large size sensor is recommended for outer diameter 300mm or more.

Type	Fluid temperature [°C]	Mounting method	Inner diameter of piping ø (mm)											
			13	25	50	100	200	250	300	400	600	1000	3000	6000
FSSA	-20 to 100	V	25 P, M 225											
FSSC	-40 to 120	V	50 P, M 600 50 Px 300											
		Z	200 P, M 1200 200 Px 600											
FSSE	-40 to 80	V	200 Px, P, M 3000											
		Z	200 Px, P, M 6000											
FSSD	-40 to 100	V	13 Px, P, M 100											
FSSH	-40 to 200	V	50 Px, P, M 250											
		Z	150 Px, P, M 400											

Classification of piping materials {
Px : PP, PVDF
P : Plastic (PVC, etc.)
M : Metallic piping (steel pipe, copper pipe, aluminum, etc.)

Note: If ultrasonic waves cannot pass through the piping because the piping material category is Px or the turbidity of the fluid is high, it is recommended to use FSSC, FSSE types.

5.3. Mounting method on the pipe

Refer to the separate instruction manual "ULTRASONIC FLOWMETER DETECTOR"



https://www.fujielectric.com/products/sensors_measurements/instruments/product_detail/flow_ultra_fsv.html

6. MAINTENANCE AND CHECKUP

6.1. Daily Check

Visually check the following items.

- Whether flow transmitter cover screws are loose. ⇒ Tighten.
- Whether cable glands are loose. ⇒ Tighten.
- Whether detector mounting band is loose. ⇒ Tighten.
- Whether received wave is abnormal (LED lit red). ⇒ Check whether piping is filled or not. Remove bubbles or foreign matters, if mixed in measurement pipe. Also check if detector mounting and wiring are set up properly.
- Whether the main unit is dusty or dirty. ⇒ Use a soft cloth to wipe them off. If necessary, moisten a soft cloth with the water and wring it out before wiping.
Note) Do not use volatile solvents such as benzine or thinner, as they may damage the paint or coating.

6.2. Periodic Inspection

6.2.1. Checking zero point

Stop the fluid flow, fill the measurement pipe fully, and check the zero point.

6.2.2. Reapplying grease

When using grease for the acoustic couplant, reapply it on the transmission surface of the sensor unit approximately once every 6 months.

Note) Silicone rubber need not be reapplied.

Refer to the separate instruction manual "ULTRA SONIC FLOWMETER DETECTOR"

6.2.3. How to measure the insulation resistance

6.2.3.1. Flow transmitter : FSV...S (IP66)



CAUTION


Turn off power before opening the flow transmitter cover.

If you choose the indoor type flow transmitter, please do not open the flow transmitter cover outside.

The power terminals are provided with an arrester as standard.

Measurement point: measure between power terminal and ground terminal, each outputs and ground terminal.

The insulation resistance performance of the equipment is 100 MΩ/500 V DC.

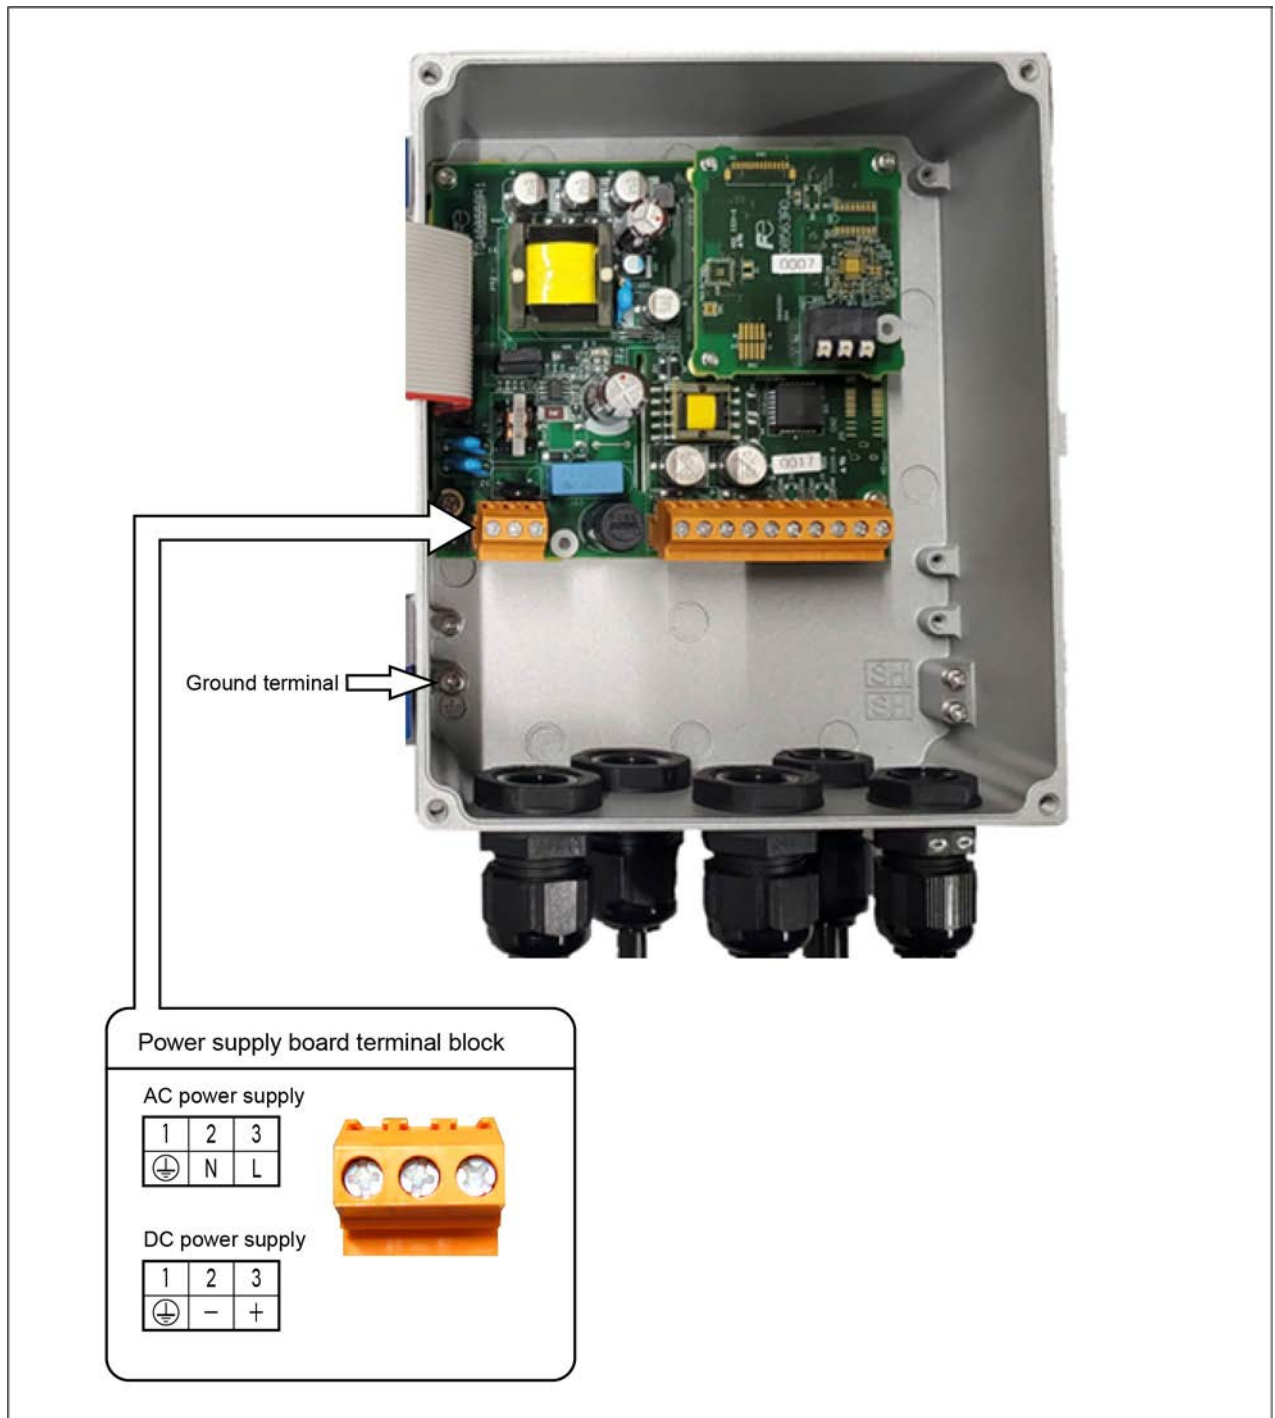

6.2.3.2. Flow transmitter : FSV...H (IP67)

CAUTION


Turn off power before opening the flow transmitter cover.

If you choose the indoor type flow transmitter, please do not open the flow transmitter cover outside.

The power terminals are provided with an arrester as standard.

Measurement point: measure between power terminal and ground terminal, each outputs and ground terminal.

The insulation resistance performance of the equipment is 100 M Ω /500 V DC.

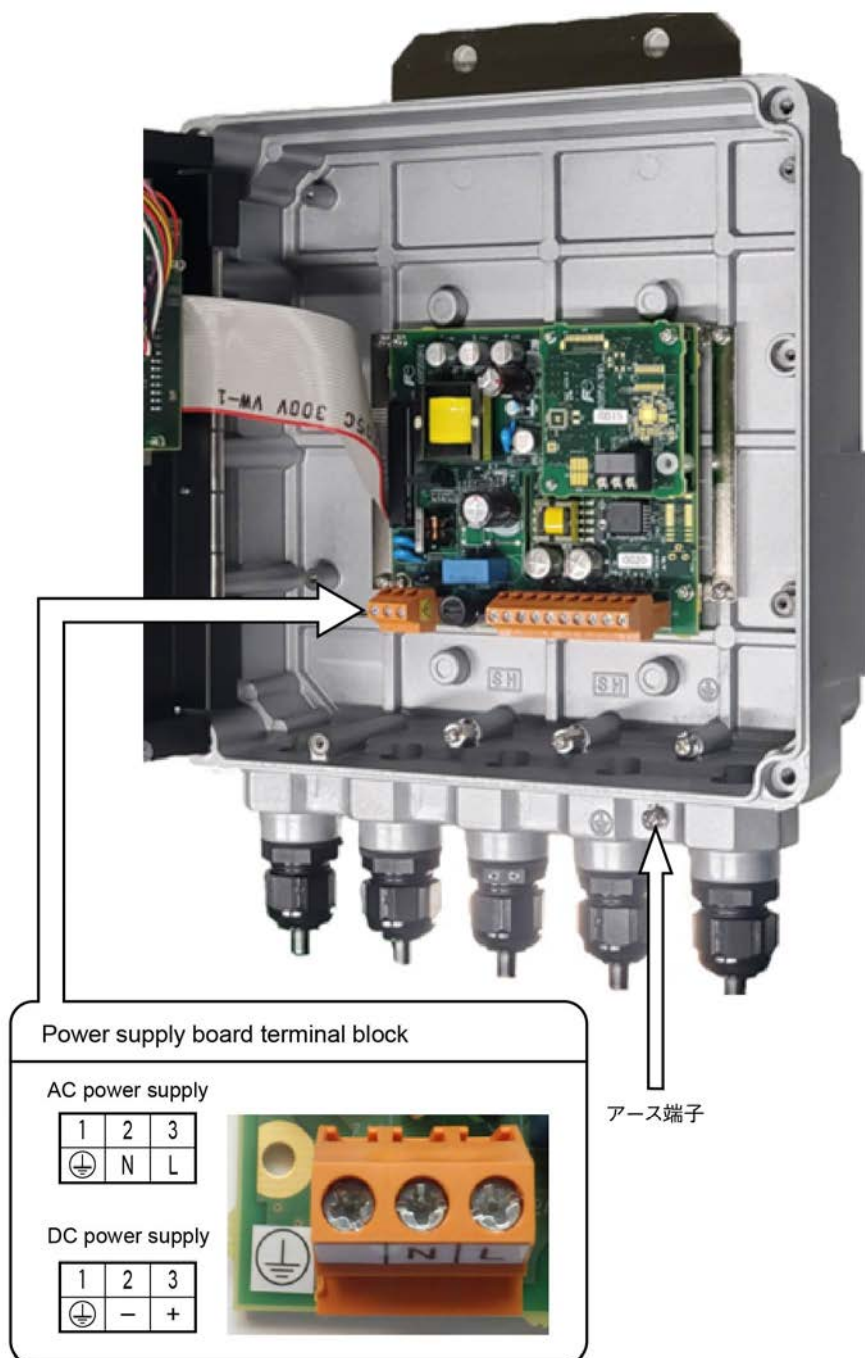

6.3. How to replace the fuse



CAUTION

Be sure to turn off the power before replacing the fuse.

If you choose the indoor type flow transmitter, please do not open the flow transmitter cover outside.

Fuse specifications of AC power supply and DC power supply are same.

5.0mm (diameter) × 20mm (long), 250V, 1.25A

Clearing characteristics (T), breaking capacity (L)

Example: 02181.25MXP 250V, 1.25A manufactured by littelfuse.

6.3.1. Flow transmitter : FSV...S (IP66)

- (1) Opening the cover after turning off power.
Loosen 4 screws from the flow transmitter front, and open the cover.
- (2) Replace the fuse.
Detach the fuse holder from the power supply board with flathead screwdriver, and replace the fuse. Then, put the fuse holder back in place.
- (3) Closing the cover.
Close the cover, and tighten 4 screws.




CAUTION

Turn on power only after closing the cover.

6.3.2. Flow transmitter : FSV...H (IP67)

- (1) Opening the cover after turning off power.
Loosen 4 screws from the flow transmitter front, and open the cover.
- (2) Loosen 2 screws from the setting section of the display unit, and open the cover.
- (3) Replace the fuse.
Detach the fuse holder from the power supply board with flathead screwdriver, and replace the fuse. Then, put the fuse holder back in place.
- (4) Close the setting section of the display unit, and tighten 2 screws.
- (5) Closing the cover.
Close the cover, and tighten 4 screws.

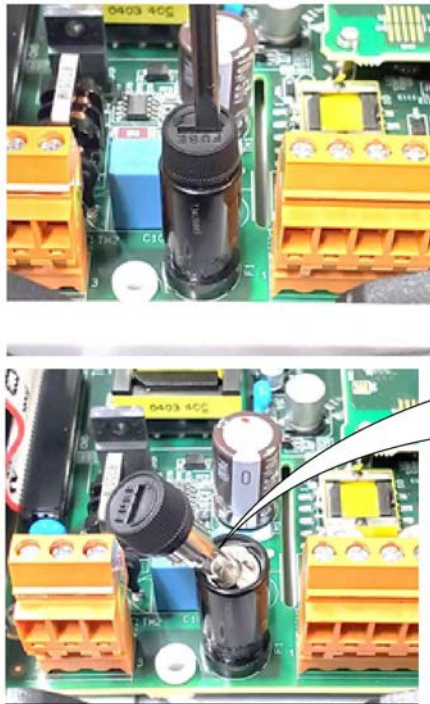

CAUTION

Turn on power only after closing the cover.

6.4. How to replace the LCD

The nominal service life of the LCD is 7 years. The contrast gradually deteriorates with time. Replace it about 5 years after starting its use.

6.4.1. Flow transmitter : FSV...S (IP66)


[How to replace]

- (1) Open the cover after turning OFF power.
- (2) Remove the flat cable connector.
- (3) Loosen 4 screws from the mainboard and then pull out the main board.
- (4) Loosen 4 screws from the LCD unit.
- (5) Put the insulation sheet on the New LCD unit (see parts list) which was attached to previous LCD unit around the screw and fix it to the New LCD with screws.
Be sure not to tighten the screws too much since screws are made of plastic.
- (6) When you mount the main board, insert mainboard to the connector of LCD unit properly.
- (7) Connect the flat cable connector. (Insert it securely all the way.)
- (8) Close the cover and turn on the power.
- (9) Check that the LCD display and key operation are functioning correctly.
- (10) Be sure to conduct the contrast adjustment for brightness of the display.



CAUTION

Be sure to turn off the power before opening the cover. The unit contains high voltage.
If you choose the indoor type flow transmitter, please do not open the flow transmitter cover outside.
Do not conduct the replacement when your body holds the static electricity. It causes the failure.
Do not conduct the replacement with wet hands. It causes failure.

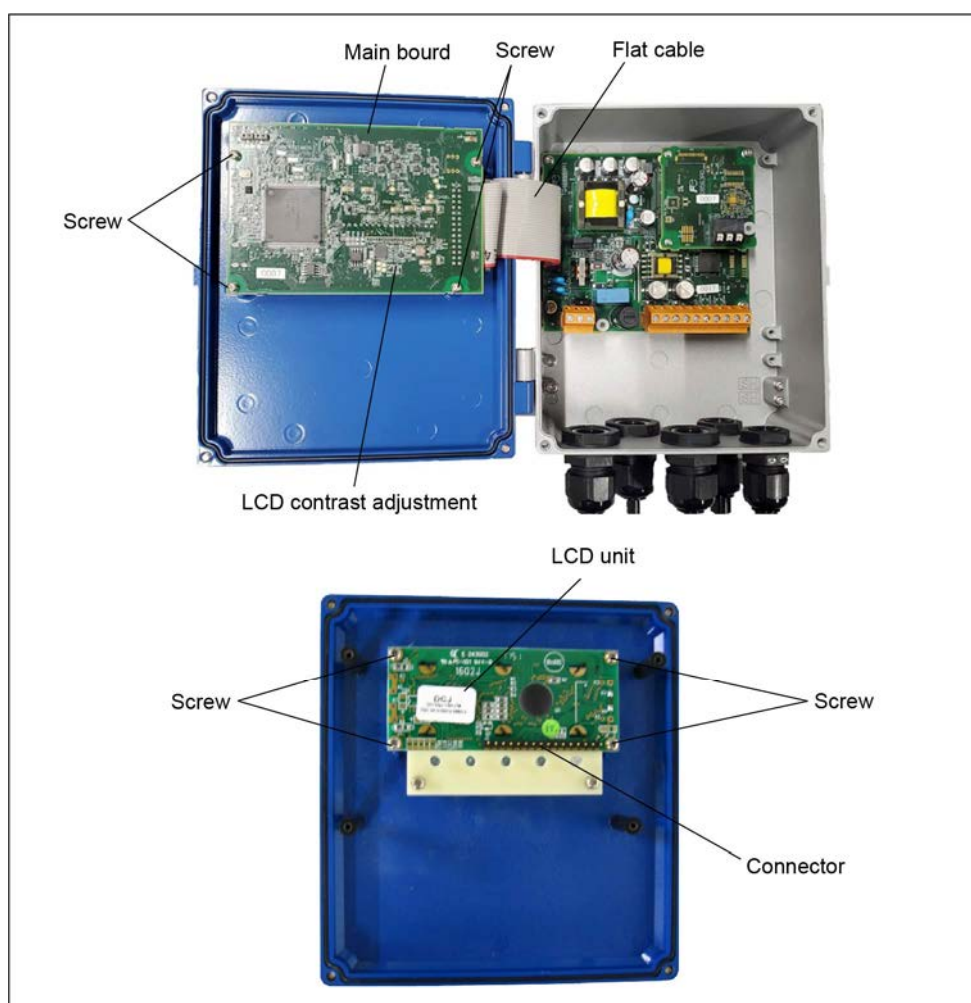

6.4.2. Flow transmitter : FSV...H (IP67)


[How to replace]

- (1) Open the cover after turning OFF power.
- (2) Loosen 2 screws from the setting section of the display unit, and open the cover.
- (3) Remove the flat cable connector.
- (4) Remove the LCD cable connector.
- (5) Loosen 3 screws from mainboard.
- (6) Loosen 4 screws from the LCD unit.
- (7) Mount a new LCD unit (see parts list).
- (8) Mount the mainboard.
- (9) Connect the LCD cable connector.
- (10) Connect the flat cable connector. (Insert it securely all the way.)
- (11) Close the setting section of the display unit, and tighten 2 screws.
- (12) Close the cover and turn on the power.
- (13) Check that the LCD display and key operation are functioning correctly.
- (14) Be sure to conduct the contrast adjustment for brightness of the display.






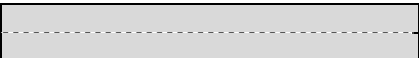
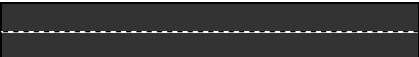
CAUTION

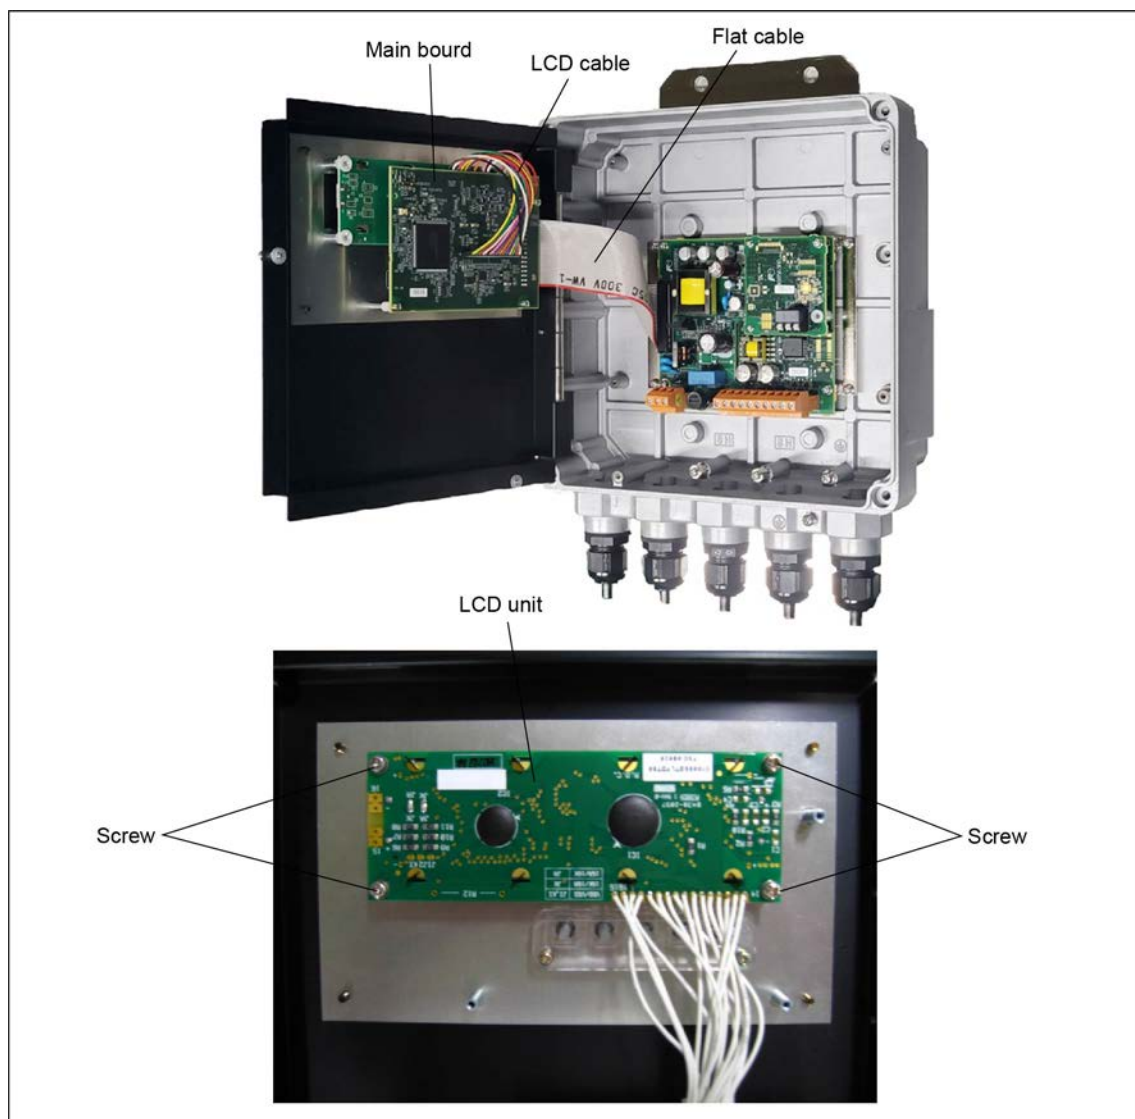Be sure to turn off the power before opening the cover. The unit contains high voltage.
If you choose the indoor type flow transmitter, please do not open the flow transmitter cover outside.
Do not conduct the replacement when your body holds the static electricity. It causes the failure.
Do not conduct the replacement with wet hands. It causes failure.














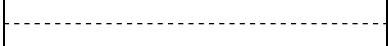




6.5. ERROR AND REMEDY

6.5.1. Display error

State	Probable cause
 Nothing is displayed.	Power supply is not turned on. Low power supply voltage Fuse is blown out. LCD error ⇒ Refer to "6.5.7. Remedying a hardware fault". Reverse polarity of DC power supply
 Upper side appears black.	Low power supply voltage Reverse polarity of DC power supply LCD error ⇒ Refer to "6.5.7. Remedying a hardware fault".
 Irrational display	Hardware error ⇒ Refer to "6.5.7. Remedying a hardware fault".
 Pale display	Ambient temperature is low (-20°C or lower) ⇒ Increase temperature. LCD has reached the end of its service life. ⇒ Replace the LCD.
 Entire display is blackish.	Ambient temperature is high (50°C or higher) ⇒ Decrease temperature.
LCD characters are skipped. LED does not come on	Refer to "6.5.1.1. Checking the LCD/LED" for LCD/LED. The dots on the LCD are missing or the LED does not come on. ⇒ Refer to "6.5.7. Remedying a hardware fault".
LED is displayed in red.	Received wave is abnormal. ⇒ Refer to "6.5.1.2. Checking the LED lit in red".


6.5.1.1. Checking the LCD/LED

Follow the procedure shown below to check possible display errors.

Key operation	Description	Display
 ▼  ▼  ▼  ▼  ▼	Press the  key for 4 times to display "MAINTENANCE MODE". Press the  key once to display "RAS INFORMATION". Press the  key for 12 times to display "LCD/LED CHECK". Press the  key once. Every time the  key is pressed, the display is switched in the order shown below. LCD: OFF completely LED: Lit in green LCD: Darkened LED: Lit in red If dots on the LCD are missing or the LED does not come on, the LCD/LED may have failed.	MAINTENANCE MODE RAS INFORMATION 0000000000000000 LCD/LED CHECK  ● ← Lit in red  ● ← Lit in green 0.000 m/s 0.000 m3/h
 	Obtain a measurement-mode display using the  and the  keys.	




6.5.1.2. Checking the LED lit in red

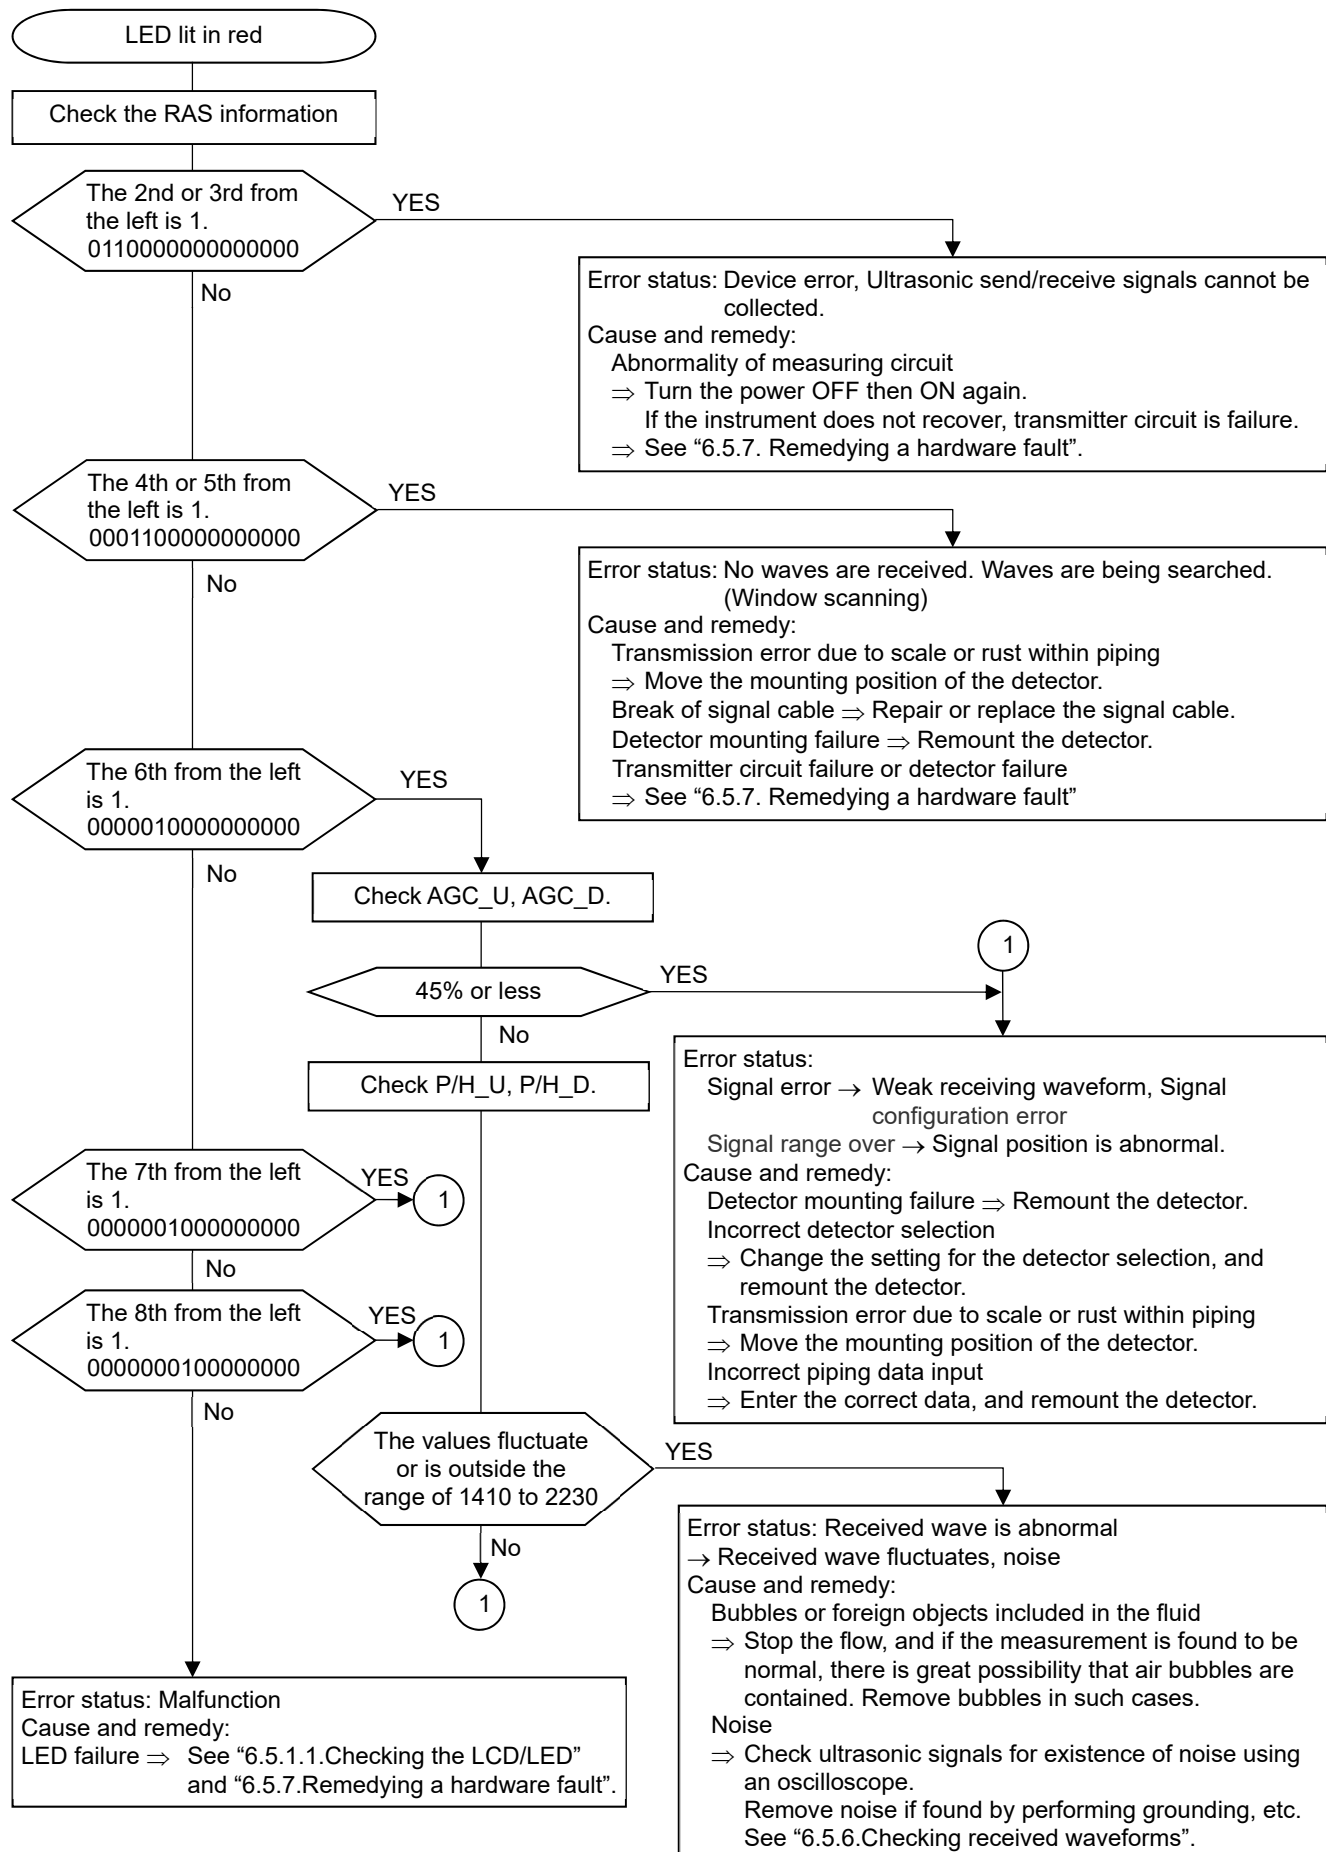


Check the LED lit in red, following the procedure shown below.




6.5.1.3. Checking the RAS information

When the red LED lights up, check the error contents according to the RAS information.


Key operation	Description	Display
	Press the key for 4 times to display "MAINTENANCE MODE".	MAINTENANCE MODE
 	Press the key once to display "RAS INFORMATION".	RAS INFORMATION 0000000000000000

If the display is abnormal, 1 is set.
Move the cursor to 1 by the  key,
and press the  key to display the
status contents. Pressing the 
key again displays the
troubleshooting.

Configuration of the RAS information

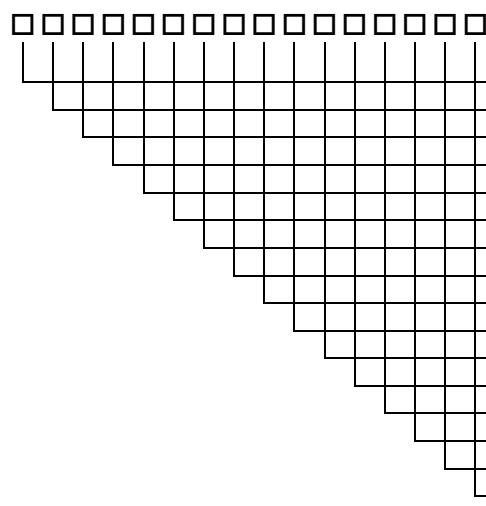

Comparison of error with LED

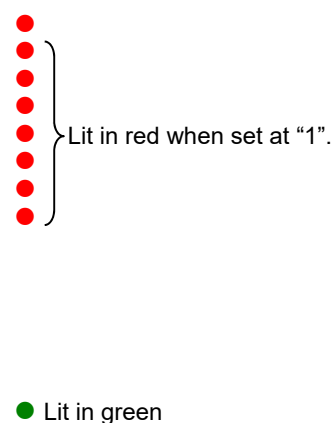

RAS information	Status	Troubleshooting
E1: Device error 1	Backup memory failure	See "6.5.7. Remediating a hardware fault".
E1: Device error 2	Abnormality of measuring circuit	Turn the power off then on again. If the instrument does not recover properly, refer to "6.5.7. Remediating a hardware fault".
E2: Data collection error	Ultrasonic send/receive signals cannot be collected.	Move the mounting position of the detector, and remount the detector.
E2: Window scanning	The ultrasonic receiving signal waveform is being detected.	Repair or replace the signal cable. Transmitter circuit failure or detector failure ⇒ See "6.5.7. Remediating a hardware fault".
E2: No received signal	No ultrasonic receiving signal waveform	Check the air bubbles or foreign objects. Check the receive sensitivity. ⇒ Move the mounting position of the detector, and remount the detector.
E2: Received signal error	The status of received waveform is poor.	Check the piping data. Check the detector mounting dimensions.
E2: Received signal range over	Receiving signal waveform is outside the appropriate range.	Check the piping data. Check the receive sensitivity. ⇒ Move the mounting position of the detector, and remount the detector.
E2: Calculation failure	The value of detected measurement data is abnormal.	Check the range data and the totalize setting.
E4: Range over	Analog output and total output exceed the range.	

Correspondence between DO output and Alarm

- "All" : Alarm is issued at occurrence of E1 or E2. [Burnout timer is enabled]
- "Device error" : Alarm is issued at occurrence of E1. [Burnout timer is disabled]
- "Process error" : Alarm is issued at occurrence of E2. [Burnout timer is enabled]

Burnout timer is to set a time between error occurrence and contact output.

6.5.2. Displaying the data in maintenance mode

Follow the procedure shown below to check possible display errors.

Key operation	Description	Display
	Press the key for 4 times to display "MAINTENANCE MODE".	MAINTENANCE MODE
 	Press the key once to display "RAS INFORMATION".	RAS INFORMATION 0000000000000000
 	Press the key for 13 times to display "DATA DISPLAY".	DATA DISPLAY
 	Press the key. Displays the transit time and the window value calculated from the piping setting.	T0 C: 89 usec WinC: 80 usec
 	Press the key once. Displays the measurement value of transit time, T1 (forward time), and T2 (reverse time) from the piping setting.	T1: 0.000 usec T2: 0.000 usec
 	Press the key once. Displays the measurement value of average transit time, T0, and transit time difference, DT.	T0: 0.000 usec DT: 0.00 nsec
 	Press the key once. Displays the calculated value of pass time of the substances other than fluid, Ta, and angle of incidence of the fluid, θ .	Ta: 0.0000 usec θ : 0.000°
 	Press the key once. Displays the calculation value of sound velocity in fluid, Cf, and Reynolds number, Re.	Cf: 0.0 m/s Re: 0
 	Press the key once. Displays correction coefficient of flow velocity distribution, K, and flow velocity, V.	K: 1.3333 V: 0.000 m/s
 	Press the key once. AGC displays the intensity of received signals. The larger the value, the larger the intensity of received signals. Normal measurement values fall in 45% or more. e.g. if the display appears as 43.1%, it means lack of receiving signals. Ultrasonic waves may not be transmitted because of insufficient water volume or rust of piping.	AGC U: 0.00 % AGC D: 0.00 %
 	Press the key once. P/H displays the peak value of received signal waveform. Normal values stably fall within the range from 1410 to 2230. If the value fluctuates significantly, objects that constitute barriers against ultrasonic wave transmission such as air bubbles or foreign matter may be contained in the fluid. Stop the flow and check if normal value is resumed. If so, there is a possibility that air bubbles are contained.	P/H U: 1777 P/H D: 1780
 	Press the key once. Displays the detection level value of received signal waveform and success rate. Normal values range of success rate is 25% or more.	TRG : -220mV HIT: 100%
	Press the key or the key to return the measurement mode.	

6.5.3. Keying is abnormal

Status	Probable cause
No response is made to key input.	Hard failure ⇒ Refer to “6.5.7. Remedying a hardware fault”.
Certain key is not responded. Action is not as defined.	

6.5.4. Error in measured value

Status	Probable cause	Troubleshooting
The reading appears with “-” (minus).	● Connection between main unit and sensor units (upstream, downstream) are inverted.	Connect properly.
	● Flow of fluid is reversed.	Exchange signal cables of upstream and downstream
Measured value fluctuates though flow rate is constant.	● Straight pipe length is inadequate.	Move the sensor to the place where the length of 10D can be assured on upstream side and 5D on downstream side.
	● Pump, valve or others which disturb the flow are located nearby.	Mount the instrument with a clearance of 30D or more.
	● Pulsation exists in flow.	Set the damping to increase the response time.
Measured value remains the same though flow rate is changing. (LED lit in red)	<p>Measured value is held because ultrasonic wave cannot be propagated into a pipe.</p> <p>1. Incomplete installation</p> <div> <p>Error in piping specifications Sensor is mounted on welding. Error in sensor mounting dimensions Error in acoustic coupler at the time of mounting the sensor Error in connection of the signal cable.</p> </div>	<div> <p>Upon checking, remove the sensor, apply acoustic coupler, and slightly off position the sensor.</p> </div>
	<div> <p>Sensor mounting is poor Mounting dimension The sensor is coming off the pipe.</p> </div>	<div> <p>Mount the sensor in parallel with pipe, allowing correct sensor unit spacing. Mount the sensor properly so that it is kept in close contact with the pipe.</p> </div>
	<p>2. Problem on pipe or fluid</p> <p>○ Pipe not filled with fluid</p>	<div> <p>Locate a place which is completely filled on the same piping line, and shift the sensor there. Attach the sensor to the lowest place on the pipeline.</p> </div>
	<p>○ Bubbles present in the fluid</p> <div> <p>Bubbles are introduced if reading is normal when flow is stopped.</p> <p>If mounted immediately downstream a valve, a cavitation causes the same phenomenon as when bubbles are introduced.</p> </div>	<div> <p>Eliminate ingress of bubbles. Raise the level of the pump well. Check the shaft seal of the pump. Retighten the flange of negative pressure pipe. Arrange so that fluid doesn't fall into the pump well.</p> <p>Move the sensor to the location where air bubbles have not entered. Inlet side of the pump Upstream side of the valve</p> </div>

(Continued on next page.)

Status	Probable cause	Troubleshooting
(Continued from the previous page.)	<ul style="list-style-type: none"> ○ High turbidity <div>Turbidity is higher than those of sewage and return sludge.</div> ○ Pipe is old and scale is attached on inside. ○ Lining is thick. <div>Because of mortar lining or the like, thickness is tens mm or more.</div> ○ Lining is peeled. <div>There is a gap between the lining and the pipe.</div> 	<div>Move sensor to a place of smaller diameter on the same pipeline. Move the sensor to other places or to different piping.</div>
	<ul style="list-style-type: none"> ○ Sensor is mounted on bend pipe or tapered pipe. <p>3. Effect of external noise</p> <div>There is a radio broadcasting station nearby. Measurement conducted near a passage of vehicles or electric cars.</div> <p>4. Hard failure</p>	<div>Mount the sensor on straight pipe.</div> <div>Reduce the length of signal cable from main unit to sensor minimally. Ground the main unit and piping.</div> <div>Refer to "6.5.7. Remedying a hardware fault".</div>
Measured value not zero when fluid stops flowing.	<ul style="list-style-type: none"> ● Fluid forms a convection inside the pipe. ● Zero point adjustment ● Pipe is not completely filled or is empty when water is at a standstill (LED lit red). 	<div>Normal</div> <div>Readjust the zero point after fluid has completely stopped flowing.</div> <div>Normal</div>
Error in measured value	<ul style="list-style-type: none"> ● Input piping specifications differ from the actual ones. ● Scales exist on wall of old pipe. 	<div>A difference of 1% in inner diameter causes an error of about 3%. Input the correct specifications. Input scale thickness as lining.</div>
	<ul style="list-style-type: none"> ● Insufficient linear pipe length (10D or more for upstream and 50D or more for downstream) 	<div>Find another mounting place (upstream of disturbing objects).</div> <div>No disturbing objects in flow within 30D upstream without pump, valve, combined pipe, etc.</div> <div>Mount the sensor at different angles with respect to the cross section of pipe to fine the location where mean value is obtainable. The mount the sensor at that location.</div>
	<ul style="list-style-type: none"> ● Pipe is not filled with fluid or sludge is deposited in the pipe. 	<div>Occurs particularly where sectional area is small. Move sensor to a vertical pipe.</div>

6.5.5. Error in analog output


Status	Probable cause	Troubleshooting
Current output is not matched.	Range setting is wrong.	Set the range correctly.
Not 4mA when measurement value is 0.	Analog output is misadjusted.	Perform analog output calibration.
Output is 0mA.	Break of wiring	Repair or carry out replacement
Output rises beyond 20mA.	"OVER FLOW" appears on the LCD.	Range over Recommence setting of range data of analog output.
The output becomes lower than 4mA.	"UNDER FLOW" appears on the LCD.	Back flow Set upper/lower stream properly.
Indication is changed but analog output remains the same.	The output load is 600 Ω or more.	It must be less than 600 Ω .
Indication does not agree with analog output.	Analog output is misadjusted.	Perform analog output calibration.
Analog output doesn't change even after it has been adjusted.	Hard failure	Contact manufacture or service.

6.5.6. Checking received waveforms

The unit has high-voltage part. Be sure to ask our service personnel for the steps described below.

6.5.6.1. How to connect the oscilloscope


Open the cover, and connect an oscilloscope to the check pin on the printed board according to the following figure. The unit has high-voltage components. Do not touch the parts other than those specified below.

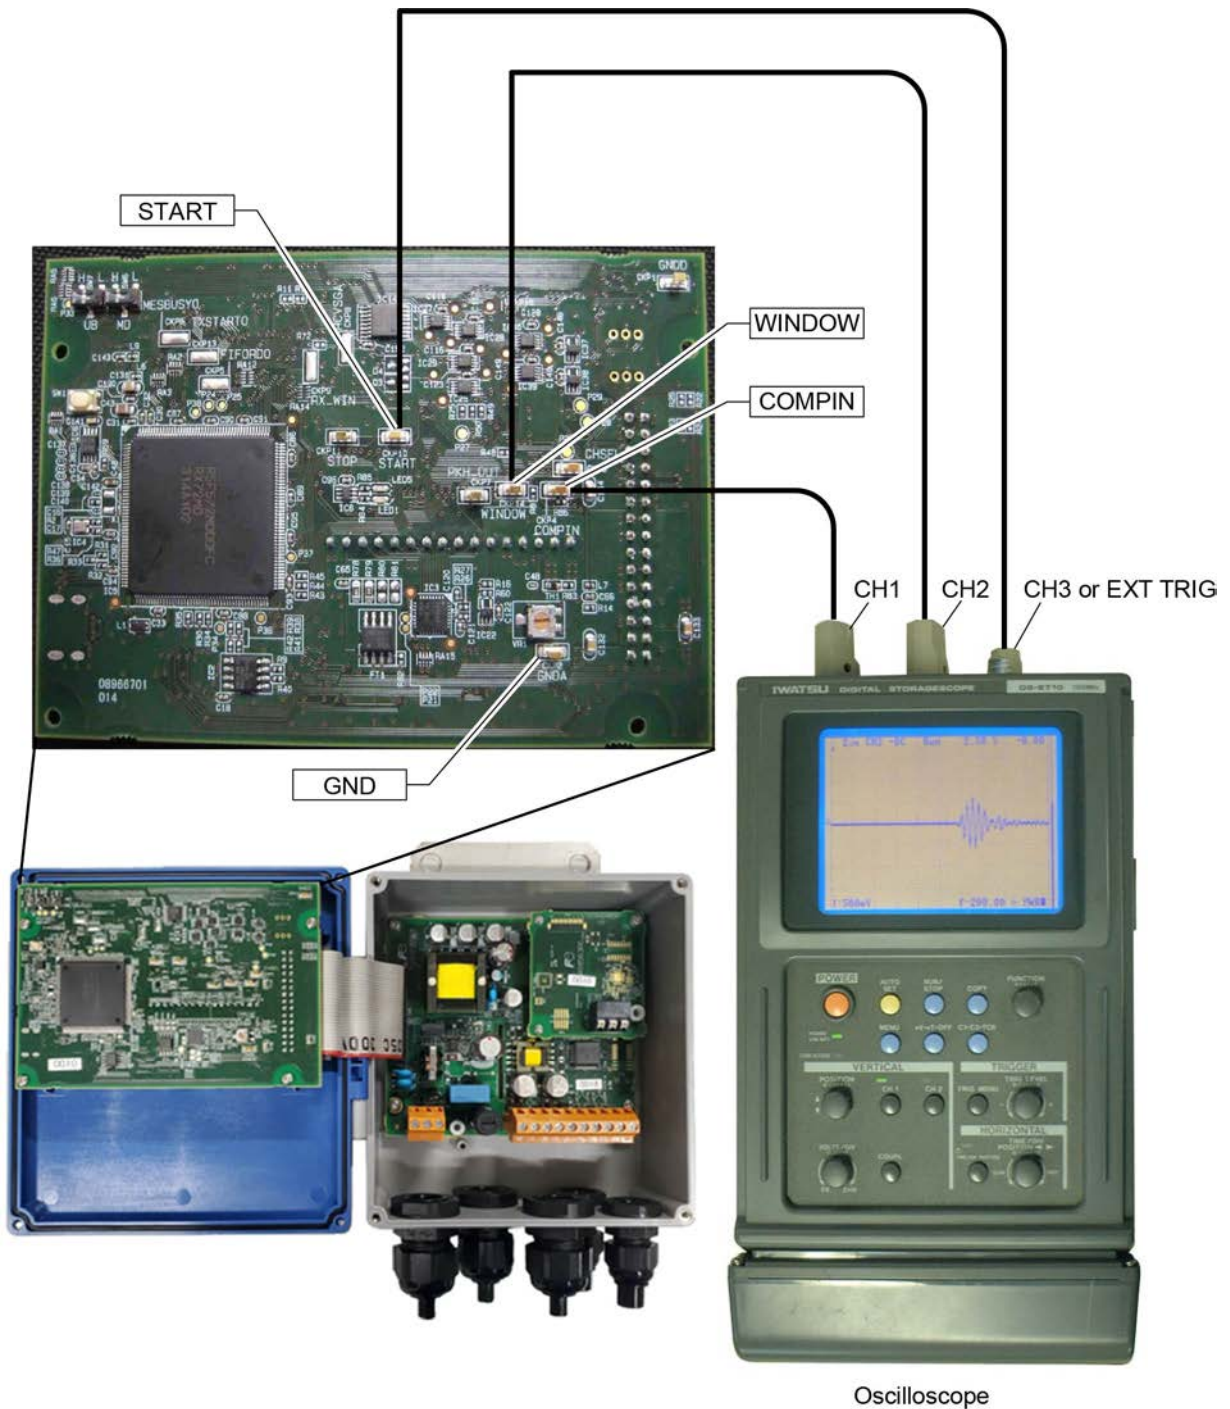

6.5.6.2. Checking sending/receiving


Monitor the waveform, and check the status of received waveform.

a) Normal status

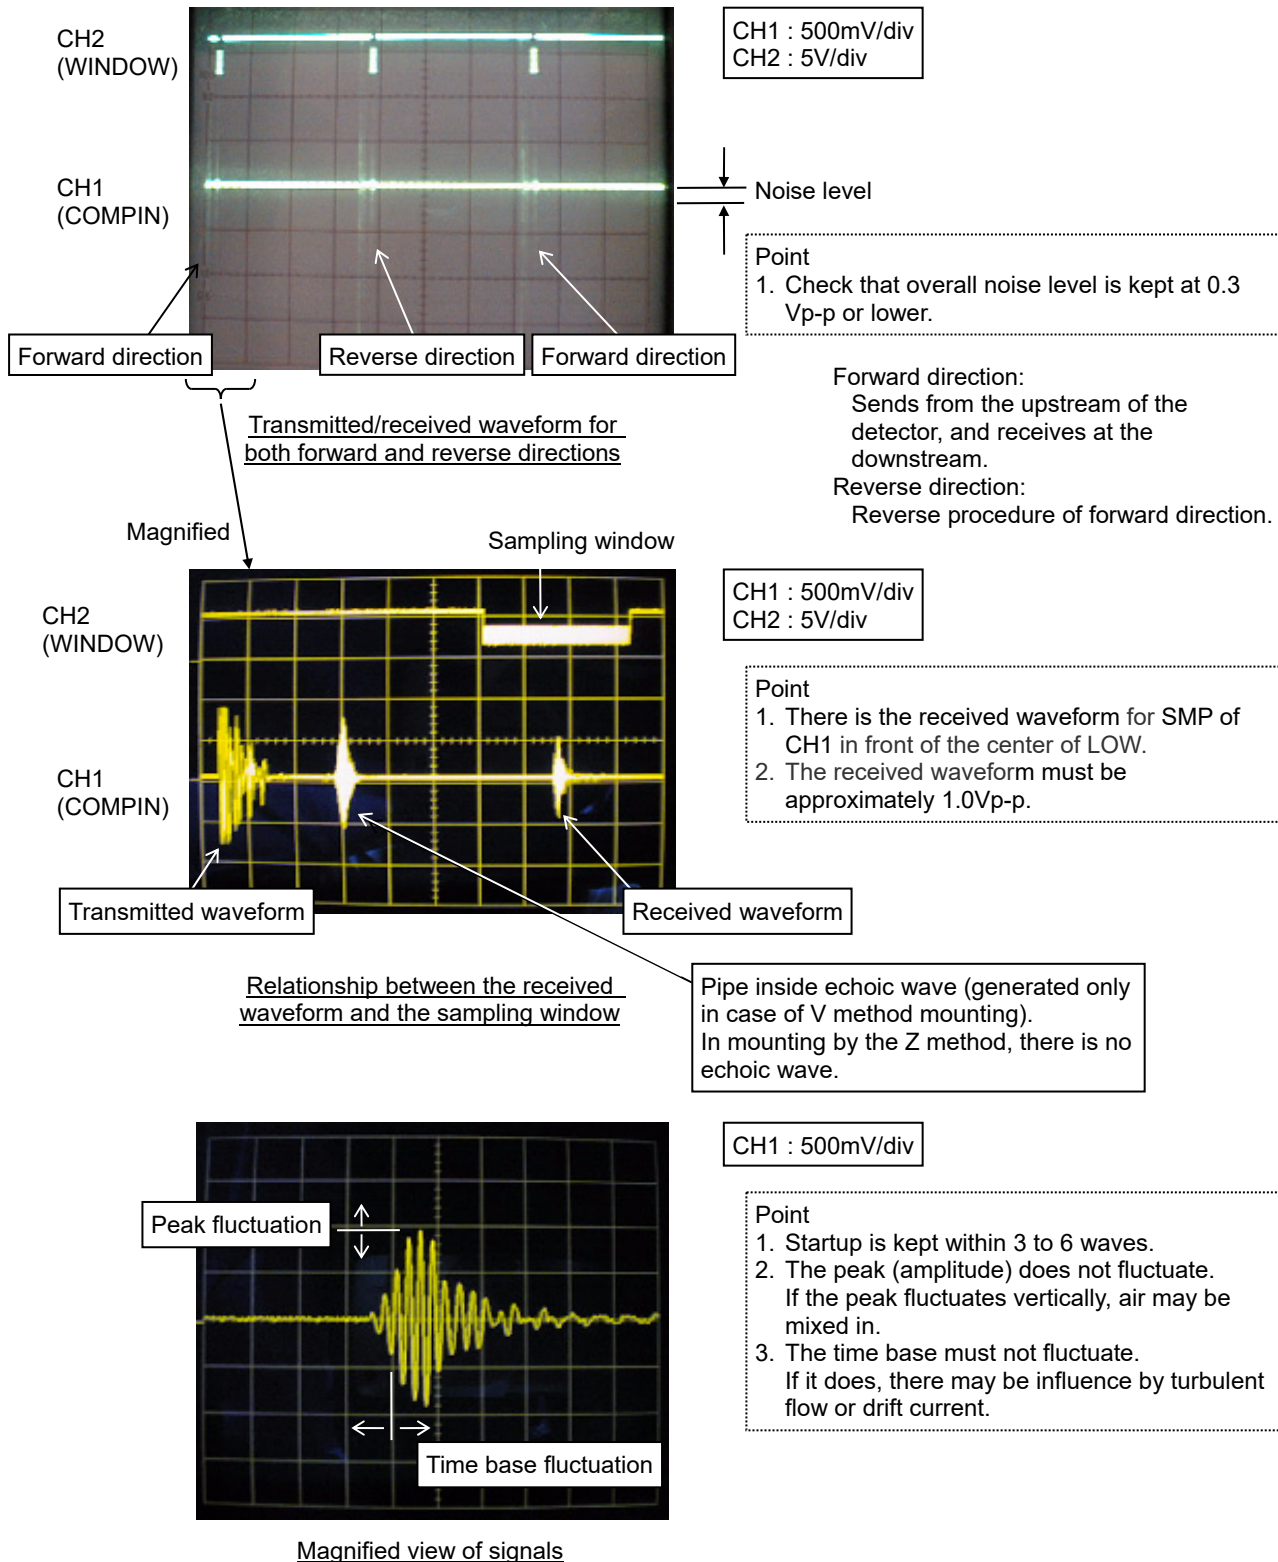


The received waveform controls the peak to be approximately 2.0Vp-p.

Startup of signals is not good

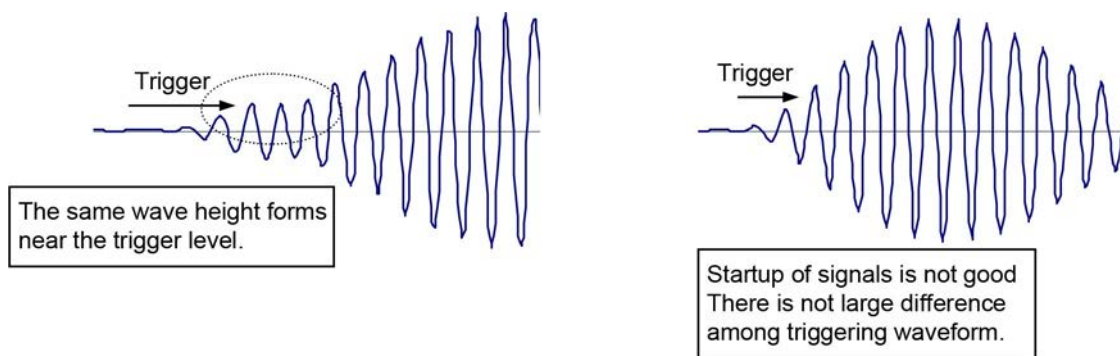

Cause of the poor startup signals


- (1) Incorrect detector mounting, dimensions (sensor mounting dimension, outer diameter, etc) and detector mounting angle

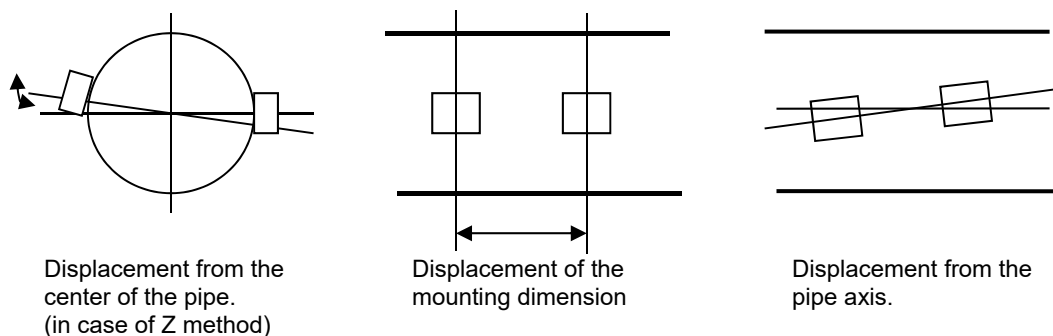

⇒ Mount the detector properly.

- (2) Interference from acoustic wave (It is likely to happen when the outer diameter is set longer than the actual length.)
⇒ Make a setting of the acoustic wave of the fluid type to be 20 to 50m/s lower, and remount the detector again.
Note) 1400m/s is set for water.


b) Noise on the one side

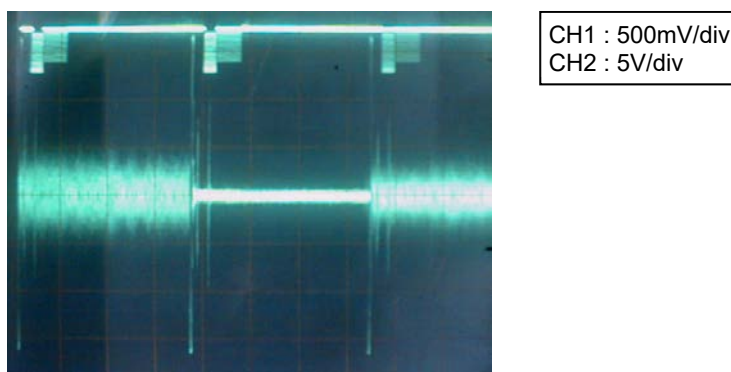

Waveform with noise on the one side


<Cause>	<Check>
Dedicated signal cable on the one side is abnormal.	Measure the insulation resistance.
Polarity of connected terminals is inverted.	Check the connection
Sensor on the one side is abnormal.	Peel off the detector and check the sensitivity
Detector bonding surface is peeling.	Peel off the detector and temporarily place it by grease, etc.
Dedicated signal cable is disconnecting.	Check the continuity.
Poor contact.	Check the connection

c) There is white noise all around.

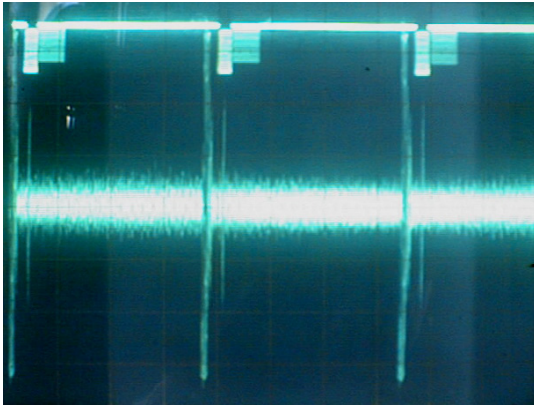

Waveform with the overall noise


d) Pulsed noise is observed.

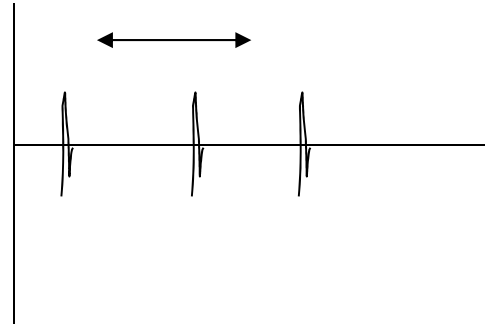

Waveform with pulsed noise on the signal line

Measurement can be performed if the noise level is smaller than the received waveform level ($0.75V_{0-p}$).

<Cause>	<Check>
Noise is placed on the power line.	Check the power line using an oscilloscope, and install a noise-suppression transformer.
Noise is placed on the grounding line (panel earth, etc).	Check the power line using an oscilloscope, and remove the ground wire.
Dedicated signal cable is picking the inductive noise.	Move the flow transmitter near the detector and perform confirmation. Keep the dedicated signal cable apart from the power cable.
The distance between the detector and the flow transmitter is long, and dedicated signal cable length is long.	Perform grounding according to the figure below.
Insufficient sensitivity Signal power (AGC_U, AGC_D) 45% or less	Change the detector. FSSA→FSSC FSSC→FSSE

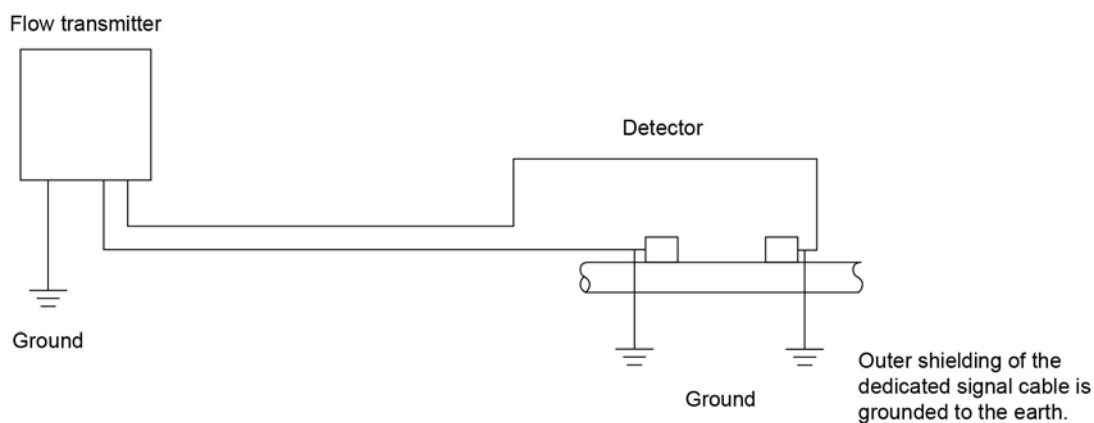

6.5.6.3. Safety Checks after repairment

When a hardware malfunction is diagnosed in accordance with the measures as shown in Section 6.5.1 to 6.5.6 above and repairs are performed by Fuji, Fuji shall conduct a test equivalent to the product shipment test to confirm its safety.

6.5.7. Remedying a hardware fault

If the hardware is found faulty as a result of Section 6.5.1 to Section 6.5.6 above, provide specific details to Fuji Electric.

7. Appendix

7.1. Specifications

SPECIFICATIONS

Operational specifications

System configuration:

Single-path system of a flow transmitter (Model FSV) and a detector (Model FSS)

Applicable detector:

FSSA (2MHz), FSSC (1MHz)

Applicable fluid:

Homogenous liquid where the ultrasonic signal can be transmitted
Bubble quantity: 0 to 12vol% (for pipe size 50A, water, velocity 1m/s)
Fluid turbidity: 10000mg/L max.
Type of flow: Fully-developed turbulent or laminar flow in a full-filled pipe

Flow velocity range:

0 to $\pm 0.3 \dots \pm 32$ m/s

Power supply: 100 to 240V AC $\pm 10\%$ /-15%, 50/60Hz;
or 20 to 30V DC

Signal cable (between detector and converter):

Coaxial cable (150m max.) applicable up to 300m depending on the condition.
Heat resistance: 80°C

Installation environment:

- Non-explosive area without direct sunlight, vibration, and corrosive gas and heat radiation
- When the 11th digit of the flow transmitter code symbol is "Y":
Pollution degree 2 (Indoor use unaffected by dust, dirt, or moisture)
- When the 11th digit of the flow transmitter code symbol is "A":
Pollution degree 3 (Outdoor use unaffected by precipitation)

Ambient temperature:

Flow transmitter: -20 to +55°C
Detector: -20 to +60°C

Ambient humidity:

Flow transmitter: 95%RH max.
Detector: 90%RH max.

Grounding: Class D (100 Ω)

Arrester: Provided as standard at power supply

Applicable piping and fluid temperature:

<table 1>

Detector	Pipe size (Inner diameter) ϕ mm	Applicable pipe material (Note1)	How to mount	Fluid temperature range (°C) (Note2, 3)
FSSA	25 to 50	Plastic (PVC, Others)	V method	-20 to +100
	50 to 225	Plastic (PVC, Others)		
FSSC	50 to 600	Metal pipe (Stainless steel, Carbon steel, Copper, Aluminum, Others)	V method	-40 to +120
	200 to 1200		Z method	

Note1) Please select the FSSC type if following condition.

- When pipe material is PP or PVDF, limit of pipe wall thickness is 15mm or more for PP, 9mm or more for PVDF
- When pipe material is hard to penetrate the ultrasonic wave such as cast-iron pipe, lining pipe and old carbon steel pipe etc.,
- Lining material is tar epoxy, mortar and rubber etc.,
- In case lining is removed from the pipe, Measurement can not be conducted

Note2) When silicon grease is used as acoustic coupler, Fluid temperature limit is 0 to 60°C no matter what detector is selected.

Note3) Heat-resistant shock temperature: for 30 minutes at 150°C

Note4) Please refer to the item 9 for the specification of the special detector (for small diameter pipe, large diameter pipe and high temperature)

Note5) For pipes with a diameter of 300 mm or larger, we recommend to use FSSE and mount it by Z method.

Performance specifications

Rated accuracy:

<table 2>

Detector Type	Pipe size (diameter) mm	Flow velocity (m/s)	Accuracy	
			Plastic pipe	Metal pipe
FSSA	$\phi 25$ to $\phi 50$	2 to 32	$\pm 2.0\%$ of rate	—
		0 to 2	± 0.04 m/s	—
	$\phi 50$ to $\phi 225$	2 to 32	$\pm 1.0\%$ of rate	$\pm 2.0\%$ of rate
		0 to 2	± 0.02 m/s	± 0.04 m/s
FSSC	$\phi 50$ to $\phi 200$	2 to 32	$\pm 1.5\%$ of rate	
		0 to 2	± 0.03 m/s	
	$\phi 200$ to $\phi 1200$	2 to 32	$\pm 1.0\%$ of rate	
		0 to 2	± 0.02 m/s	

Note1) Please refer to the item 9 for the specification of the special detector (for small diameter pipe, large diameter pipe and high temperature)

Response time: 1s (standard mode)

0.2s as selected (quick response mode)

Power consumption:

15VA max. (AC power supply)
6W max. (DC power supply)

Functional specifications

- Analog signal:** 4 to 20mA DC (1 point)
Load resistance: 600Ω max.
- Digital output:** Forward total, reverse total, alarm, acting range, flow switch, total switch assignable arbitrarily
Transistor contact (isolated, open collector)
• Outputs: 2 points
• Normal: ON/OFF selectable
• Contact capacity: 30V DC, 50mA
• Output frequency: 1000P/s max. (pulse width: 5, 10, 50, 100, 200, 500, 1000ms)
- Serial communication (option):**
RS-485 (MODBUS), isolated, arrester incorporated
Connectable quantity: 31 units
Baud rate: 9600, 19200, 38400bps
Parity: None/Odd/Even selectable
Stop bits: 1 or 2 bits selectable
Cable length: 1km max.
Data: Flow velocity, flow rate, forward total, reverse total, status, etc.
- Display device:** 2-color LED (Normal: green, Extraordinary: red)
LCD with 2 lines of 16 characters and back light
- Indication language:**
Japanese (Katakana)/English/French/German/Spanish (changeable)
- Flow velocity/flow rate indication:**
Instantaneous flow velocity, instantaneous flow rate indication (minus indication for reverse flow)
Numerals: 8 digits (decimal point is counted as 1 digit)
Unit: Metric/Inch system selectable

	Metric system	Inch system
Velocity	m/s	ft/s
Flow rate	L/s, L/min, L/h, L/d, kL/d, ML/d, m³/s, m³/min, m³/d, km³/d, Mm³/d, BBL/s, BBL/min, BBL/h, BBL/d, kBBL/d, MBBL/d	gal/s, gal/min, gal/h, gal/d, kgal/d, Mgal/d, ft³/s, ft³/min, ft³/d, Kft³/d, Mft³/d, BBL/s, BBL/min, BBL/h, BBL/d, kBBL/d, MBBL/d

Note: The "gal" means USgal.

- Total indication:** Forward or reverse total value indication (negative indication for reverse direction)
Numerals: 8 digits (decimal point is counted as 1 digit)
Unit: Metric/Inch system selectable

	Metric system	Inch system
Total	mL, L, m³, km³, Mm³, mBBL, BBL, KBBL	gal, kgal, ft³, kft³, Mft³, mBBL, BBL, kBBL, ACRE-ft

- Configuration:** Fully configurable from the 4-key pad (ESC, △, ▽, ENT)
- Zero adjustment:** Set zero/Clear available
- Damping:** 0 to 100s (every 0.1s) for analog output and flow velocity/flow rate indication
- Low flow rate cutoff:** 0 to 5m/s in terms of flow velocity
- Alarm:** Digital output available for Hardware fault or Process fault
- Burnout:** Analog output: Hold/Overscale/Under-scale/Zero selectable
Flow rate total: Hold/Count selectable
Burnout timer: 10 to 900s (every 1s)
- Bi-directional range:** Forward and reverse ranges configurable independently.
Hysteresis: 0 to 10% of working range
Working range applicable to digital output
- Auto-2 range:** 2 forward ranges configurable independently
Hysteresis: 0 to 10% of working range
Working range applicable to digital output
- Flow switch:** Lower limit, upper limit configurable independently
Digital output available for status at actuated point
- Total switch:** Forward total switching point configurable
Digital output available when actuated
- External total preset:** Preset total settable upon contact input setting
- Backup of power failure:** backup by non-volatile memory

Physical specifications

- Type of enclosure:**
Flow transmitter: FSV...S: IP66
FSV...H: IP67 (With large LCD)
- Detector:**
FSSA, FSSC:
IP65 (When waterproof BNC connector is provided)
FSSA, FSSC:
IP65 (When water-proof type connector is fitting)
FSSC (waterproofing):
IP68 (submerged resistant structure for 5days)
- Mounting method:**
Flow transmitter: Mounted on wall or by 2B pipe
Detector: Clamped on pipe surface

Acoustic coupler:

Acoustic coupler is a filling between detector and pipe.

Type of acoustic coupler: <table 3>

Type	Silicone rubber (KE-348W)	Silicone grease (G40M)	Silicone-free grease (HIGH Z)	Grease for high temperature (KS62M)
Fluid temperature	-40 to +150°C	-30 to +150°C	0 to +60°C	-30 to +250°C
Teflon piping	×	○	○	○

In case of Teflon piping, use grease.

Material: Flow transmitter: Aluminum alloy
Detector: <table 4>

Detector Type	Sensor housing	Guide rail
FSSA	PBT	SUS304
FSSC	PBT	Aluminum alloy

* Please refer to the item 9 for the specification of the special detector (for small diameter pipe, large diameter pipe and high temperature)

Signal cable:

- Structure: Heat-resisting high-frequency coaxial cable
- Sheath: Flame-resisting PVC
- Outer diameter: $\phi 7.3\text{mm}$

Terminal treatment <table 5>

Cable type	FLYD
Applicable detector	FSSA, FSSC
Terminal of flow transmitter side	Rod terminal $\times 2$ Amplifier terminal (M3) $\times 1$
Terminal of detector side	BNC connector $\times 1$ Amplifier terminal (M4) $\times 1$

* Please refer to the item 9 for the specification of the special detector (for small diameter pipe, large diameter pipe and high temperature)

Dimension, Mass: <table 6>

	Type	Dimensions	Mass.(kg)
Flow transmitter	FSV...S (IP66)	H170 \times W142 \times D70mm	1.5
	FSV...H (IP67)	H277 \times W244 \times D96mm	4.5
Detector	FSSA	H50 \times W348 \times D34mm	0.4
	FSSC	H88 \times W480 \times D53mm	1
Signal cable	FLYD	$\phi 7.3\text{mm}$	90g/m

* Please refer to the item 9 for the specification of the special detector (for small diameter pipe, large diameter pipe and high temperature)

External terminal of flow transmitter:
plug terminal

EU Directive Compliance

CE

LVD (2014/35/EU)

EN 61010-1:2010+A1:2019

EMC (2014/30/EU)

EN 55011:2016+A1:2017+A11:2020+A2:2021, Group 1, Class A

EN IEC 61000-3-2:2019+A1:2021

EN 61000-3-3:2013+A1:2019+A2:2021

EN IEC 61326-1:2021, Table2

EN IEC 61326-2-3:2021

RoHS (2011/65/EU+(EU)2015/863)

EN IEC 63000:2018

UK
CA**LVD (S.I.2016 No.1101)**

EN 61010-1:2010+A1:2019

EMC (S.I.2016 No.1091)

EN 55011:2016+A11:2020+A2:2021, Group 1, Class A

EN IEC 61000-3-2:2019+A1:2021

EN 61000-3-3:2013+A1:2019+A2:2021

EN IEC 61326-1:2021

EN IEC 61326-2-3:2021

RoHS (S.I.2012 No.3032)

EN IEC 63000:2018

■ PC Loader software

You can download the software from the Fuji Electric website.
Loader software is not covered by quality assurance.

- PC/AT compatible computer
- Main functions: Software for displaying and changing various product parameters and collecting measurement data
Instantaneous flow rate, instantaneous flow velocity, total values, and error information, etc. can be imported.
- OS (verified): Windows 10 (32-bit, 64-bit), Windows 11 (64-bit)
- Memory requirement: 125MB or more
- Hard disk capacity: Minimum available capacity of 52MB or more

Note: To use serial communication, the 6th digit of the product code symbol must be selected as "D". (optional)

Note: Communication converter

To connect the flowmeter to the PC with USB interface, a USB RS-485 converter is required.

<Recommendation>


[USB - RS-485 converter]

Model number: SI-35USB-2 LINEEYE CO., LTD.


7.2. OUTLINE DIAGRAM

Flow transmitter (Type: FSV□□Y□2-S)

Unit : mm

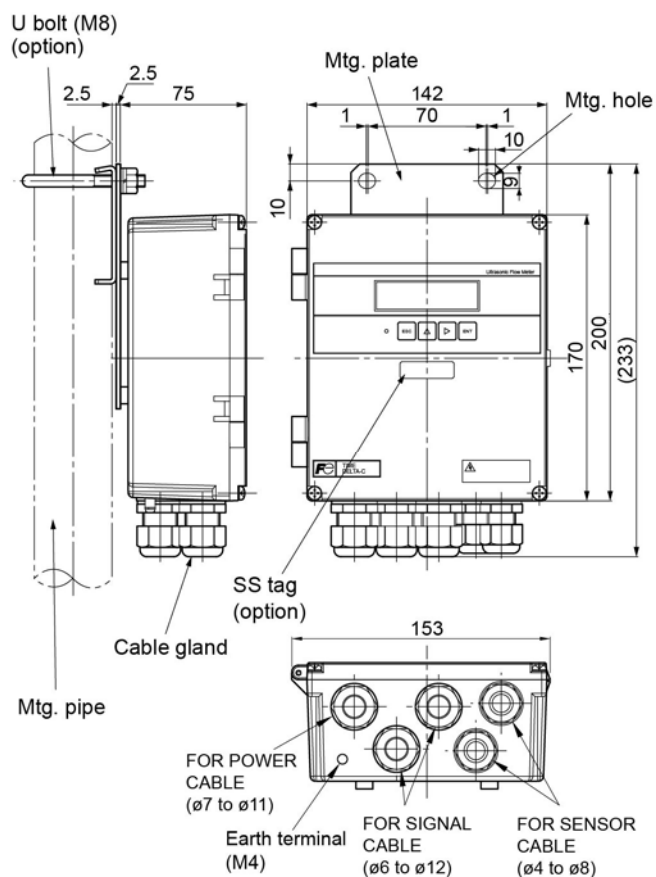

Flow transmitter (Type: FSV□□Y□2-H)

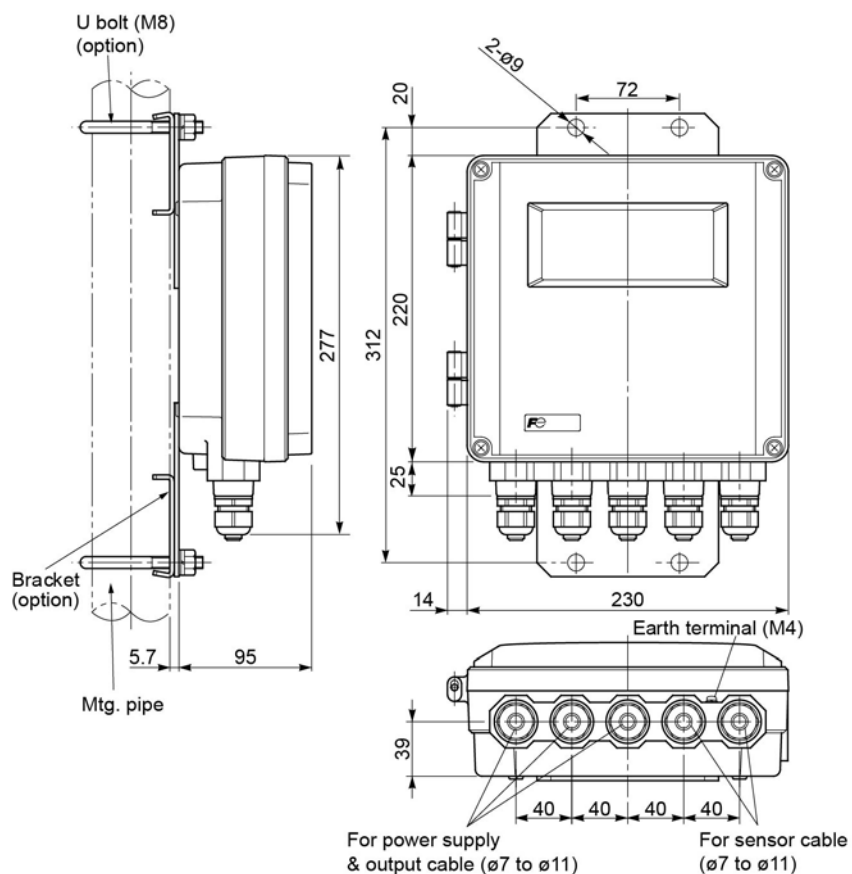

7.3. ORDERING INFORMATION

1. Type of detector
2. Type of flow transmitter
3. Type of signal cable
4. Tag No. (When tag plate is specified)
5. Parameter setting list (When parameter setting is specified)

Company name: _____ Branch: _____
 Name of the contact person: _____ TEL: _____
 Measuring fluid: _____

Parameter setting list

Setting items		Initial value	Setting value	Setting items		Initial value	Setting value
ID No		0000		Output condition		Total mode	Stop
Language		English				Pulse value	0m ³
Measurement condition	System unit	Metric				Total preset	0m ³
	Flow unit	m ³ /h				Pulse width	50.0msec
	Total unit	m ³				Burnout (total)	Hold
	Outer diameter	60.00mm				Burnout timer	10sec
	Pipe material	PVC				DO1 Output type (Note1)	Not used
	Wall thickness	4.00mm				DO1 Output operation	Active ON
	Lining material	No lining				DO2 Output type	Not used
	Lining thickness	-				DO2 Output operation	Active ON
	Kind of fluid	Water				Operation mode	Standard
	Viscosity	1.0038×10 ⁻⁶ m ² /s				Communication mode	RS-485
Output condition	Sensor mount	V method		Communication	Total output	Baud rate	9600bps
	Sensor type	FSSA				Parity	Odd
	Damping	5.0sec				Stop bit	1 bit
	Cut off	0.150m ³ /h				Station No.	1
	Display	Content of 1st line	Velocity (m/s)				
		Decimal point position of 1st line	****.***				
		Content of 2nd line	Flow Rate (m ³ /h)				
		Decimal point position of 2nd line	****.***				
	Analog output	KIND	FLOW RATE				
		Range type	SINGLE				
		Full scale 1	15.000m ³ /h				
		Full scale 2	0.000m ³ /h				
		Hysteresis	10.00%				
		Burnout (current)	HOLD				
		Burnout timer	10sec				
		Output limit low	-20%				
		Output limit high	120%				
		Rate limit	0.000m ³ /h				
		Rate limit timer	0sec				

Note 1) When total pulse output has been selected for DO1 and/or DO2 specify total pulse value and total pulse width so that conditions 1 and 2 shown below are satisfied.

Condition 1:

$$\frac{\text{Full scale} \times 1 \text{ [m}^3/\text{s]}}{\text{Pulse value [m}^3\text{]}} \leq 100[\text{Hz}]$$

Condition 2:

$$\frac{\text{Full scale} \times 1 \text{ [m}^3/\text{s]}}{\text{Pulse value [m}^3\text{]}} \leq \frac{1000}{2 \times \text{Pulse width [ms]}}$$

*1) The range of FULL SCALE 1 or FULL SCALE 2, whichever is larger, is the object in case of automatic 2-range, forward and reverse range, forward and reverse automatic 2-range.

7.4. Piping data

Stainless steel pipe for pipe arrangement (JIS G3459-2012)

Nominal diameter		Outer diameter mm	Thickness						
			Schedule 5S	Schedule 10S	Schedule 20S	Schedule 40	Schedule 80	Schedule 120	Schedule 160
A	B		Thickness mm	Thickness mm	Thickness mm	Thickness mm	Thickness mm	Thickness mm	Thickness mm
15	1/2	21.7	1.65	2.1	2.5	2.8	3.7	-	4.7
20	3/4	27.2	1.65	2.1	2.5	2.9	3.9	-	5.5
25	1	34.0	1.65	2.8	3.0	3.4	4.5	-	6.4
32	1 1/4	42.7	1.65	2.8	3.0	3.6	4.9	-	6.4
40	1 1/2	48.6	1.65	2.8	3.0	3.7	5.1	-	7.1
50	2	60.5	1.65	2.8	3.5	3.9	5.5	-	8.7
65	2 1/2	76.3	2.1	3.0	3.5	5.2	7.0	-	9.5
80	3	89.1	2.1	3.0	4.0	5.5	7.6	-	11.1
90	3 1/2	101.6	2.1	3.0	4.0	5.7	8.1	-	12.7
100	4	114.3	2.1	3.0	4.0	6.0	8.6	11.1	13.5
125	5	139.8	2.8	3.4	5.0	6.6	9.5	12.7	15.9
150	6	165.2	2.8	3.4	5.0	7.1	11.0	14.3	18.2
200	8	216.3	2.8	4.0	6.5	8.2	12.7	18.2	23.0
250	10	267.4	3.4	4.0	6.5	9.3	15.1	21.4	28.6
300	12	318.5	4.0	4.5	6.5	10.3	17.4	25.4	33.3
350	14	355.6	-	-	-	11.1	19.0	27.8	35.7
400	16	406.4	-	-	-	12.7	21.4	30.9	40.5
450	18	457.2	-	-	-	14.3	23.8	34.9	45.2
500	20	508.0	-	-	-	15.1	26.2	38.1	50.0
550	22	558.8	-	-	-	15.9	28.6	41.3	54.0
600	24	609.6	-	-	-	17.5	31.0	46.0	59.5
650	26	660.4	-	-	-	18.9	34.0	49.1	64.2

Polyethylene pipe for city water (JIS K6762-2004)

Nominal diameter (mm)	Outer diameter (mm)	1st type (Soft pipe)		2nd type (Hard pipe)	
		Thickness (mm)	Weight (kg/m)	Thickness (mm)	Weight (kg/m)
13	21.5	3.5	0.184	2.5	0.143
20	27.0	4.0	0.269	3.0	0.217
25	34.0	5.0	0.423	3.5	0.322
30	42.0	5.6	0.595	4.0	0.458
40	48.0	6.5	0.788	4.5	0.590
50	60.0	8.0	1.216	5.0	0.829

Galvanized steel pipe for city water SGPW (JIS G3442-2010)

How to call pipe		Outer diameter (mm)	Thickness (mm)
(A)	(B)		
15	1/2	21.7	2.8
20	3/4	27.2	2.8
25	1	34.0	3.2
32	1 1/4	42.7	3.5
40	1 1/2	48.6	3.5
50	2	60.5	3.8
65	2 1/2	76.3	4.2
80	3	89.1	4.2
90	3 1/2	101.6	4.2
100	4	114.3	4.5
125	5	139.8	4.5
150	6	165.2	5.0
200	8	216.3	5.8
250	10	267.4	6.6
300	12	318.5	6.9
350	14	355.6	7.9
400	16	406.4	7.9
450	18	457.2	7.9
500	20	508.0	7.9

Polyethylene pipe for general use (JIS K6761-2004)

Nominal diameter	Outer diameter (mm)	1st type (Soft pipe)	2nd type (Hard pipe)
		Thickness (mm)	Thickness (mm)
13	21.5	2.7	2.4
20	27.0	3.0	2.4
25	34.0	3.0	2.6
30	42.0	3.5	2.8
40	48.0	3.5	3.0
50	60.0	4.0	3.5
65	76.0	5.0	4.0
75	89.0	5.5	5.0
100	114	6.0	5.5
125	140	6.5	6.5
150	165	7.0	7.0
200	216	-	8.0
250	267	-	9.0
300	318	-	10.0

PVC pipe for city water (JIS K6742-2007)

VP: PVC pipe

HIVP: anti-shock PVC pipe etc..

Nominal diameter	Outer diameter	Pipe thickness
13	18.0	2.5
16	22.0	3.0
20	26.0	3.0
25	32.0	3.5
30	38.0	3.5
40	48.0	4.0
50	60.0	4.5
75	89.0	5.9
100	114.0	7.1
150	165.0	9.6

PVC pipe PVC-u (JIS K6741-2007)

Type Nominal (mm)	VP		VU	
	Outer diameter	Thickness	Outer diameter	Thickness
13	18	2.2	-	-
16	22	2.7	-	-
20	26	2.7	-	-
25	32	3.1	-	-
30	38	3.1	-	-
40	48	3.6	48	1.8
50	60	4.1	60	1.8
65	76	4.1	76	2.2
75	89	5.5	89	2.7
100	114	6.6	114	3.1
125	140	7.0	140	4.1
150	165	8.9	165	5.1
200	216	10.3	216	6.5
250	267	12.7	267	7.8
300	318	15.1	318	9.2
350	-	-	370	10.5
400	-	-	420	11.8
450	-	-	470	13.2
500	-	-	520	14.6
600	-	-	630	17.8
700	-	-	732	21.0

IWVP : PVC pipe (ISO 4422-2)

Nominal diameter of pipe	Outer diameter	Pipe thickness
ND32	32	1.6
ND40	40	1.9
ND50	50	2.4
ND63	63	3.0
ND75	75	3.6
ND90	90	4.3
ND110	110	4.2
ND125	125	4.8
ND140	140	5.4
ND160	160	6.2

Vertical type cast iron pipe (JIS G5521)

Nominal diameter D	Pipe thickness T		Actual outer diameter D1
	Normal pressure pipe	Low pressure pipe	
75	9.0	-	93.0
100	9.0	-	118.0
150	9.5	9.0	169.0
200	10.0	9.4	220.0
250	10.8	9.8	271.6
300	11.4	10.2	322.8
350	12.0	10.6	374.0
400	12.8	11.0	425.6
450	13.4	11.5	476.8
500	14.0	12.0	528.0
600	15.4	13.0	630.8
700	16.5	13.8	733.0
800	18.0	14.8	836.0
900	19.5	15.5	939.0
1000	22.0	-	1041.0
1100	23.5	-	1144.0
1200	25.0	-	1246.0
1350	27.5	-	1400.0
1500	30.0	-	1554.0

Carbon steel pipe for pipe arrangement SGP (JIS G3452-2010)

How to call pipe		Outer diameter (mm)	Thickness (mm)
(A)	(B)		
15	1/2	21.7	2.8
20	3/4	27.2	2.8
25	1	34.0	3.2
32	1 1/4	42.7	3.5
40	1 1/2	48.6	3.5
50	2	60.5	3.8
65	2 1/2	76.3	4.2
80	3	89.1	4.2
90	3 1/2	101.6	4.2
100	4	114.3	4.5
125	5	139.8	4.5
150	6	165.2	5.0
175	7	190.7	5.3
200	8	216.3	5.8
225	9	241.8	6.2
250	10	267.4	6.6
300	12	318.5	6.9
350	14	355.6	7.9
400	16	406.4	7.9
450	18	457.2	7.9
500	20	508.0	7.9

Coated steel pipe for city water STW (JIS G3443-1 2007)

Nominal diameter (A)	Outer diameter (mm)	Symbol for type			
		STW 290	STW 370	STW 400	
				Nominal thickness	
				A	B
		Thickness (mm)	Thickness (mm)	Thickness (mm)	Thickness (mm)
80	89.1	4.2	4.5	-	-
100	114.3	4.5	4.9	-	-
125	139.8	4.5	5.1	-	-
150	165.2	5.0	5.5	-	-
200	216.3	5.8	6.4	-	-
250	267.4	6.6	6.4	-	-
300	318.5	6.9	6.4	-	-
350	355.6	-	-	6.0	-
400	406.4	-	-	6.0	-
450	457.2	-	-	6.0	-
500	508.0	-	-	6.0	-
600	609.6	-	-	6.0	-
700	711.2	-	-	7.0	6.0
800	812.8	-	-	8.0	7.0
900	914.4	-	-	8.0	7.0
1000	1016.0	-	-	9.0	8.0
1100	1117.6	-	-	10.0	8.0
1200	1219.2	-	-	11.0	9.0
1350	1371.6	-	-	12.0	10.0
1500	1524.0	-	-	14.0	11.0
1600	1625.6	-	-	15.0	12.0
1650	1676.4	-	-	15.0	12.0
1800	1828.8	-	-	16.0	13.0
1900	1930.4	-	-	17.0	14.0
2000	2032.0	-	-	18.0	15.0
2100	2133.6	-	-	19.0	16.0
2200	2235.2	-	-	20.0	16.0
2300	2336.8	-	-	21.0	17.0
2400	2438.4	-	-	22.0	18.0
2500	2540.0	-	-	23.0	18.0
2600	2641.6	-	-	24.0	19.0
2700	2743.2	-	-	25.0	20.0
2800	2844.8	-	-	26.0	21.0
2900	2946.4	-	-	27.0	21.0
3000	3048.0	-	-	29.0	22.0

Centrifugal nodular graphite cast iron pipe for city water
(A type) (JWWA G-105 1971)

Nominal diameter	Pipe thickness			Actual outer diameter
D	T			D ₁
	1st type pipe	2nd type pipe	3rd type pipe	
75	7.5	-	6.0	93.0
100	7.5	-	6.0	118.0
150	7.5	-	6.0	169.0
200	7.5	-	6.0	220.0
250	7.5	-	6.0	271.6
300	7.5	-	6.5	332.8
350	7.5	-	6.5	374.0
400	8.5	7.5	7.0	425.6
450	9.0	8.0	7.5	476.8
500	9.5	8.5	7.0	528.0

Centrifugal nodular graphite cast iron pipe for city water
(K type) (JWWA G-105 1971)

Nominal diameter	Pipe thickness			Actual outer diameter
D	1st type pipe	2nd type pipe	3rd type pipe	D ₁
	1st type pipe	2nd type pipe	3rd type pipe	
400	8.5	7.5	7.0	425.6
450	9.0	8.0	7.5	476.8
500	9.5	8.5	8.0	528.0
600	11.0	10.0	9.0	630.8
700	12.0	11.0	10.0	733.0
800	13.5	12.0	11.0	836.0
900	15.0	13.0	12.0	939.0
1000	16.5	14.5	13.0	1041.0
1100	18.0	15.5	14.0	1144.0
1200	19.5	17.0	15.0	1246.0
1350	21.5	18.5	16.5	1400.0
1500	23.5	20.5	18.0	1554.0

Arc welded large-diameter stainless steel pipe for pipe arrangement SUS (JIS G3468-2011)

Nominal diameter		Outer diameter (mm)	Nominal thickness			
			Schedule 5S	Schedule 10S	Schedule 20S	Schedule 40S
A	B		Thickness mm	Thickness mm	Thickness mm	Thickness mm
150	6	165.2	2.8	3.4	5.0	7.1
200	8	216.3	2.8	4.0	6.5	8.2
250	10	267.4	3.4	4.0	6.5	9.3
300	12	318.5	4.0	4.5	6.5	10.3
350	14	355.6	4.0	5.0	8.0	11.1
400	16	406.4	4.5	5.0	8.0	12.7
450	18	457.2	4.5	5.0	8.0	14.3
500	20	508.0	5.0	5.5	9.5	15.1
550	22	558.8	5.0	5.5	9.5	15.9
600	24	609.6	5.5	6.5	9.5	17.5
650	26	660.4	5.5	8.0	12.7	-
700	28	711.2	5.5	8.0	12.7	-
750	30	762.0	6.5	8.0	12.7	-
800	32	812.8	-	8.0	12.7	-
850	34	863.6	-	8.0	12.7	-
900	36	914.4	-	8.0	12.7	-
1000	40	1016.0	-	9.5	14.3	-

Ductile iron specials (JIS G5527-1998)

Nominal diameter (mm)	Pipe thickness (mm)
75	8.5
100	8.5
150	9.0
200	11.0
250	12.0
300	12.5
350	13.0
400	14.0
450	14.5
500	15.0
600	16.0
700	17.0
800	18.0
900	19.0
1000	20.0
1100	21.0
1200	22.0
1350	24.0
1500	26.0
1600	27.5
1650	28.0
1800	30.0
2000	32.0
2100	33.0
2200	34.0
2400	36.0

Dimensions of centrifugal sand mold cast iron pipe (JIS G5522). For reference, following items are discontinued.

Nominal diameter D	Pipe thickness (T)			Actual outer diameter D ₁
	High pressure pipe	Normal pressure pipe	Low pressure pipe	
75	9.0	7.5	-	93.0
100	9.0	7.5	-	118.0
125	9.0	7.8	-	143.0
150	9.5	8.0	7.5	169.0
200	10.0	8.8	8.0	220.0
250	10.8	9.5	8.4	271.6
300	11.4	10.0	9.0	322.8
350	12.0	10.8	9.4	374.0
400	12.8	11.5	10.0	425.6
450	13.4	12.0	10.4	476.8
500	14.0	12.8	11.0	528.0
600	-	14.2	11.8	630.8
700	-	15.5	12.8	733.0
800	-	16.8	13.8	836.0
900	-	18.2	14.8	939.0

Dimensions of centrifugal sand mold cast iron pipe (JIS G5523 1977). For reference, following items are discontinued.

Nominal diameter (mm)	Pipe thickness (T)		Actual outer diameter D ₁
	High pressure pipe	Normal pressure pipe	
75	9.0	7.5	93.0
100	9.0	7.5	118.0
125	9.0	7.8	143.0
150	9.5	8.0	169.0
200	10.0	8.8	220.0
250	10.8	9.5	271.6
300	11.4	10.0	322.8

Cast iron pipe for waste water FC150 (JIS G5525:2000)

Nominal diameter	Mechanical type								Insertion type	
	1st type pipe				2nd type pipe				RJ pipe	
	Straight pipe		Deformed pipe		Straight pipe		Deformed pipe		Straight/deformed pipe	
	Outer diameter	Pipe thickness	Outer diameter	Pipe thickness	Outer diameter	Pipe thickness	Outer diameter	Pipe thickness	Outer diameter	Pipe thickness
50	58	4	60	5	—	—	58	4	—	—
75	83	4	85	5	83	4	83	4	89	4.5
100	108	4	110	5	108	4	108	4	114	4.5
125	134	4.5	136	5.5	134	4.5	134	4.5	140	4.5
150	159	4.5	161	5.5	—	—	—	—	—	—
200	211	5.5	213	6.5	—	—	—	—	—	—

Arc welded carbon steel pipe STPY 400 (JIS G3457-2012)

Unit: kg/m

Nominal diameter		Thickness (mm)													
(A)	(B)		6.0	6.4	7.1	7.9	8.7	9.5	10.3	11.1	11.9	12.7	13.1	15.1	15.9
350	14	355.6	51.7	55.1	61.0	67.7									
400	16	406.4	59.2	63.1	69.9	77.6									
450	18	457.2	66.8	71.1	78.8	87.5									
500	20	508.0	74.3	79.2	87.7	97.4	107	117							
550	22	558.8	81.8	87.2	96.6	107	118	129	139	150	160	171			
600	24	609.6	89.3	95.2	105	117	129	141	152	164	175	187			
650	26	660.4	96.8	103	114	127	140	152	165	178	190	203			
700	28	711.2	104	111	123	137	151	164	178	192	205	219			
750	30	762.0		119	132	147	162	176	191	206	220	235			
800	32	812.8		127	141	157	173	188	204	219	235	251	258	297	312
850	34	863.6				167	183	200	217	233	250	266	275	316	332
900	36	914.4				177	194	212	230	247	265	282	291	335	352
1000	40	1016.0				196	216	236	255	275	295	314	324	373	392
1100	44	1117.6						260	281	303	324	346	357	411	432
1200	48	1219.2						283	307	331	354	378	390	448	472
1350	54	1371.6									399	426	439	505	532
1500	60	1524.0									444	473	488	562	591
1600	64	1625.6											521	600	631
1800	72	1828.8											587	675	711
2000	80	2032.0												751	791

Stainless steel sanitary pipe SUS (JIS G3447-2009)

	Outer diameter (mm)	Thickness (mm)	Internal diameter (mm)
	25.4	1.2	23.0
	31.8	1.2	29.4
	38.1	1.2	35.7
	50.8	1.5	47.8
	63.5	2.0	59.5
	76.3	2.0	72.3
	89.1	2.0	85.1
	101.6	2.0	97.6
	114.3	3.0	108.3
	139.8	3.0	133.8
	165.2	3.0	159.2

PVDF-HP

	SDR33 S16 PN10	SDR21 S10 PN16	SDR17 S8 PN20
Outer diameter (mm)	Thickness (mm)	Thickness (mm)	Thickness (mm)
16		1.5	1.5
20		1.9	1.9
25		1.9	1.9
32		2.4	2.4
40		2.4	2.4
50		3.0	3.0
63	2.5	3.0	
75	2.5	3.6	
90	2.8	4.3	
110	3.4	5.3	
125	3.9	6.0	
140	4.3	6.7	
160	4.9	7.7	
180	5.5	8.6	
200	6.2	9.6	
225	6.9	10.8	
250	7.7	11.9	
280	8.6	13.4	
315	9.7	15.0	
355	10.8		
400	12.2		
450	13.7		

Heat-resistant hard vinyl chloride pipe PVC-C
(JIS K6776:2007)

Nominal diameter	Outer diameter (mm)	Thickness (mm)	Weight (kg/m)
13	18.0	2.5	0.180
16	22.0	3.0	0.265
20	26.0	3.0	0.321
25	32.0	3.5	0.464
30	38.0	3.5	0.561
40	48.0	4.0	0.818
50	60.0	4.5	1.161

Polyethylene pipe for city water service

(Japan Polyethylene Pipes Association for Water Service standard PTC K 03:2006)

Nominal diameter	Outer diameter (mm)	Thickness (mm)	Inner diameter (mm)	Weight (kg/m)
50	63.0	5.8	50.7	1.074
75	90.0	8.2	72.6	2.174
100	125.0	11.4	100.8	4.196
150	180.0	16.4	145.3	8.671
200	250.0	22.7	201.9	16.688

(a) Velocity of sound subject to change f temperature of water (0 to 100°C)

T °C	V m/s	T °C	V m/s	T °C	V m/s	T °C	V m/s
0	1402.74						
1	1407.71	26	1499.64	51	1543.93	76	1555.40
2	1412.57	27	1502.20	52	1544.95	77	1555.31
3	1417.32	28	1504.68	53	1545.92	78	1555.18
4	1421.98	29	1507.10	54	1546.83	79	1555.02
5	1426.50	30	1509.44	55	1547.70	80	1554.81
6	1430.92	31	1511.71	56	1548.51	81	1554.57
7	1435.24	32	1513.91	57	1549.28	82	1554.30
8	1439.46	33	1516.05	58	1550.00	83	1553.98
9	1443.58	34	1518.12	59	1550.68	84	1553.63
10	1447.59	35	1520.12	60	1551.30	85	1553.25
11	1451.51	36	1522.06	61	1551.88	86	1552.82
12	1455.34	37	1523.93	62	1552.42	87	1552.37
13	1459.07	38	1525.74	63	1552.91	88	1551.88
14	1462.70	39	1527.49	64	1553.35	89	1551.35
15	1466.25	40	1529.18	65	1553.76	90	1550.79
16	1469.70	41	1530.80	66	1554.11	91	1550.20
17	1473.07	42	1532.37	67	1554.43	92	1549.58
18	1476.35	43	1533.88	68	1554.70	93	1548.92
19	1479.55	44	1535.33	69	1554.93	94	1548.23
20	1482.66	45	1536.72	70	1555.12	95	1547.50
21	1485.69	46	1538.06	71	1555.27	96	1546.75
22	1488.63	47	1539.34	72	1555.37	97	1545.96
23	1491.50	48	1540.57	73	1555.44	98	1545.14
24	1494.29	49	1541.74	74	1555.47	99	1544.29
25	1497.00	50	1542.87	75	1555.45	100	1543.41

Note) T: Temperature, V: Velocity

(b) Sound velocity and density of various liquids

Name of liquid	T °C	ρ g/cm ³	V m/s
Acetone	20	0.7905	1190
Aniline	20	1.0216	1659
Alcohol	20	0.7893	1168
Ether	20	0.7135	1006
Ethylene glycol	20	1.1131	1666
n-octane	20	0.7021	1192
o-xylol	20	0.871	1360
Chloroform	20	1.4870	1001
Chlorobenzene	20	1.1042	1289
Glycerin	20	1.2613	1923
Acetic acid	20	1.0495	1159
Methyl acetate	20	0.928	1181
Ethyl acetate	20	0.900	1164
Cyclohexane	20	0.779	1284
Dioxane	20	1.033	1389
Heavy water	20	1.1053	1388
Carbon tetrachloride	20	1.5942	938
Mercury	20	13.5955	1451
Nitrobenzene	20	1.207	1473
Carbon bisulfide	20	1.2634	1158
Chloroform	20	2.8904	931
n-propyl alcohol	20	0.8045	1225
n-pentane	20	0.6260	1032
n-hexane	20	0.654	1083
Light oil	25	0.81	1324
Transformer oil	32.5	0.859	1425
Spindle oil	32	0.905	1342
Petroleum	34	0.825	1295
Gasoline	34	0.803	1250
Water	13.5	1.	1460
Sea water (salinity: 3.5%)	16	1.	1510

Note) T: Temperature, ρ : Density, V: Velocity

(c) Sound velocity of pipe material

Material	V m/s
Steel	3000
Ductile cast iron	3000
Cast iron	2604
Stainless steel	3141
Copper	2260
Lead	2170
Aluminium	3080
Brass	2050
PVC	2307
Acrylic	2644
FRP	2505
Mortar	3000
Tar epoxy	2505
Polyethylene	1900
Teflon	1240
Rubber	1510
Pyrex glass	3280

Note) V: Velocity

(d) Kinematic viscosity coefficient of various liquids

Name of liquid	T °C	ρ g/cm ³	V m/s	ν ($\times 10^{-6}$ m ² /s)
Acetone	20	0.7905	1190	0.407
Aniline	20	1.0216	1659	1.762
Ether	20	0.7135	1006	0.336
Ethylene glycol	20	1.1131	1666	21.112
Chloroform	20	1.4870	1001	0.383
Glycerin	20	1.2613	1923	11.885
Acetic acid	20	1.0495	1159	1.162
Methyl acetate	20	0.928	1181	0.411
Ethyl acetate	20	0.900	1164	0.499
Heavy water	20	1.1053	1388	1.129
Carbon tetrachloride	20	1.5942	938	0.608
Mercury	20	13.5955	1451	0.114
Nitrobenzene	20	1.207	1473	1.665
Carbon bisulfide	20	1.2634	1158	0.290
n-pentane	20	0.6260	1032	0.366
n-hexane	20	0.654	1083	0.489
Spindle oil	32	0.905	1324	15.7
Gasoline	34	0.803	1250	0.4 to 0.5
Water	13.5	1.	1460	1.004 (20°C)

Note) T: Temperature, ρ : Density, V: Velocity, ν : Kinematic viscosity coefficient



Gate City Ohsaki, East Tower, 11-2, Osaki 1-chome, Shinagawa-ku, Tokyo 141-0032, Japan
Phone: +81-3-5435-7111
www.fujielectric.com
www.fujielectric.com/products/instruments/
